

PACSystems™ Rxi Industrial Display

USER MANUAL



Contents

List of Figures	i
Section 1: Introduction	1
1.1 An Introduction to PACSystems RXi – Industrial Displays.....	1
1.2 Revisions in This Manual.....	1
1.2.1 Advantages to PACSystems RXi - Industrial Displays.....	2
Section 2: PACSystems RXi - Industrial Monitor Overview	4
2.1 Primary Technical Features	4
2.2 Display Architectural Options	4
2.3 Backing Module and Screen Compatibility	5
2.4 Configuration and Setup RXi Industrial Monitor	6
2.4.1 On-Screen Display (OSD)	6
2.5 OSD Controls.....	7
2.5.1 OSD Keypad	7
2.5.2 Virtual OSD Keypad	7
2.5.3 Main Menu	8
Section 3: PACSystems RXi – Panel PC Overview	13
3.1 Primary Technical Features (Base Model)	13
3.2 Primary Technical Features (with AMD Ryzen)	14
3.3 Display Architectural Options	15
3.4 Drivers Installation.....	16
3.4.1 Express Installation.....	16
3.4.2 Custom Installation.....	17
3.5 Configuration and Setup with RXi – Panel PC.....	19
3.5.1 Set Brightness in Panel PC.....	19
3.5.2 Adjust Screen Sensitivity in Panel PC.....	19
3.6 Accessing the BIOS (Panel PC)	20
3.6.1 AMI BIOS Setup Utility (Panel PC)	21
3.6.2 Accessing the BIOS	21
3.6.4 Main Menu	22
3.6.6 Advanced.....	23
3.6.7 ACPI Settings.....	24

- 3.6.8 Trusted Computing 25
- 3.6.9 Wakeup Configuration 26
- 3.6.10 CPU Configuration 27
- 3.6.11 IDE Configuration 28
- 3.6.12 USB Configuration 29
- 3.6.13 NCT61120 Super IO Configuration 30
- 3.6.14 NCT 6112D HW Monitor 30
- 3.6.15 NCT 6112D Super IO Features 31
- 3.6.16 Network Stack Configuration 32
- 3.6.17 Chipset..... 33
- 3.6.18 Boot Configuration 35
- 3.6.19 Security 37
- 3.6.20 Save & Exit 39
- 3.7 Accessing the BIOS (Panel PC with AMD Ryzen) 40
 - 3.7.1 Main 40
 - 3.7.2 AMD Chipset Settings 41
 - 3.7.3 Trusted Computing 42
 - 3.7.4 PCI-E Port Configuration 43
 - 3.7.5 Advanced 44
 - 3.7.6 ACPI Configuration 45
 - 3.7.7 NCT611D Super IO Configuration 46
 - 3.7.8 Serial Port Console Redirection 47
 - 3.7.9 Serial Port Console Redirection 48
 - 3.7.10 CPU Configuration 50
 - 3.7.11 USB Configuration 51
 - 3.7.12 CSM Configuration 52
 - 3.7.13 Network Stack Configuration 53
 - 3.7.14 Security 54
 - 3.7.15 Secure Boot menu 55
 - 3.7.16 Vendor Keys 56
 - 3.7.17 Secure Boot Variables 57
 - 3.7.18 Boot 58
 - 3.7.19 Save & Exit 59
 - 3.7.20 Updating the BIOS 59

Section 4:	PACSystems RXi - Web Panel Overview	60
4.1	Primary Technical Features	60
4.2	Display Architecture Options	60
4.3	Configuration and Setup of RXi - Web Panel	61
4.3.1	Homepage Setup	61
4.3.2	System Setup	62
4.3.3	Configuration and Setup	68
4.3.4	Adjusting Screen Sensitivity	70
4.3.5	Adjusting Screen Brightness	76
4.3.6	Energy Saving Mode	78
4.3.7	User Password Settings	79
4.3.8	Changing the Password for the Privileged Wpadmin	82
4.3.9	Network Setup	83
4.3.11	Date and Time Settings	86
4.3.12	Display Orientation	88
4.4	Firewall Support	90
4.4.1	Firewall Rules	93
4.4.2	Saving Firewall Rules	95
4.5	Secure Shell (SSH) Key Pair	96
4.5.1	Steps to view SSH Server Key	96
4.6	RXi Web Panel with PACEdge 2.1	96
4.6.1	Recommended Configuration	96
Section 5:	Specifications	97
5.1	RXi - Industrial Monitor	97
5.1.1	RXi - Industrial Monitor Motherboard Specifications	99
5.2	RXi - Panel PC	100
5.2.1	Panel PC (Base Model)	100
5.2.2	Panel PC Motherboard Specifications	102
5.2.4	Panel PC (with AMD Ryzen)	103
5.2.5	Panel PC Motherboard Specifications (Panel PC with AMD Ryzen)	105
5.4	RXi - Web HMI Panel	106
5.4.1	RXi - Web Panel HMI Motherboard Specifications	108
Section 6:	Hardware	109
6.1	RXi - Industrial Monitor	109

6.1.1	Jumpers and Connectors Location	109
6.1.2	I/O and Connectors	110
6.1.3	LED Indicators.....	115
6.2	RXi - Panel PC.....	116
6.2.1	Battery	116
6.2.2	I/O and Connectors	117
6.2.3	LED Indicators.....	122
6.3	RXi - Web Panel	123
6.3.1	Jumpers and Connectors Locations.....	123
6.3.2	USB Socket (USB_OTG1/USB1).....	126
6.3.3	LED Indicators Operation Status LEDs (Screen).....	128
6.3.4	Ethernet Port Operation LEDs	128
Section 7: Installation and Mounting Information.....		129
7.1	Panel Cutout Dimensions	129
7.1.1	Industrial Monitor	129
7.1.2	Panel PC Cutout Dimensions	130
7.1.3	Web Panel Cutout Dimensions.....	131
7.2	Panel Installation Steps.....	132
7.3	Mounting to Modular Display.....	134
7.4	VESA Mount.....	140
Section 8: Firmware Update Instructions for the RXi-Panel PC and RXi2-LP IPC.....		146
8.1	Deploy to DVD (Option 1).....	146
8.2	Deploy to USB Stick (Option 2)	147
8.3	Recover from Image	147
8.4	Steps for Checking the Installed Version	147
Section 9: RXi Panel PC Windows Activation Procedure.....		150
9.1	Activate a Windows 10 IoT Enterprise LTSC device Using an Internet Connection	150
9.2	Activate a Windows 10 IoT Enterprise LTSC Device Using a Telephone	152
Section 10: Firmware Update Instructions for the RXi - Web Panel		156
10.1	Updating Firmware with Physical Access to Web Panel	156
10.2	Updating Firmware Remotely.....	160
10.2.1	Enabling SSH Server.....	160

10.2.2 Copying Firmware Files to the Web Panel.....	161
10.3 Updating the Firmware after Copying Firmware Files.....	162
10.3.1 Updating Firmware using SSH Client After SSH is Enabled.....	162
Appendix A: Open-Source Declaration	166
General Contact Information	167
Technical Support	167

List of Figures

Figure 1: Mohs Hardness Scale	2
Figure 2: Daisy Chaining.....	5
Figure 3: Backing Module and Screens	5
Figure 4: AD Board OSD Functions Legend	6
Figure 5: Virtual OSD Keyboard	7
Figure 6: Picture Menu Options.....	8
Figure 7: Display Menu Options.....	9
Figure 8: Color Menu Options.....	10
Figure 9: Input Menu Options.....	11
Figure 10: Audio Menu Options.....	11
Figure 11: Other Menu Options.....	12
Figure 12: Configuration	15
Figure 13: End User License Agreement	16
Figure 14: Express Install	16
Figure 15: Restart Now	17
Figure 16: Custom Install	17
Figure 17: Drivers Selection	18
Figure 18: Restart Now	18
Figure 19: Sensitivity Adjuster	20
Figure 20: Main Menu	22
Figure 21: Advanced Menu	23
Figure 22: ACPI Settings.....	24
Figure 23: Trusted Computing	25
Figure 24: Wakeup Configuration.....	26
Figure 25: CPU Configuration	27
Figure 26: IDE Configuration.....	28
Figure 27: USB Configuration.....	29
Figure 28: NCT6112D Hardware Monitor	30
Figure 29: NCT 6112D Super IO Features	31
Figure 30: Network Stack Configuration.....	32
Figure 31: Chipset Screen	33
Figure 32: Boot Configuration Menu	35
Figure 33: Hard Drive BIOS Boot Specification	36
Figure 34: Security	37
Figure 35: Key Management.....	38
Figure 36: Menu Options	39
Figure 37: AMD Chipset Setting.....	41
Figure 38: Trusted Computing	42
Figure 39: PCI-E Port Configuration	43
Figure 40: Advanced	44
Figure 41: ACPI Configuration.....	45
Figure 42: NCT611D	46
Figure 43: Serial Port Console Redirection	47

Figure 44: Serial Port Console Redirection 48

Figure 45: CPU Configuration 50

Figure 46: USB Configuration 51

Figure 47: CSM Configuration 52

Figure 48: Network Stack Configuration 53

Figure 49: Security 54

Figure 50: Secure Boot Menu 55

Figure 51: Secure Boot Variables 57

Figure 52: Boot 58

Figure 53: Save & Exit' 59

Figure 54: Backing Module and Screen Compatibility 60

Figure 55: Homepage Setup 61

Figure 56: Homepage Setup 62

Figure 57: Startup Sreen 62

Figure 58: System Setup 63

Figure 59: System Setup 64

Figure 60: System Setup Homepage 65

Figure 61: Swipe Gesture 68

Figure 62: Password Screen 69

Figure 63: System Setup Login 70

Figure 64: Kiosk Mode Exit 70

Figure 65: Open Apps 71

Figure 66: Touch 71

Figure 67: EETI Touch Tool 72

Figure 68: EETI Touch Tool 73

Figure 69: Open Apps 74

Figure 70: Setup 74

Figure 71: Desktop Restart 75

Figure 72: System Setup 76

Figure 73: Select Brightness from System Setup 76

Figure 74: Brightness Setup 77

Figure 75: System Setup 78

Figure 76: Brightness Adjustment 78

Figure 77: Energy Saving Mode 79

Figure 78: System Setup 79

Figure 79: Select the Password Icon from the Setup Page 80

Figure 80: Set New Password 80

Figure 81: System Setup 82

Figure 82: Select the Password Icon 82

Figure 83: Set User Password 83

Figure 84: System Setup 83

Figure 85: Select Network Setup 84

Figure 86: Network Setup 84

Figure 87: Login Before Date and Time Settings 86

Figure 88: Select Date and Time 86

Figure 89: Date and Time Setup 87

Figure 90: Credentials 88

Figure 91: Screen Rotation	89
Figure 92: System Setup	90
Figure 93: Select the Terminal icon	91
Figure 94: Run command iptables -S	92
Figure 95: Credentials	95
Figure 96: Terminal	95
Figure 97: Jumpers and Connectors Location	109
Figure 98: HDMI Layout	110
Figure 99: USB2.0	114
Figure 100: Line Out	114
Figure 101: LED Location (Circled)	115
Figure 102: C2032 Battery	116
Figure 103: Rear Panel Arrangement	117
Figure 104: SW1 Switch Location	123
Figure 105: Junction Function (SW1)	124
Figure 106: Power Socket (DN-IN1)	126
Figure 107: USB, LAN, and COM Ports	126
Figure 108: Panel Cutout Dimension Definitions	129
Figure 109: Panel Cutout Dimension Definitions	130
Figure 110: Panel Cutout Dimension Definitions	131
Figure 111: Panel Install View	132
Figure 112: Mounting Bracket Insertion	132
Figure 113: Tighten Mounting Bracket	133
Figure 114: 7" Mount	134
Figure 115: 10" Mount	135
Figure 116: 12" Panel Mount	136
Figure 117: 15" Panel Mount	137
Figure 118: 19"/24" Panel Mount	138
Figure 119: Panel PC with AMD Ryzen Mount	139
Figure 120: 7" VESA Mount	140
Figure 121: 10" VESA Mount	141
Figure 122: 12" VESA Mount	142
Figure 123: 15" VESA Mount	143
Figure 124: 19"/24" VESA Mount	144
Figure 125: Panel PC with AMD Ryzen VESA Mount	145
Figure 126: AX Directory	148
Figure 127: Folder Options	148
Figure 128: Release Notes	149
Figure 129: Activation	150
Figure 130: Product Key Sticker	151
Figure 131: Removing the Scratch Layer	151
Figure 132: Enter the Product Key	151
Figure 133: Product Key Sticker	152
Figure 134: Revealing the Product Key	152
Figure 135: Windows Script Host	153
Figure 136: Run the SLUI 4 Command	153
Figure 137: Select Country or Region	154

Figure 138: Technical Support 154

Figure 139: Confirmation ID..... 155

Figure 140: Command Prompt..... 155

Figure 141: SW1 DIP Switch 156

Figure 142: SW1 Switch Toggled to ON 156

Figure 143: OTG Port Location 157

Figure 144: VBS Location 157

Figure 145: HID-Compliant Device..... 158

Figure 146: Successful Operations..... 159

Figure 147: SW1 Toggled to OFF..... 159

Figure 148: System Setup 160

Figure 149: Enable SSH Server 160

Figure 150: Credentials 161

Figure 151: Transfer the files 162

Figure 152: Verify Fingerprint and then Trust it 162

Figure 153: Sudo admin 163

Figure 154: Switch to Root..... 163

Figure 155: Run lsblk Command 164

Figure 156: Run Tar Command 165

Figure 157: Change Directory 165

Warnings and Caution Notes as Used in this Publication

WARNING

Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

CAUTION

Caution notices are used where equipment might be damaged if care is not taken.

Note: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and Emerson makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that Emerson may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the Emerson products referenced herein.

Emerson may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

Emerson provides the following document and the information included therein as-is and without warranty of any kind, expressed or implied, including but not limited to any implied statutory warranty of merchantability or fitness for particular purpose.

Section 1: Introduction

1.1 An Introduction to PACSystems RXi – Industrial Displays

RXi – Industrial Displays are a modular and fanless display portfolio consisting of industrial monitors, web panels, and panel PC options to suit customer visualization and computing needs. The entire portfolio features IP66-rated screens that protect against dust, moisture, and waterjets as well as a range of TFT LCD screen sizes in a 16:9 format: 7”, 10”, 12”, 15”, 19”, 24”. The RXi – Industrial Displays family includes outdoor, sunlight-readable screens for 7” – 15” screens. The screens are projected capacitive touch screens and have a multi-touch functionality. The front of the screens includes a light sensor, which allows for the screens to automatically adjust to changes in ambient light and system power LED light.

1.2 Revisions in This Manual

Revision	Date	Description
G	Oct 2023	Save Button added to Setup Page for PACSystems RXi Web Panel
F	Apr 2023	Updates to show compliance with new certifications. Added Steps for Adjusting Screen Sensitivity in Panel PC. Updated diagram for Serial Port Pin Configuration.
E	Nov 2022	Adds support for Remote Firmware Updates for PACSystems RXi Web Panel
D	Jul 2022	Updates to support revised user privilege names Updates to support SSH Updates to Chromium browser New Linux update (5.15.5) Removed Firefox browser support
C	Feb 2022	Updates to support Web Panel Enhancement and adds the new catalogue number IC757NSW12WHMI
B	Jul 2021	Updated Pin Configuration for Serial Port (UART)
A	Dec 2020	Initial Release

1.2.1 Advantages to PACSystems RXi - Industrial Displays

Scratch Resistance

The RXi – Industrial Displays are robust displays engineered to resist the harshest environments. The industrial displays feature scratch-resistant glass without the use of plastic overlays and feature screen sensitivity options to adapt to a user’s protective gear (PPE).


- All RXi Industrial Displays have specifical PCAP screens
- No Plastic Resistive overly
- Special Glass has a 7 rating on the Mohs Hardness scale.
- The Mohs scale measures the hardness of various materials”
 - Harder materials can scratch softer ones
 - Softer materials are unable to scratch harder ones
 - RXi Industrial Displays have a strong resistance against scratching from fingernails, knives, keys, and standard steel tools.

Figure 1: Mohs Hardness



Screen Chemical Resistances

- Acetone
- Unleaded Gasoline
- Isopropyl Alcohol
- Motor Oil
- Laundry Detergents
- 5% Salt Water
- Hydraulic Fluid
 - Skydrol

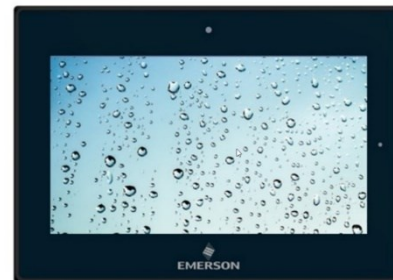







Glove Compatibility

RXi Industrial Displays are compatible with a wide variety of PPE, which eliminates the need for a worker to remove gloves to interface with the screens. The figure below illustrates glove compatibility.

The following values represent glove compatibility on the standard sensitivity setting

The sensitivity of the RXi – Industrial Displays can be increased.

Glove Thickness (mm)	Glove Material	Glove Photo
0.12	Latex	
0.85	Nylon	
0.85	Polyester	
1.85	Cotton	
1.85	Cotton	
0.85	Leather	

Section 2: PACSystems RXi - Industrial Monitor Overview



2.1 Primary Technical Features


- HDMI, DP, DP-out (MST-daisy chain), Line-out, USB ports
- On-Screen Display (OSD) on the left side
- 7"/ 10"/ 12"/ 15"/ 19"/ 24" Widescreen Display
- 7"/10"/12"/15" Industrial Widescreen Outdoor Sunlight Readable Screens
- TFT LCD Industrial Display
- Aluminum chassis

2.2 Display Architectural Options

MST Daisy-Chained together using DisplayPort In and DisplayPort Out ports top pass Audio and Video signals in either an "Extended" or "Cloned" configuration.

The maximum number of MST daisy-chained displays with DisplayPort 1.2 is four displays. The number of RXi – Industrial Monitors will be limited by the graphical capabilities of the attached hardware. The figure below illustrates which hardware offers the most graphical power.

Figure 2: Daisy Chaining

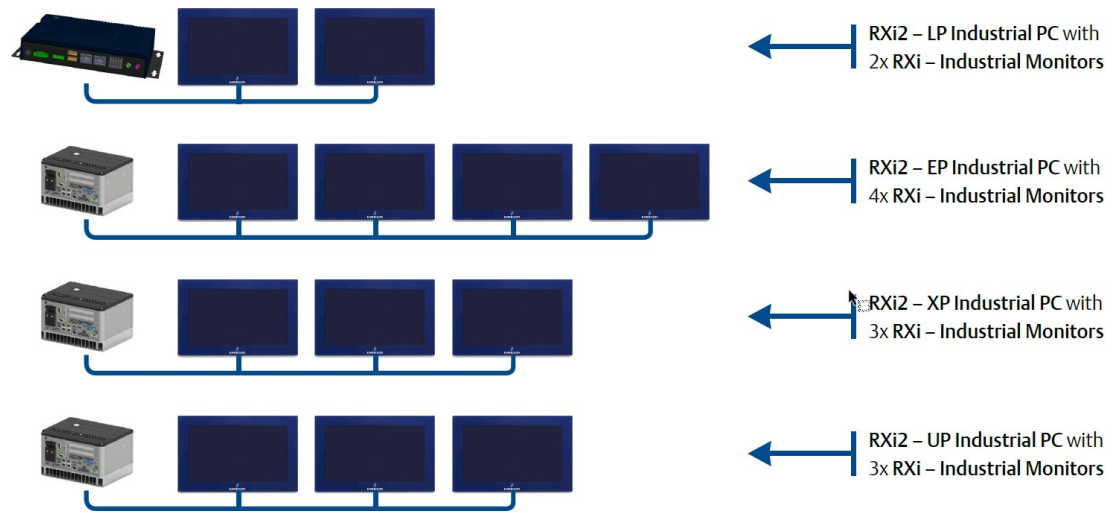


To enable touchscreen capabilities, the USB cable must be attached from the individual screen back to the IPC.

Note: Microsoft Windows limits user input to one touchscreen at a time, even with multiple screens attached to the IPC.

2.3

Backing Module and Screen Compatibility

Figure 3: Backing Module and Screens

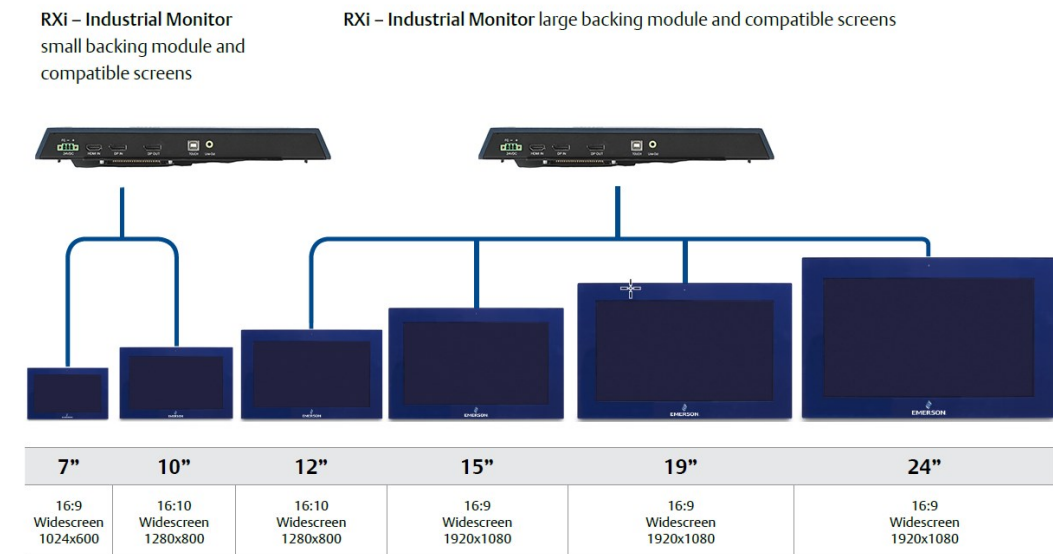


2.4 Configuration and Setup RXi Industrial Monitor

2.4.1 On-Screen Display (OSD)

AD Board OSD Functions

Figure 4: AD Board OSD Functions Legend

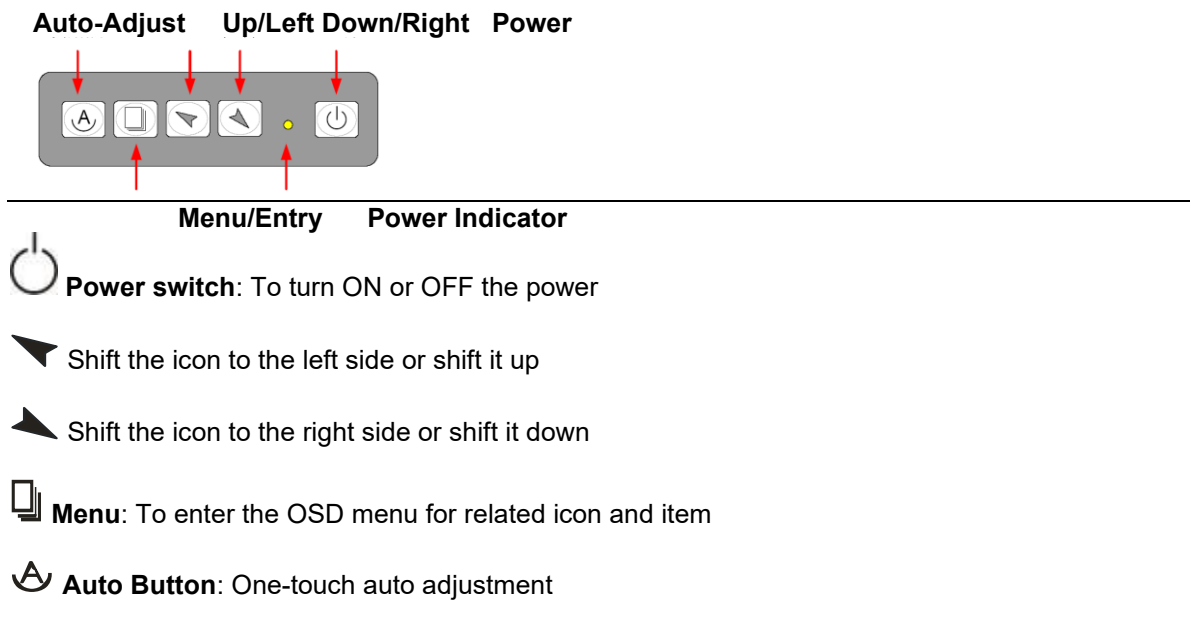

Enter Burn-in Mode

Before entering the burn-in mode, first, disconnect the AC power cord, then press and hold the **Up/Left** buttons, then release after the AC power cord is connected and the **RGB** appears on the top left corner of your screen. Now it can be put into the burn-in mode for changing colors.



Exit Burn-in Mode

Before exiting burn-in mode, please first disconnect the AC power cord, then press the **Down/Right** button (If for any reason this button is non-functional, press and hold the **Up/Left** button) until the AC power cord is connected. Do not release the button until the AC power cord is connected again and the wording of **RGB** appears on the top left corner of your screen, then wait for 3 seconds. If there is no input plugged into the unit, the **CABLE NOT CONNECTED** message will denote that it has successfully left burn-in mode.

If Unable to Exit Burn-in Mode

If the **RGB** is still on the top left corner of the screen, press **Menu/Entry** to enter **Miscellaneous** and choose **Reset**, and then select **Yes**, and press **Menu/Entry**. When the screen goes black, disconnect power and










repeat the above steps.

If the RGB is not found, disconnect the AC power cord first, then press and hold the   buttons until the AC power cord is connected, and wait for 2 to 3 seconds. When **RGB** appears, repeat the above steps.

2.5 OSD Controls

2.5.1 OSD Keypad


To make any adjustment to the settings of the Industrial Monitor, select the following:

1. Press  (Menu) to show the OSD menu or dismiss the OSD menu.
2. Select the icon that you wish to adjust with the (/) key in the menu.
3. Press  (Menu) and then choose the item with the (/) key.
4. Press  (Menu) and then adjust the quality with the (/) key.

2.5.2 Virtual OSD Keypad

1. Press Menu to show the OSD menu or dismiss the OSD menu.
2. Navigate to the icon that you wish to adjust with the (+) and (-) keys in the menu.
3. Press Menu and then choose the item with the (+) and (-) keys.
4. Press Menu and then adjust the quality with the (+) and (-) keys

Figure 5: Virtual OSD Keyboard

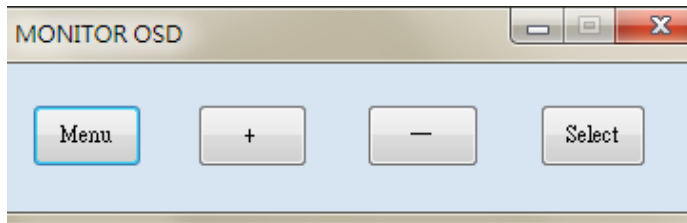


2.5.3 Main Menu

Picture

To access the main menu, push the **Menu** button on the OSD controls.


Figure 6: Picture Menu Options

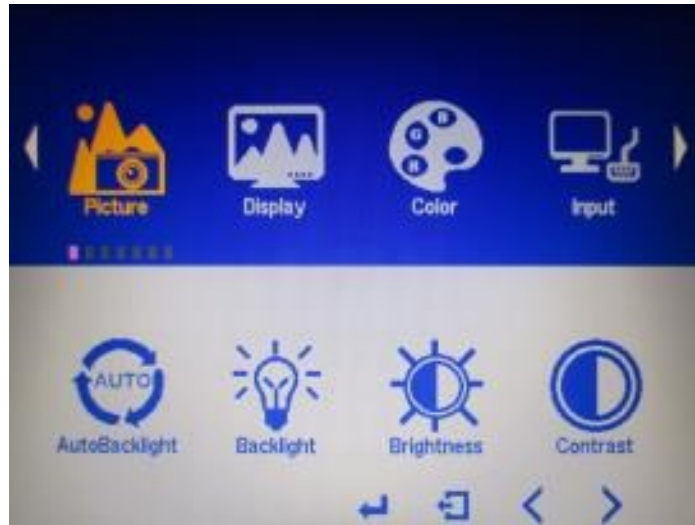

Menu Items	Descriptions
AutoBacklight	Adjusts the brightness of the screen based on the brightness level of the video in use
Backlight	Adjusts the brightness of the display
Brightness	Adjusts the colors levels to simulate brightness
Contrast	Adjusts the scale factor (gain) to the red, green, and blue signals
Sharpness	Adjusts the clarity of a display's picture or text

Display


Figure 7: Display Menu Options

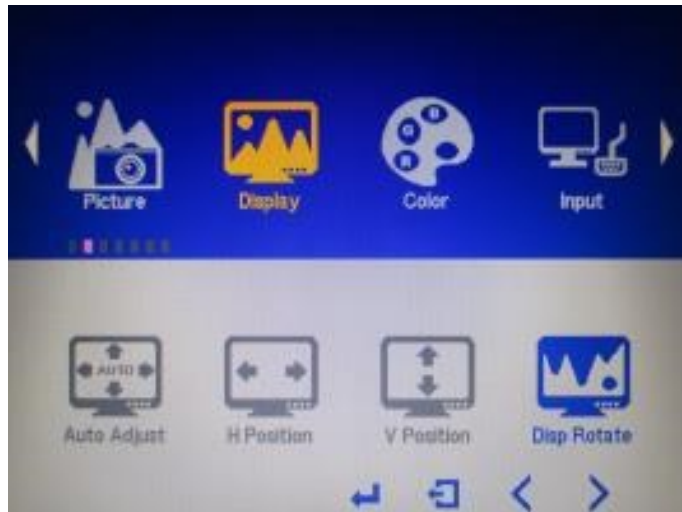

Menu Items	Descriptions
AutoAdjust	The screen will calibrate the display to show the best screen orientation and position
H Position	Moves the screen left or right (horizontally)
V Position	Moves the screen up or down (vertically)
Disp Rotate	Rotates the display orientation (landscape/portrait)

Color

Figure 8: Color Menu Options

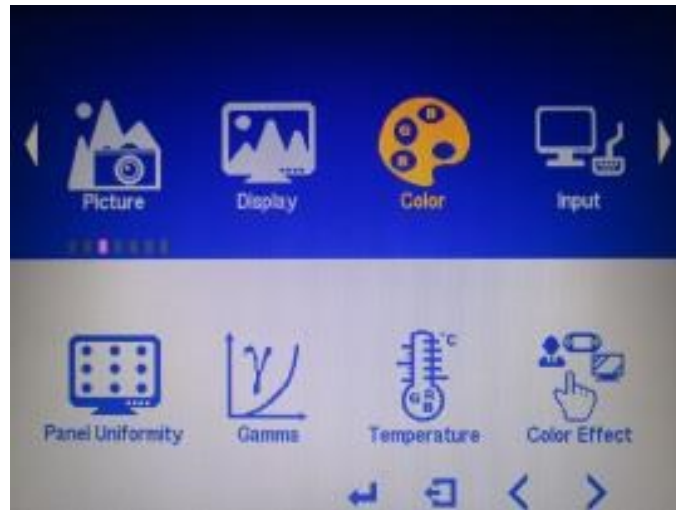

Menu Items	Descriptions
Panel Uniformity	Adjusts color consistency across the screen
Gamma	Adjusts gamma value
Temperature	Adjusts temperature value
Color Effect	Adjusts color effect

Input


Figure 9: Input Menu Options



Menu Items	Descriptions
Auto Select	Automatically displays input from whichever ports are supplying media
DP	Manually displays input from DisplayPort port
HDMI	Manually displays input from HDMI port

Audio


Figure 10: Audio Menu Options

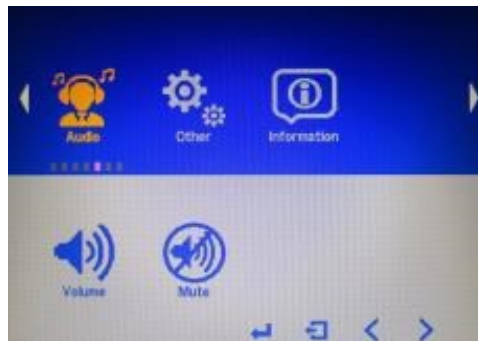

Menu Items	Descriptions
Volume	Increases or decreases the volume level
Mute	Toggles volume on or off

Other (Menu Item)

Figure 11: Other Menu Options

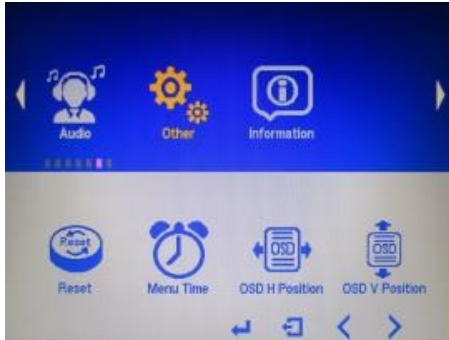

Menu Items	Descriptions
Reset	It will reset the values to original/ default values.
Menu Time	Adjusts the time that the menu will remain on-screen after pressing the menu button.
OSD H Position	Moves the virtual OSD menu left or right (horizontally)
OSD V Position	Moves the virtual OSD menu up or down (vertically)

Section 3: PACSystems RXi – Panel PC Overview



The RXi - Panel PC is a modular display portfolio that offers multiple options of separable screens and computing units, which maximize flexibility, performance, and durability. The portfolio ranges from 7" to 24" screens in a widescreen format, with 7" to 15" models also available with outdoor sunlight readable screens. The modular nature of the unit allows users to easily swap an indoor screen for an outdoor screen, change screen sizes, or simply replace a damaged screen while utilizing the same computing unit.

There are two variants of the RXi - Panel PC, base and advanced (high performance AMD Ryzen processor). The base model comes with either a Dual-Core 1.0 GHz or a Quad-Core 1.2 GHz AMD G-Series processor with 4 GB or 8 GB of available DDR3 RAM available. The advanced module comes with Quad-Core 2.0 GHz AMD Ryzen Series processor with 8 GB or 16 GB of DDR4 RAM. All RXi - Panel PCs come with Windows 10 IOT Enterprise LTSC OS installed standard. The high resolution, multitouch, projective capacitive screens can be used with personal protective equipment and feature quick response times.

The outdoor-rated sunlight-readable screens are optically bonded and feature UV protection reducing reflections and glare. All indoor and outdoor rated configurations carry the same certifications and capabilities.

The entire RXi – Panel PC portfolio features IP66 rated screens that protect against dust, moisture, and even direct water jets. The effective operating temperatures range as high as 65 °C and as low as -20 °C. With BIS, Marine, ATEX/IECEX, and HazLoc certifications, the RXi - Panel PC provides you with a solution that is designed to go where you need it to.

3.1 Primary Technical Features (Base Model)

- 7"/ 10"/ 12"/ 15"/ 19"/ 24" Industrial Widescreens
- 7"/ 10"/ 12"/ 15" Industrial Widescreen Outdoor Sunlight Readable Screens

- Flat Front Panel Projected Capacitive Touch Screens
- Modular Design
- AMD Embedded G-Series SOC Processor
- Onboard DDR3L, up to 8GB (Soldered with ECC)
- Fanless Design
- 1x M2 SSD slot
- 4x 10/100 base T Ethernet RJ45
- 1x RS-232, 1x RS-485
- 2x USB 3.0, 2x USB 2.0
- 1x Display port
- 1x Mic-in, 1x Line-out
- 24VDC Wide Range Power Input
- 1 x External Micro SD/ SDHS Card Slot (up to 32 GB)
- Secure & Trusted Boot Capability

3.2 Primary Technical Features (with AMD Ryzen)


Primary technical features:

- 12"/ 15"/ 19"/ 24" Industrial Widescreens
- 12"/ 15" Industrial Widescreen Outdoor Sunlight Readable Screens
- Flat Front Panel Projected Capacitive Touch Screens
- Modular Design
- AMD Embedded V1000 Series SoC (V1404i)
- Fanless Design
- 1x M2 SSD slot
- 4x 10/100 base T Ethernet RJ45
- 1x RS-232, 1x RS-485
- 2x USB 3.0, 2x USB 2.0
- 1x Display port
- 1x Mic-in, 1x Line-out
- 24VDC Wide Range Power Input
- 1 x External Micro SD/ SDHS Card Slot (up to 32 GB)
- Secure & Trusted Boot Capability

3.3 Display Architectural Options

The RXi – Panel PC can operate as a stand-alone unit or connect directly with an RXi – Industrial Monitor for dual-screen operation. For more information, please see the RXi – Industrial Monitors Data Sheet.

Figure 12: Configuration

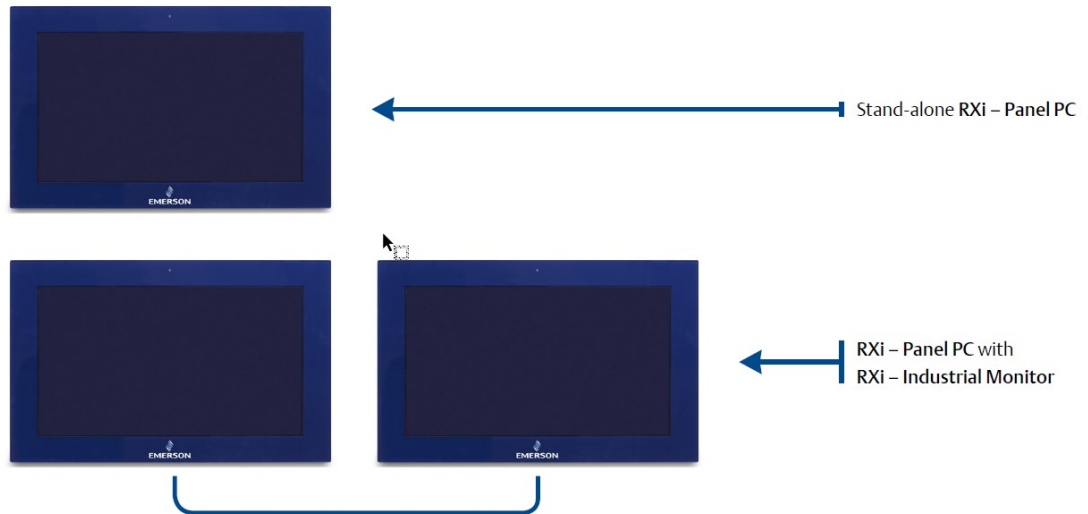


3.4 Drivers Installation

Note: Instructions are the same for Panel PC with or without AMD Ryzen.

1. Read and accept the End User License Agreement (Figure 13).

Figure 13: End User License Agreement

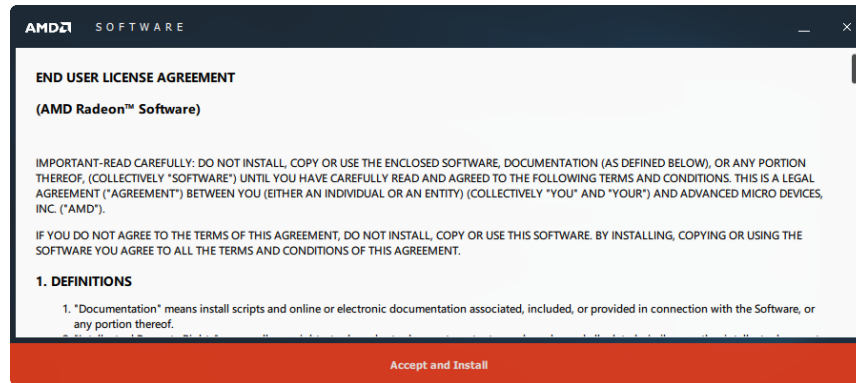

3.4.1 Express Installation

There are two installation processes. Express Installation is the easiest:

1. Select **Express Install** (Figure 14).
2. Once the installation is complete, select **Restart Computer** (Figure 15).

Note: It is strongly encouraged to restart the Panel PC before continuing.

Figure 14: Express Install


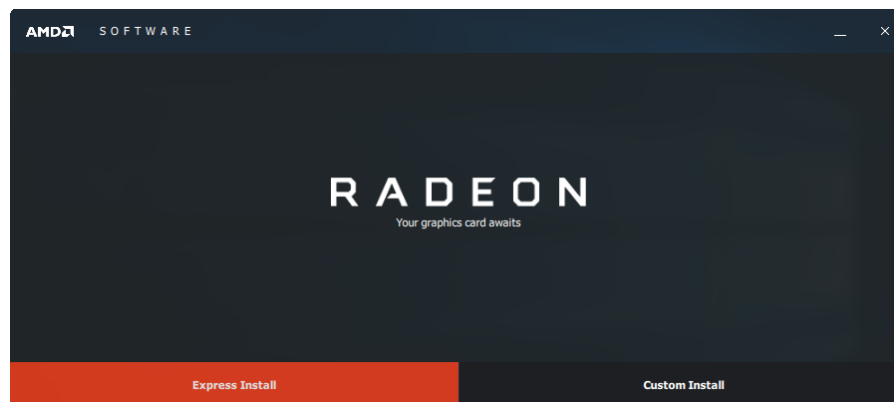


Figure 15: Restart Now

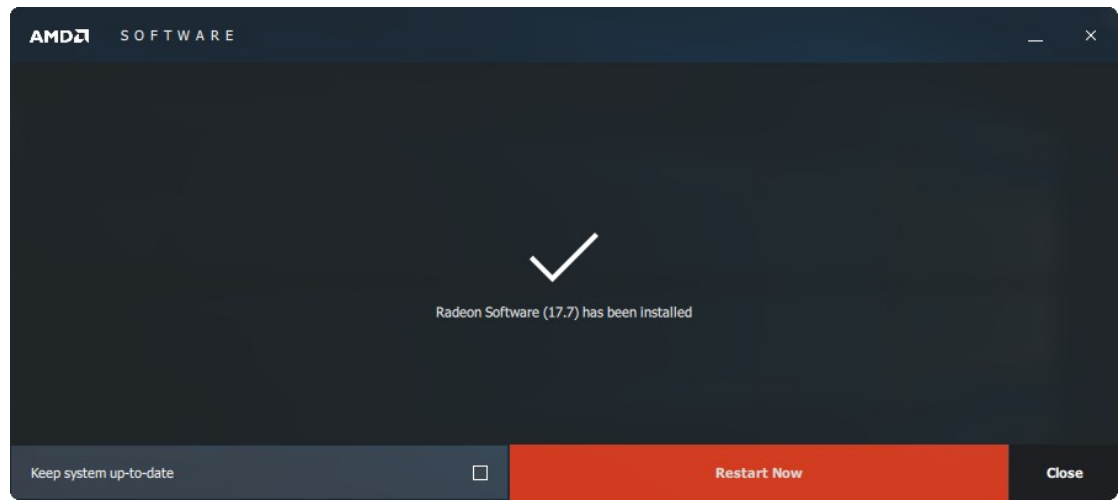

3.4.2 Custom Installation

Customer installation is available to allow users to specify which drivers they want to install. To proceed:

1. Select **Custom Install** (Figure 16).
2. Select your driver requirements and click **Install** (Figure 17).
3. Restart the computer when the installation is complete (Figure 18).

Figure 16: Custom Install

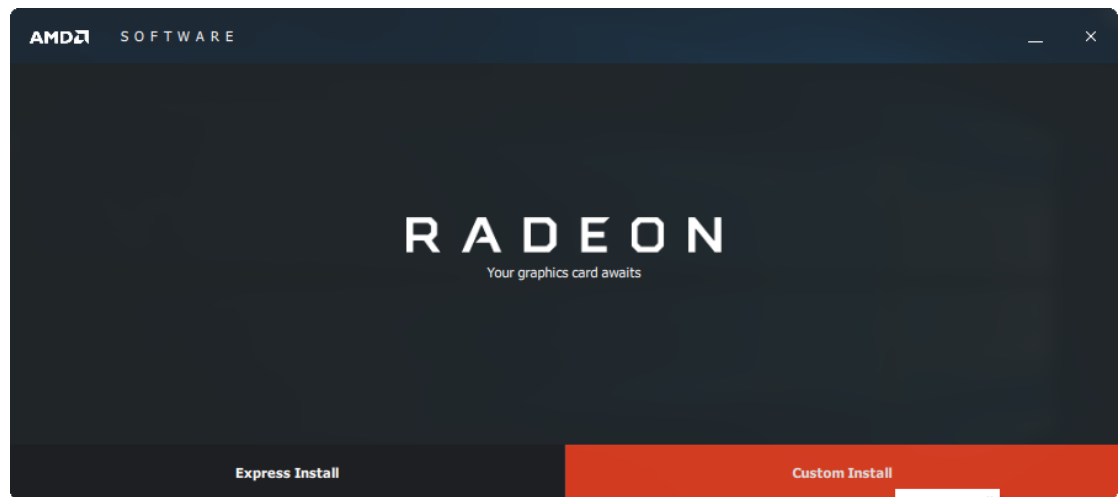


Figure 17: Drivers Selection


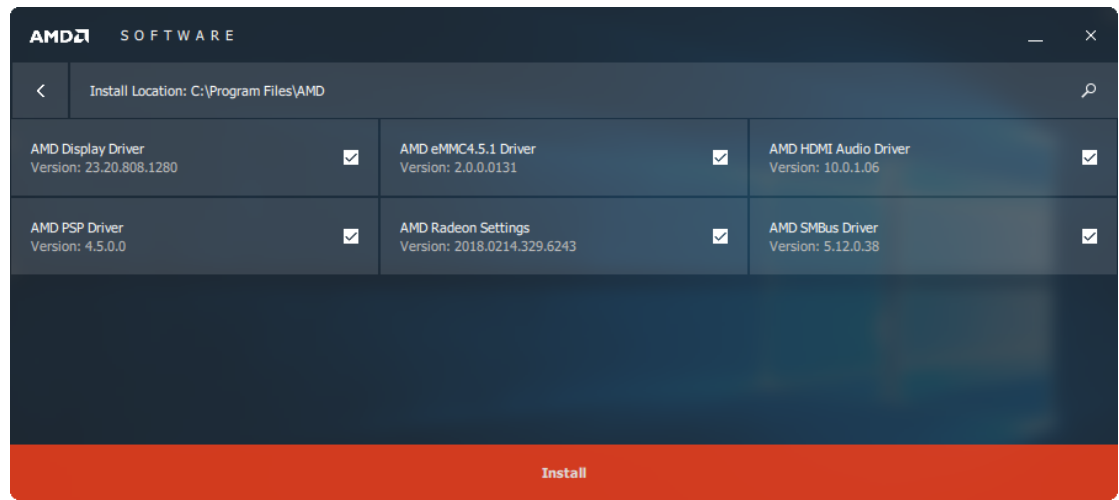


Figure 18: Restart Now

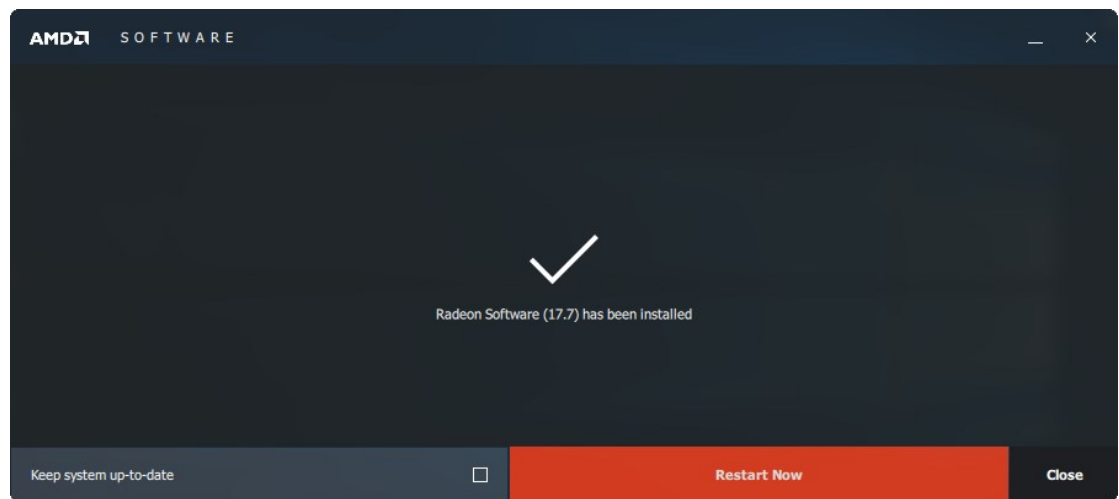

Note: It is strongly encouraged to restart the Panel PC before continuing.

3.5 Configuration and Setup with RXi – Panel PC

3.5.1 Set Brightness in Panel PC

Changing the screen brightness of a Panel PC must be done in the BIOS.


1. During startup, repeatedly press the **Delete** key.
2. Press the right arrow key two times to navigate to the **Chipset** heading under the BIOS menu.
3. Under the **Chipset** menu in BIOS, press the down arrow key twice to highlight the **Display Control** submenu and press Enter to select.
4. Under the **Display Control** submenu, press the down arrow key twice to highlight the “**Auto Backlight Dimming**” setting and press enter to select
5. Once you have selected the **Auto Backlight Dimming** option, change the setting to **Disabled**
6. Once the setting has been adjusted, press the ESC key to exit the submenu. You may then save and exit the BIOS to start the operating system with your desired settings in effect.

3.5.2 Adjust Screen Sensitivity in Panel PC

1. Open the folder on the desktop entitled *eGalaxSensitivityAdjuster*, and launch the *eGalaxSensitivityAdjuster* executable file. .
2. Change the sensitivity setting value and click on the "Set" button as shown below.

These settings need to be changed using the **mouse**. The touch event will be intercepted into the drawing area (re-mapping touch location from the full size of the touch panel into the drawing window area), so you cannot touch the parameter setting adjustment area of this software.

Figure 19: Sensitivity Adjuster

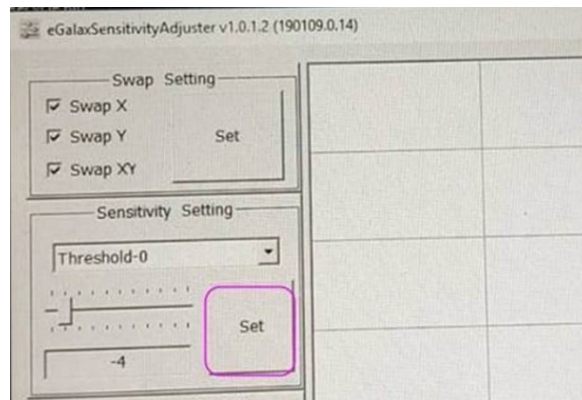

3. Calibrate the screen finally.

Note : You can also try eGalaxTouch_5.14.0.15315-Release-ForPCAP tool for screen calibration and go through UserGuide.chm to install the tool. The tool can be downloaded from one of the knowledge base articles.

The knowledge base articles can be accessed using the support links located on the last page of this document. Users can download the tool by searching for **Configuring Multiple Monitors and Display System for Emerson Windows IPC using eGalaxTouch Tool**

Disclaimer: The user must read the license declaration before using eGalaxTouch tool and comply to our license clauses.

3.6 Accessing the BIOS (Panel PC)

The BIOS is a program that handles basic levels of communication between the CPU and peripherals. It contains codes for various advanced features found in this system board. The BIOS allows you to configure the system and save the configuration in a battery-backed CMOS so that the data is retained even when the power is off. In general, the information stored in the CMOS RAM of the EEPROM will stay unchanged unless a configuration change has been made, such as a hard drive replaced or a device has been added.

The CMOS battery can fail over time, causing CMOS data loss. If this happens, you need to install a new CMOS battery and reconfigure the BIOS settings.

Keys	Function
Right and Left arrows	Moves the highlight left or right to select a menu.
Up and Down arrows	Moves the highlight up or down between submenu or fields.
Enter	Press Enter to enter the highlighted submenu or item.
+ (plus key)	Scrolls forward through the values or options of the highlighted field.
- (minus key)	Scrolls backward through the values or options of the highlighted field.
<F1>	Displays general help
<F2>	Pervious values
<F3>	Load Optimized Defaults
<F4>	Saves and resets the setup program.
<Esc>	Exit to the BIOS Setup Utility.

Submenu

When “□” appears on the left of a particular field, it indicates that a submenu that contains additional options are available for that field. To display the submenu, move the highlight to that field and press **Enter**.

3.6.1 AMI BIOS Setup Utility (Panel PC)


3.6.2 Accessing the BIOS

To access the BIOS, you must attach a USB keyboard to the device and repeatedly press the **Delete** key during the startup sequence until it brings you to the BIOS Main Menu.

3.6.4 Main Menu

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

Figure 20: Main Menu

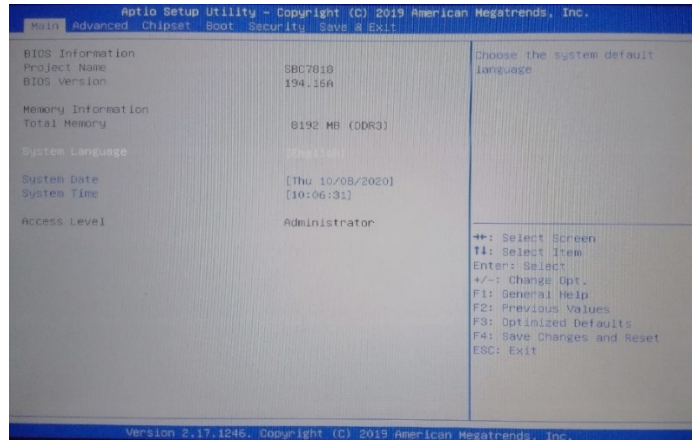


BIOS Parameter	Description
System Language	Choose the system default language.
System Date	The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from 01 to 12. Date displays the date, from 01 to 31. Year displays the year, from 1980 to 2099.
Time	The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

3.6.6 Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others if enabled, will improve the performance of your system or allow the user to set some features according to their preference.


Figure 21: Advanced Menu

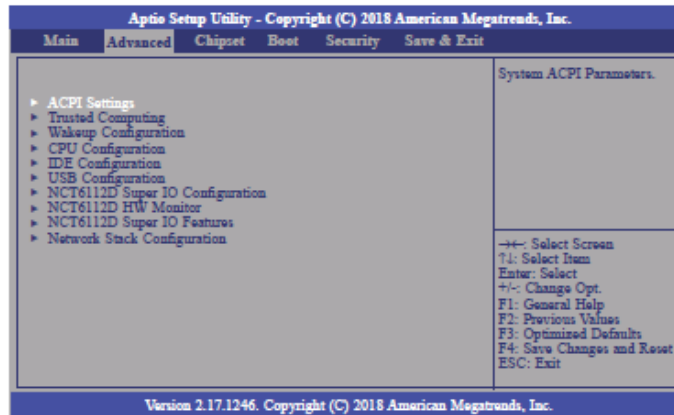

3.6.7 ACPI Settings

This section configures system ACPI parameters.

Figure 22: ACPI Settings

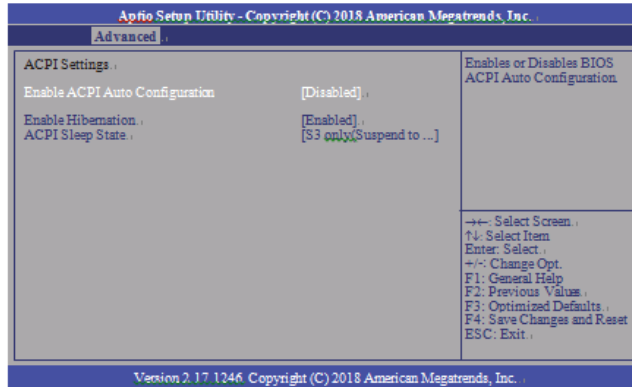


BIOS Parameter		Description
ACPI Auto Configuration	This field is used to enable or disable BIOS ACPI auto configuration.	
Enable Hibernation	This field is used to enable or disable the system's ability to hibernate (OS/S4 Sleep State). This option may not be functional with all operating systems.	

3.6.8 Trusted Computing

This section is used to configure the Trusted Computing settings.

Figure 23: Trusted Computing

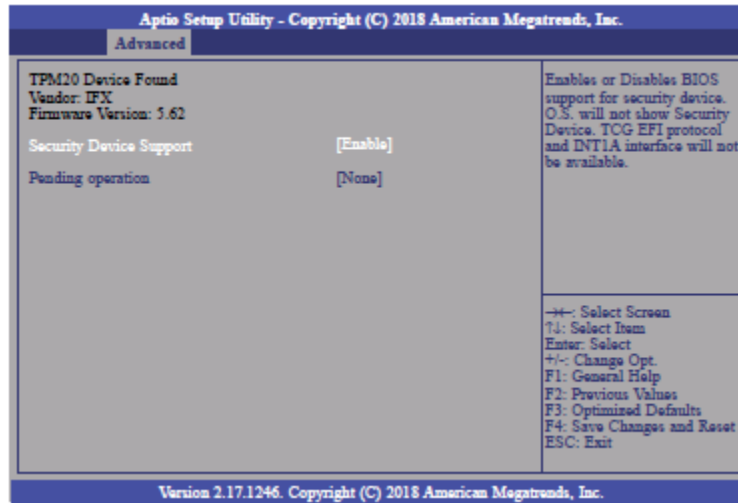


BIOS Parameter	Description
Security Device Support	Enable or disable BIOS support for a security device. The Operating System will not show a security device. TCG EFI protocol and INT1A interface will not be available.
Pending Operation	Schedule an operation for the security device. Your computer will reboot during restart to change the state of the security device.

3.6.9 Wakeup Configuration

This section is used to configure the Wakeup ACPI Power Management.

Figure 24: Wakeup Configuration

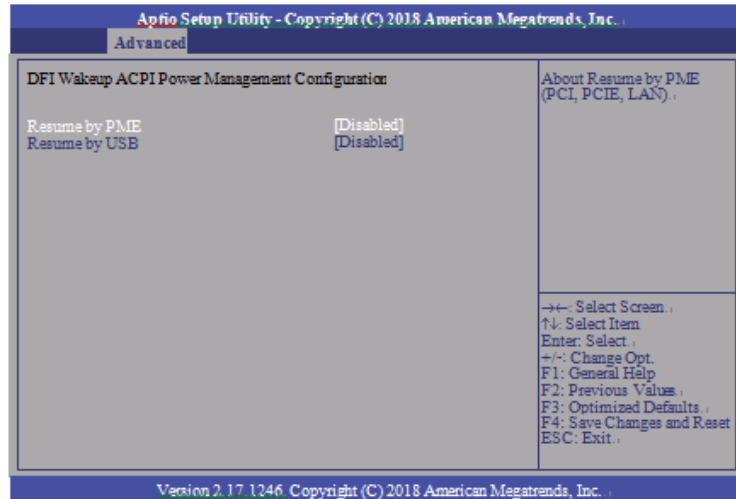


BIOS Parameter	Description
Resume by PME	Enable or disable to resume by PME (PCI, PCIe, LAN, etc.)
Resume by USB	Enable or disable to resume by USB.

3.6.10 CPU Configuration

This section is used to configure the CPU. It will also display the detected CPU information.

Figure 25: CPU Configuration

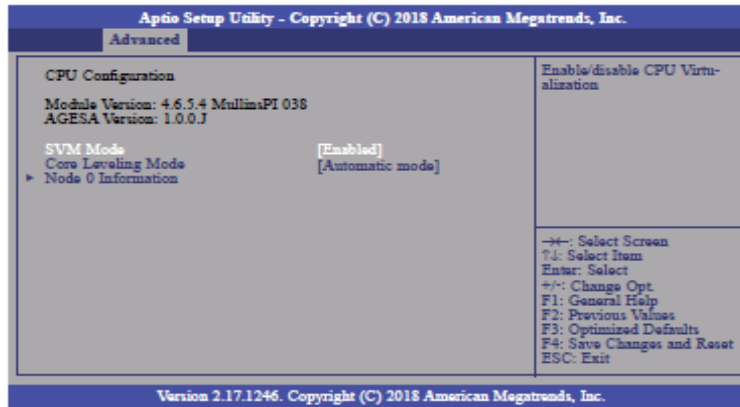


BIOS Parameter	Description
SVM Mode	Enable or disable CPU Virtualization.
Core Leveling Mode	Select the number of cores in the system: Automatic mode, Three cores per processor, Two cores per processor, or One core per processor.
Node 0 Information	View Memory Information related to Node 0.

3.6.11 IDE Configuration

This section is used to configure the IDE Devices. It will also display the detected information.


Figure 26: IDE Configuration

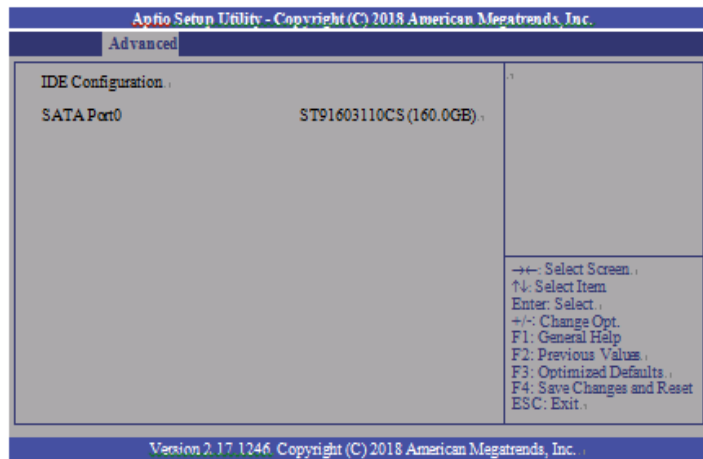

3.6.12 USB Configuration

This section is used to configure the parameters of the USB Device.


Figure 27: USB Configuration

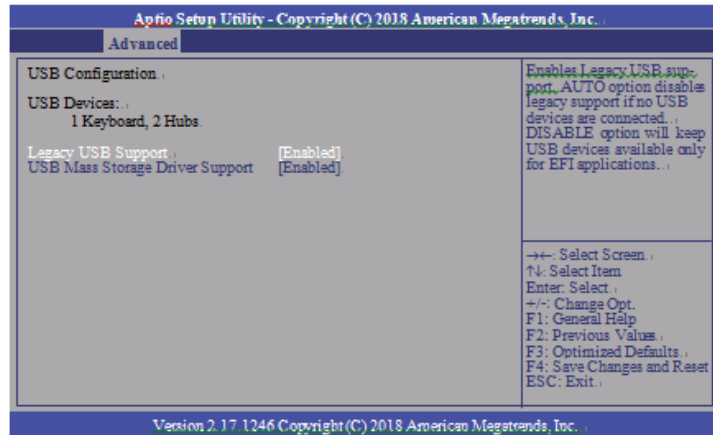

BIOS Parameter	Description
Legacy USB Support	<p>Enabled – Enabled Legacy USB</p> <p>Disabled – Keep USB devices available only for EFI applications</p> <p>Auto – Disable support for legacy when no USB devices are connected</p>
USB Mass Storage Driver Support	Enable or disable the support of the USB Mass Storage Driver.

3.6.13 NCT61120 Super IO Configuration

This section is used to configure the parameters of the system super IO chip.

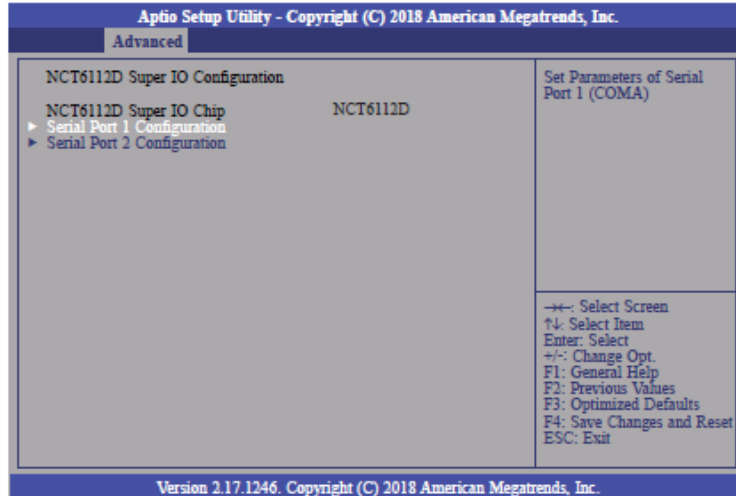


BIOS Parameter	Description
Serial Port	Enable or disable the serial COM port.
RS485 Auto Flow Support	Enable or disable the RS485 auto flow support.

3.6.14 NCT 6112D HW Monitor

This section is used to monitor hardware status.


Figure 28: NCT6112D Hardware Monitor

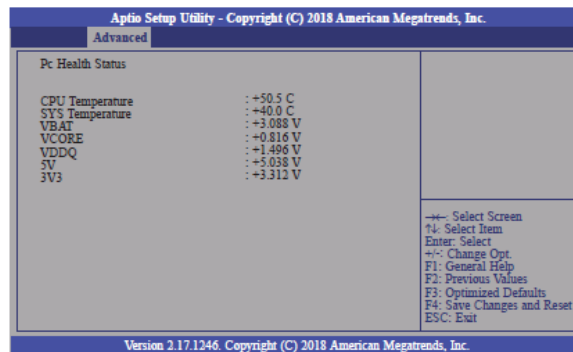

3.6.15 NCT 6112D Super IO Features

This section is used to configure some control functions of the system super IO chip.

Figure 29: NCT 6112D Super IO Features

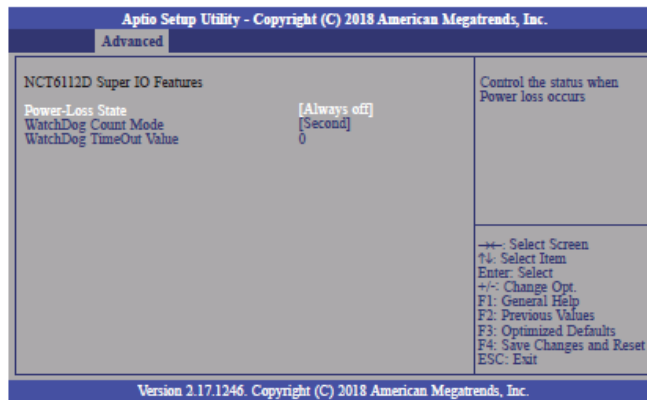


BIOS Parameter	Description
WatchDog Count Mode	A WatchDog timer (WDT) is a hardware timer that automatically generates a system reset if the main program neglects to periodically service it. It is often used to automatically reset an embedded device that hangs because of a software or hardware fault. Use this menu to select the WatchDog Timer Unit: second or minute.
WatchDog TimeoutValue	Enter the value to set the Super IO WatchDog timer. 0 means disabled.

3.6.16 Network Stack Configuration

This section is used to enable or disable network stack settings. The Network Stack Controls LAN1 & LAN2 (Also LAN 3 & LAN4 on large computing module).

Figure 30: Network Stack Configuration

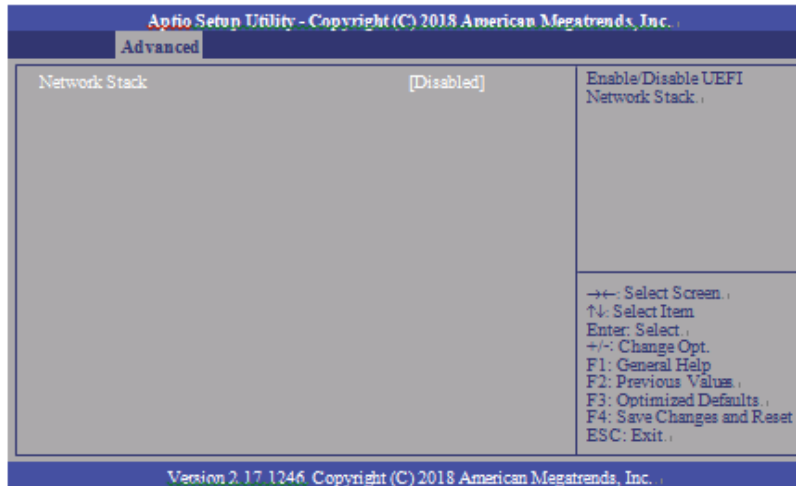


BIOS Parameter	Description
Network Stack	Enable or disable the UEFI network stack. When Network Stack is set to enabled, the screen will be displayed as below.
Ipv4 PXE Support	When enabled, Ipv4 PXE boot supports. When disabled, the Ipv4 PXE boot option will not be available.
Ipv6 PXE Support	When enabled, Ipv6 PXE boot supports. When disabled, the Ipv6 PXE boot option will not be available.
PXE Boot Wait Time	Enter the wait time value to abort the PXE boot.
Media Detect Time	Enter the wait time in seconds to detect media.

3.6.17 Chipset

This section configures relevant chipset functions.

Figure 31: Chipset Screen

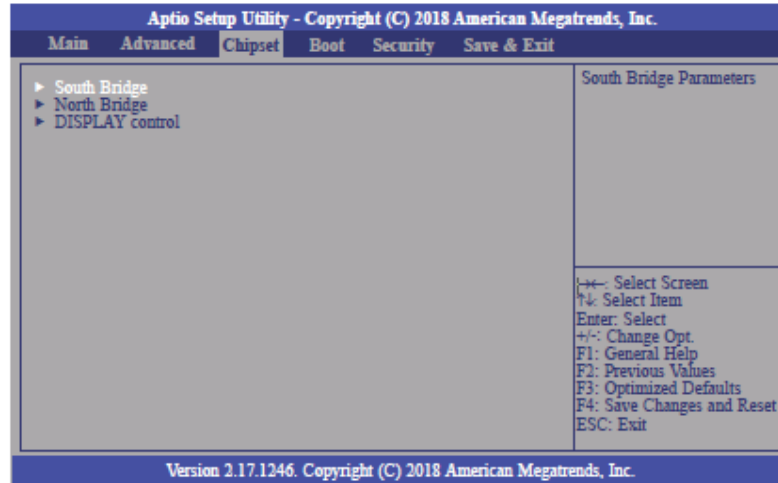


BIOS Parameter	Description
OnChip SATA Channel	Enable or disable Serial ATA
OnChip SATA Type	Select OnChip SATA Type: Native IDE, AHCI, or Legacy IDE.
SD Mode	Enable or disable Secure Digital (SD) Mode configuration.
SD Host Controller Version	Select Secure Digital (SD) host controller version: SD2.0 or SD3.0.
HD Audio	HD Audio will be enabled if present, disabled otherwise.
Restore on AC Power Loss	Power On – When Power returns after an AC power failure, the system will automatically power-on.
	Power Off - When power returns after an AC power failure, the system will remain off. You must press the Power button to power on the system.
	Last State - When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns.
GPP2 Hotplug Mode Control	Enable or Disable GPP2 Hotplug Mode Control

BIOS Parameter	Description
GPP3 Hotplug Mode Control	Enable or disable GPP3 hotplug mode control.
DP0 Output Mode	Select NB PCIe to connect type (display device): EDP or Disabled.
Dp1 Output Mode	Select NB PCIe connect type (display device): DP or Disabled
Auto Backlight Dimming	Enable or disable dimming backlight by TB573D.
Minimum Dimming Level	Set the minimum dimming level control. The range is 1~20%.

3.6.18 Boot Configuration

Figure 32: Boot Configuration Menu

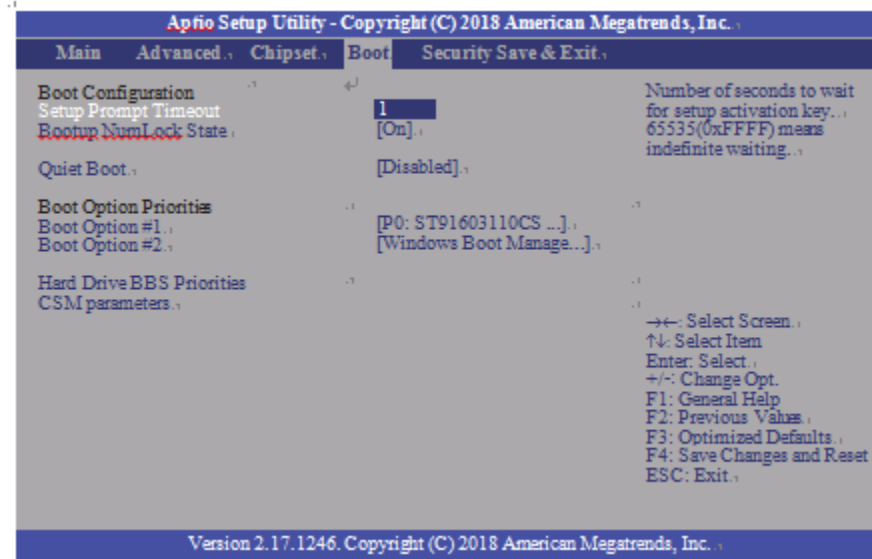


BIOS Parameter	Description
Setup Prompt Timeout	Select the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.
Bootup NumLock State	This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.
Quiet Boot	Enable or disable the Quiet Boot option.
Boot Option #1/#2	Select the system boot order.

Hard Drive BBS Priorities

Set the order of the legacy devices in this group.


Figure 33: Hard Drive BIOS Boot Specification

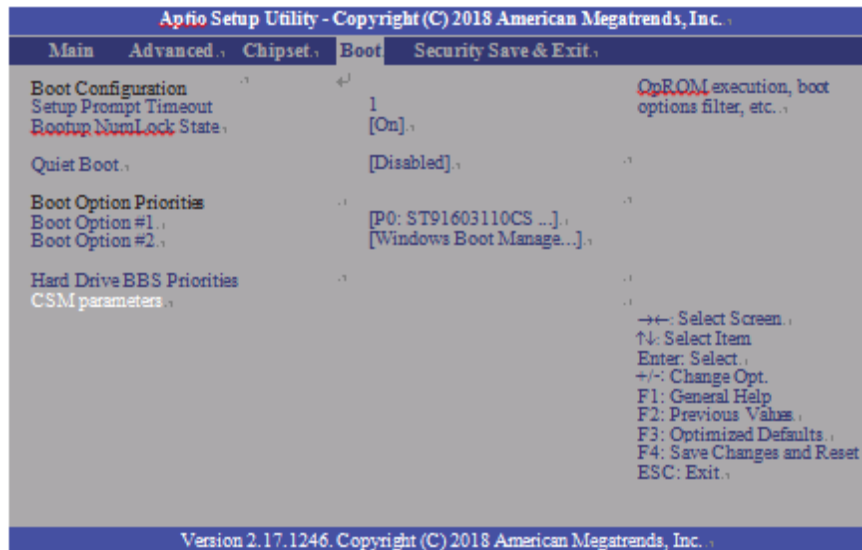

BIOS Parameter	Description
Launch CSM	This field is used to enable or disable to launch of CSM.
Boot Option Filter	This option controls what device(s) the system will boot to.
Launch PXE OpROM Policy	This field controls the execution of UEFI and Legacy PXE OpROM.
Launch Storage OpROM Policy	This field controls the execution of UEFI and Legacy Storage OpROM.
Launch Video OpROM Policy	This field controls the execution of UEFI and Legacy Video OpROM.

3.6.19 Security

Figure 34: Security

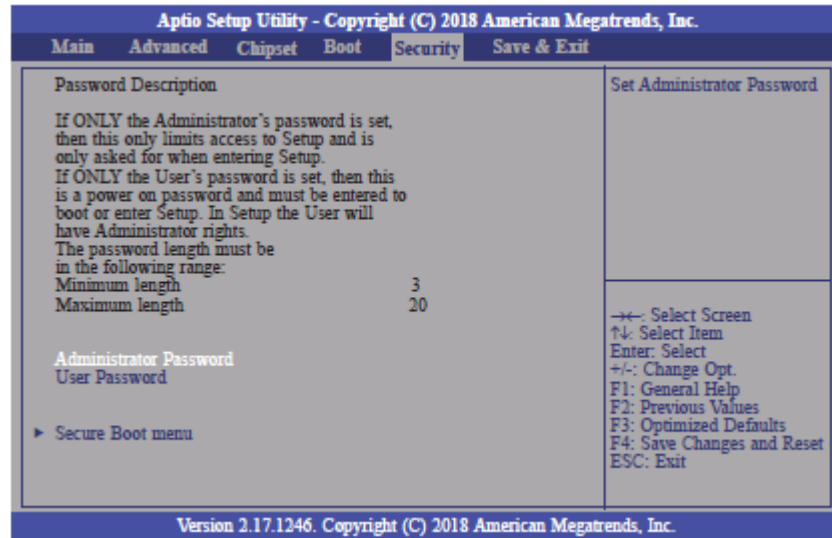


BIOS Parameter	Description
Administrator Password	Set the administrator password.
User Password	Set the user password.
Secure Boot Menu	This section is used to configure customizable secure boot settings.
Secure Boot	Enable or disable secure boot. Secure Boot can be enabled if 1. System running in user mode with enrolled platform key (PK); 2. CSM function is disabled.
Secure Boot Mode	Select secure boot mode: standard or custom. Custom mode enables users to change image execution policy and manage secure boot keys.

Key Management

This section enables experienced users to modify secure boot variables.

Figure 35: Key Management

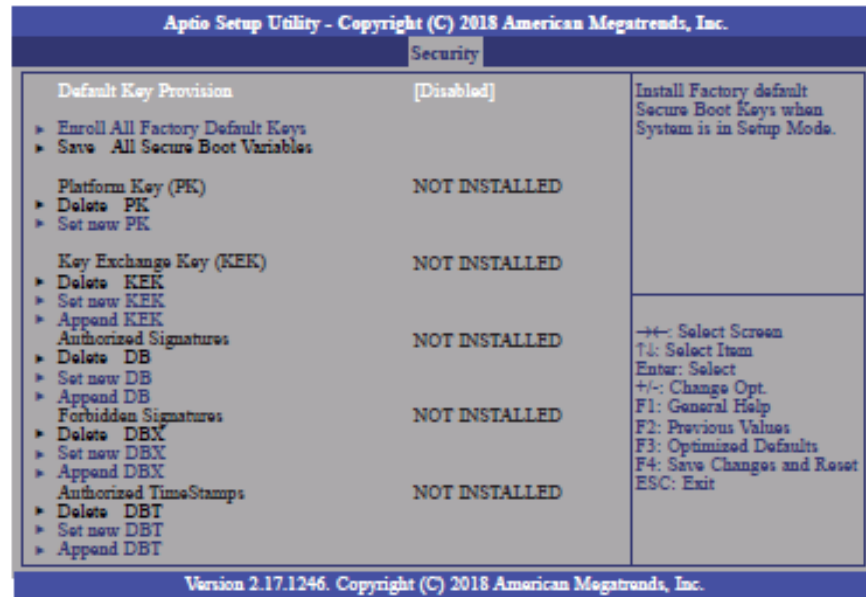


BIOS Parameter	Description
Default Key Provision	Enable or disable to install factory default secure boot keys when the system is in setup mode. When enabled, a pop-up window will display. Select Yes and press Enter to install factory default keys.
Enroll All Factory Default Keys	Select Yes and press Enter to install ALL factory default keys, including PK, KEK, DB, DBX, and DBT. Change takes effect after reboot.
Set New PK	Select Yes and press Enter to set a new PK or select No and press Enter to load it from a file on external media.
Set new KEK	Select Yes and press Enter to set a new KEK or select No and press Enter to load it from a file on external media.
Append KEK	Select Yes and press Enter to set a new KEK or select No and press Enter to load it from a file on external media.
Set new DB	Select Yes and press Enter to set a new DB or select No and press Enter to load it from a file on external media.
Append DB	Select Yes and press Enter to set a new DB or select No and press Enter to load it from a file on external media.
Set new DBX	Select Yes and press Enter to set a new DBX or select No and press Enter to load it from a file on external media.
Set new DBT	Select Yes and press Enter to set a new DBT or select No and press Enter to load it from a file on external media.
Append DBT	Select Yes and press Enter to set a new DBT or select No and press Enter to load it from a file on external media.

3.6.20 Save & Exit

Menu Options

Figure 36: Menu Options

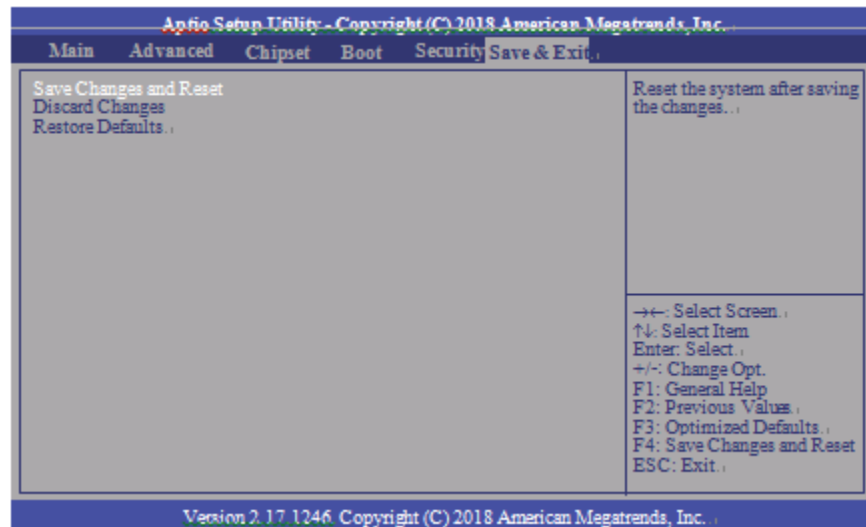

BIOS Parameter	Description
Save Changes and Reset	To save the changes, select this field and then press Enter . A dialog box will appear. Select Yes to reset the system after saving all changes made.
Discard Changes	To discard the changes, select this field and then press Enter . A dialog box will appear. Select Yes to reset the system setup without saving any changes.
Restore Defaults	Enter . A dialog box will appear. Select Yes to restore the default values of all the setup options.


Updating the BIOS

To update the BIOS, you will need the BIOS file and a flash utility. Please contact technical support or your sales representative for the files. The contact information is located at the end of this document.

3.7 Accessing the BIOS (Panel PC with AMD Ryzen)

3.7.1 Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

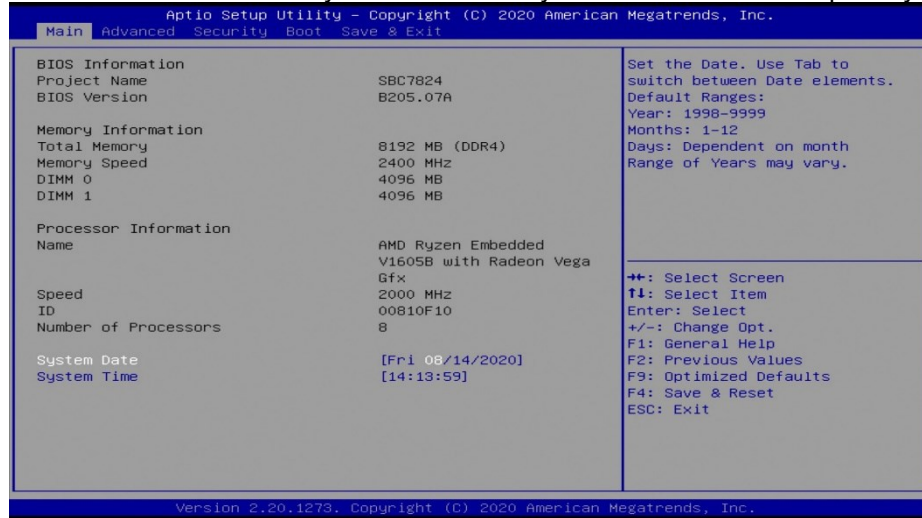


BIOS Parameter	Description
System Language	Choose the system default language.
System Date	The date format is <day>, <month>, <date>, <year>. Day displays a day, from Sunday to Saturday. Month displays the month, from 01 to 12. Date displays the date, from 01 to 31. Year displays the year, from 1980 to 2099.
Time	The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

3.7.2 AMD Chipset Settings

This section configures AMD CBS parameters.

Figure 37: AMD Chipset Setting

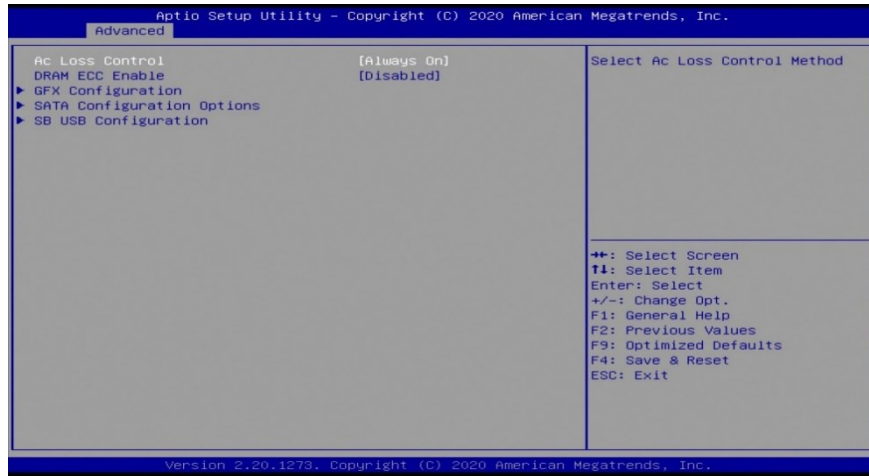


BIOS Parameter	Description
Ac Loss Control	Select Ac Loss Control Method.
DRAM ECC Enable	Use this option to enable/disable DRAM ECC. The auto will set ECC to enable.
GFX Configuration	This field is used to configure UMA Mode and NB Azalia.
SATA Configuration	This section is used to configure the SATA controller and M.2-M.
SB USB Configuration	This section is used to enable/disable USB and Micro SD.

3.7.3 Trusted Computing

This section is used to configure the Trusted Computing settings


Figure 38: Trusted Computing

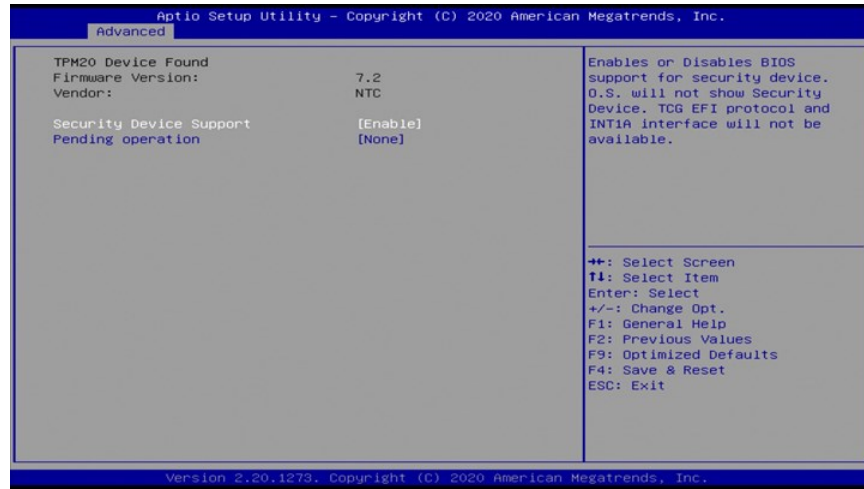

BIOS Parameter	Description
Security Device Support	Enable or disable BIOS support for a security device. O.S. will not show a security device. TCG EFI protocol and INT1A interface will not be available.
Pending Operation	Schedule an operation for the security device. Your computer will reboot during restart to change the state of the security device.
PCI-E Port Configuration	This section configures PCI-E Port parameters.

3.7.4 PCI-E Port Configuration


Figure 39: PCI-E Port Configuration

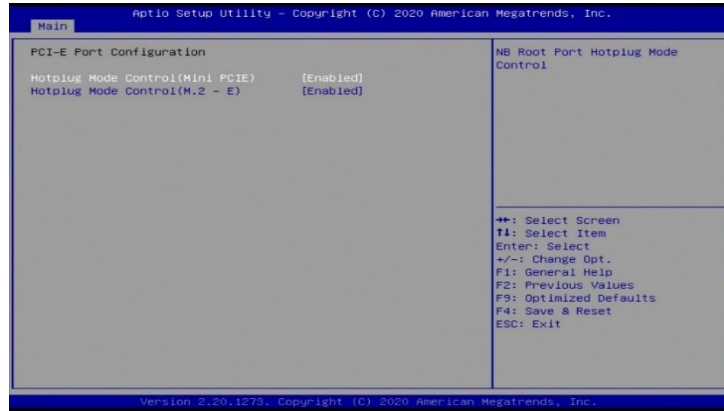

BIOS Parameter	Description
Hotplug Mode Control(Mini PCIE)	To enable/disable Hotplug Mode Control of Mini PCIe.
Hotplug Mode Control (M.2 -E)	To enable/disable Hotplug Mode Control of M.2-E.
Dimming Control	This section is used to configure displays and dimming.

3.7.5 Advanced

Figure 40: Advanced

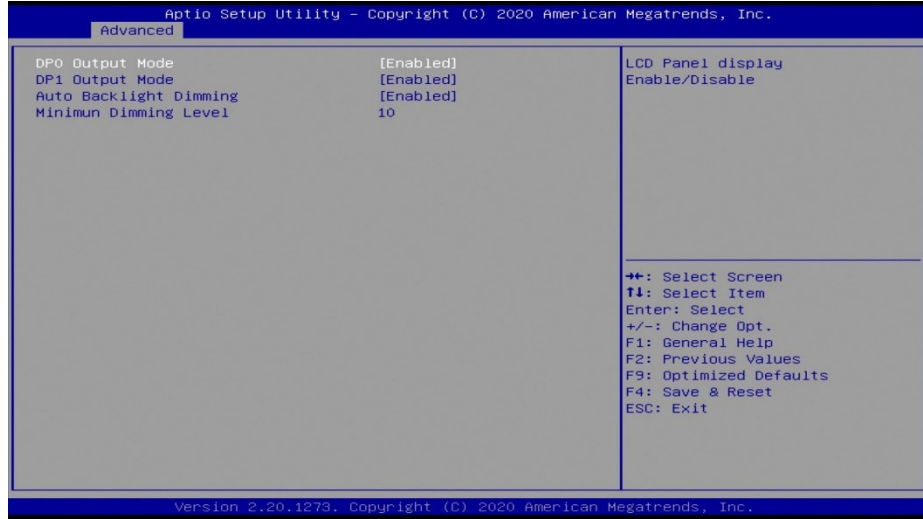


BIOS Parameter	Description
DP0 Output Mode	To enable/disable LCD panel display.
DP1 Output Mode	To enable/disable rear DP display.
Auto Backlight Dimming	To dim backlight by TB573D.
Minimum Dimming Level	Ranges from 1~20%.

3.7.6 ACPI Configuration

This section configures system ACPI parameters.


Figure 41: ACPI Configuration

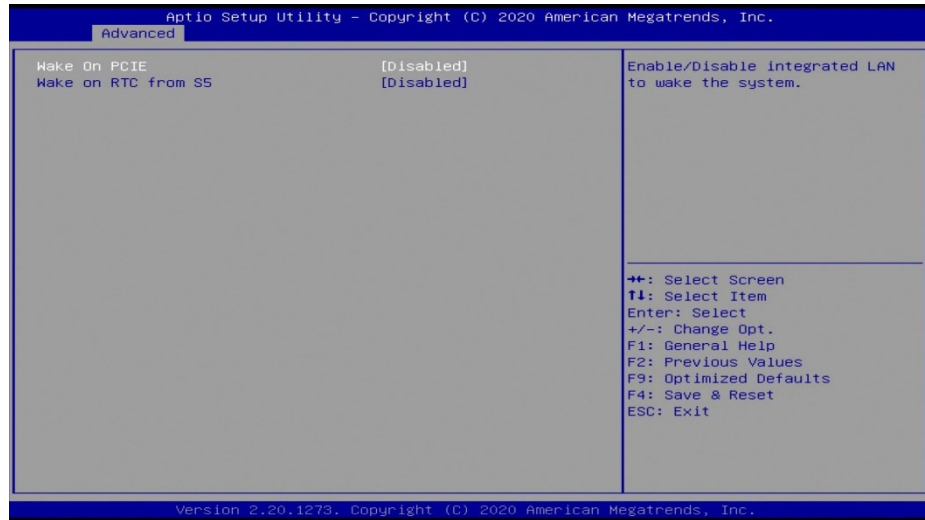

BIOS Parameter	Description
Wake on PCIe	Enable/disable integrated LAN to wake the system
Wake on RTC from S5	Resume by RTC Alarm after S5 shutdown
NCT6112D Super IO Configuration	This section is used to configure the parameters of the system super IO chip.

3.7.7 NCT611D Super IO Configuration


Figure 42: NCT611D

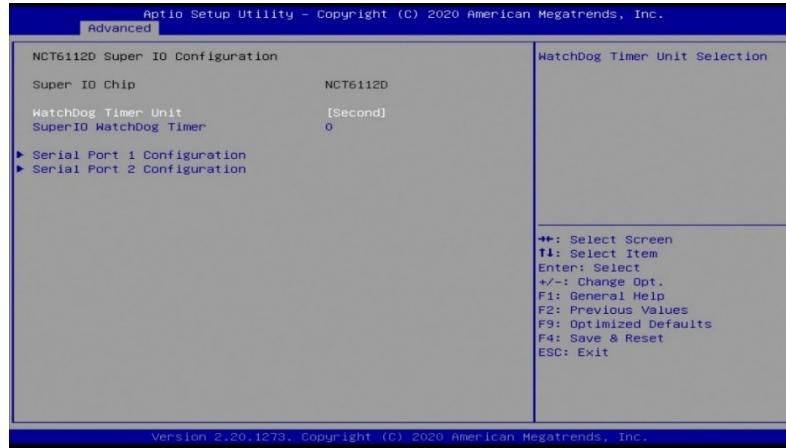

BIOS Parameter	Description
WatchDog Timer Unit	Select WatchDog Timer Unit by second or minute.
SuperIO WatchDog Timer	Disable the timer by value 0 or set another timeout value to enable the timer.
Serial Port 1 Configuration	Enable or disable serial port 1(COMA).
Serial Port 2 Configuration	Enable or disable serial port 2(COMB). Switch Auto Flow and Full-Duplex Mode of RS485.
NCT6112D HW Monitor	Monitor hardware status.

3.7.8 Serial Port Console Redirection


Figure 43: Serial Port Console Redirection

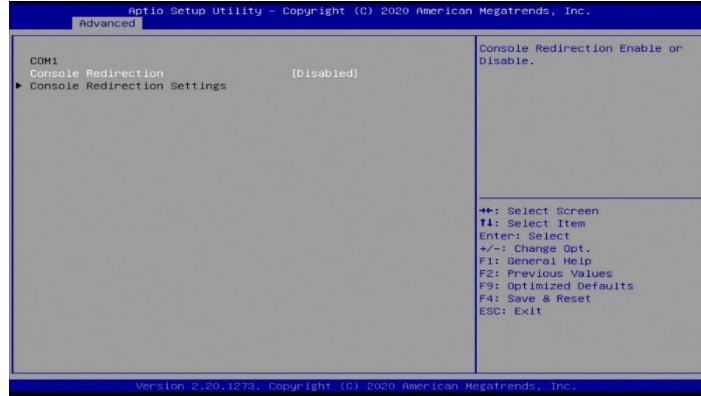

BIOS Parameter	Description
Console Redirection	Enable / disable console direction.
Console Redirection Settings	Specify how the host computer and the remote one (which the user is using) will exchange data. Both computers should have the same or compatible settings. Please refer to the next page.

3.7.9 Serial Port Console Redirection

Figure 44: Serial Port Console Redirection

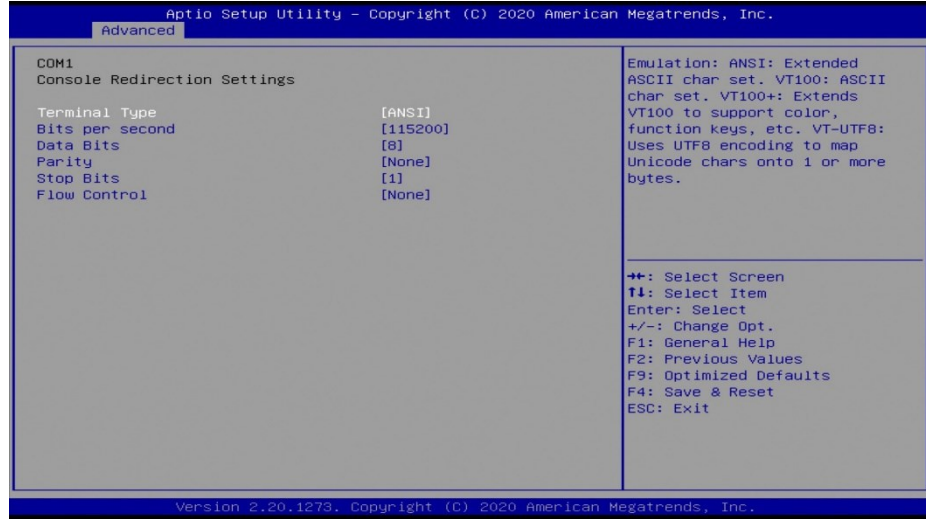


BIOS Parameter	Description	
ANSI	VT100 – ASCII CharSet	
	VT100+ Extends VT100 to Support color and function keys	
	VT-UTF8 - Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.	
Bits per Second	9600 / 19200 / 38400 / 57600 / 115200 - Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/ stop signals.	
Data Bits	7 / 8	
Parity	A parity bit can be sent with the data bits to detect some transmission errors.	Even - Parity bit is 0 if the num of 1's in the data bits is even.
		Odd - Parity bit is 0 if the num of 1's in the data bits is odd.

BIOS Parameter	Description	
		<p>Mark - Parity bit is always 1</p> <p>Space - Parity bit is always 0.</p> <p>Note: Mark and Space parity do not allow for error detection.</p>
Stop Bits	<p>1 / 2 - Stop bits indicate the end of a serial data packet(A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.</p>	
Flow Control	<p>None / Hardware RTS/CTS - Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.</p>	

3.7.10 CPU Configuration

This section is used to configure the CPU.

Figure 45: CPU Configuration

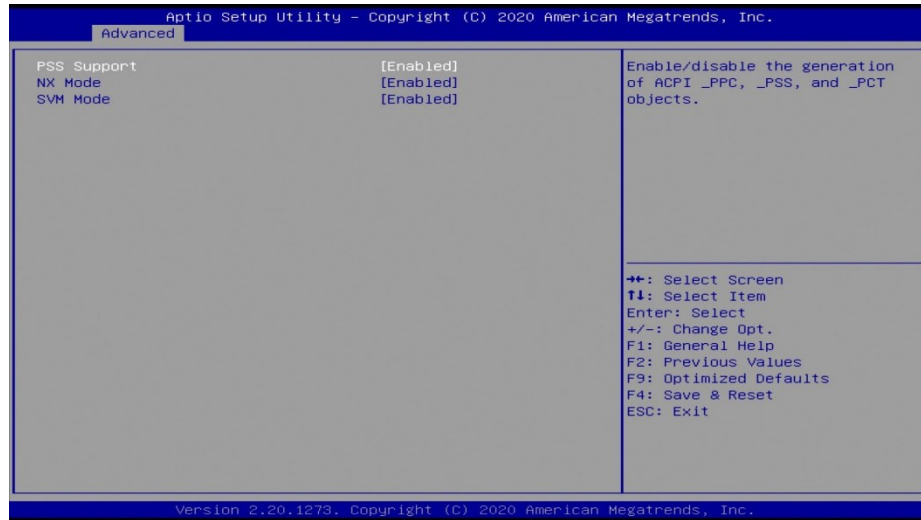


BIOS Parameter	Description
PSS Support	Enable or disable the generation of ACPI _PPC, _PSS, and _PCT objects.
NX Mode	Enable or disable the No-execute page protection function.
SVM Mode	Enable or disable CPU Virtualization

3.7.11 USB Configuration

This section is used to configure the parameters of a USB device.

Figure 46: USB Configuration

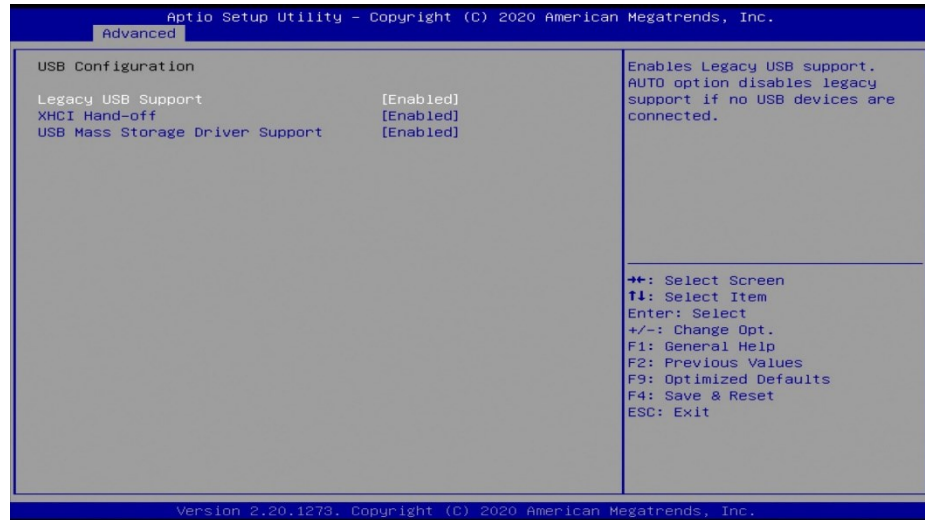


BIOS Parameter	Description
Legacy USB Support	Enable or disable Legacy USB support.
XHCI Hand-off	This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	Enable or disable the support of the USB Mass Storage Driver.

3.7.12 CSM Configuration

Enable or disable CSM options, Option ROM execution settings, etc.

Figure 47: CSM Configuration

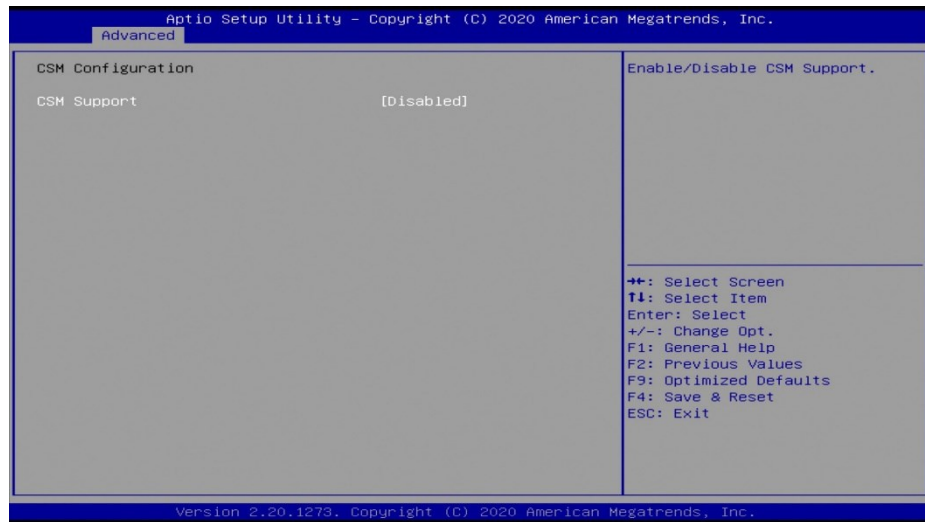


BIOS Parameter	Description
CSM Support	Enable or disable CSM support

3.7.13 Network Stack Configuration

This section is used to enable or disable network stack settings.


Figure 48: Network Stack Configuration

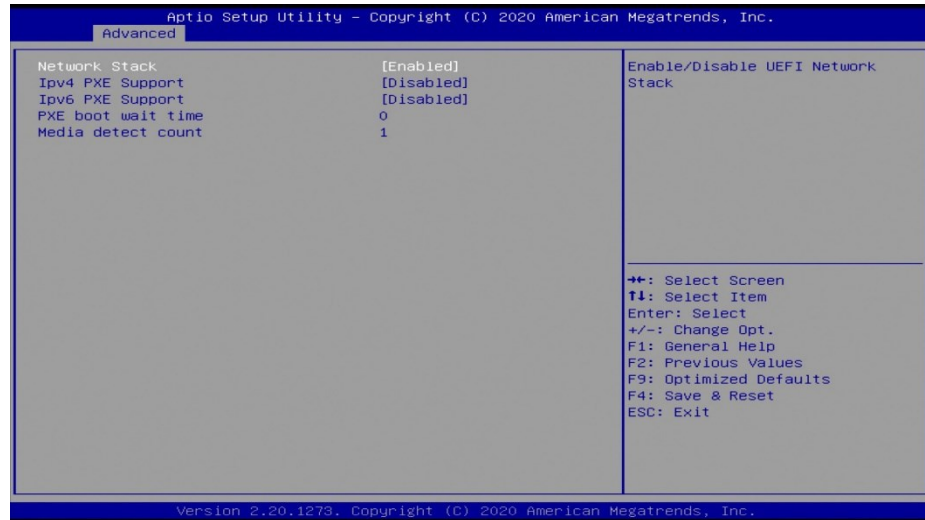

BIOS Parameter	Description
Network Stack	Enable or disable the UEFI network stack. When Network Stack is set to enabled, the below settings will be shown.
Ipv4 PXE Support	When enabled, Ipv4 PXE boot supports. When disabled, Ipv4 PXE boot support will not be available.
Ipv6 PXE Support	When enabled, Ipv6 PXE boot supports. When disabled, Ipv6 PXE boot support will not be available.
PXE Boot Wait Time	Enter the wait time value for pressing ESC to abort the PXE boot
Media Detect Count	The number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

3.7.14 Security

Figure 49: Security

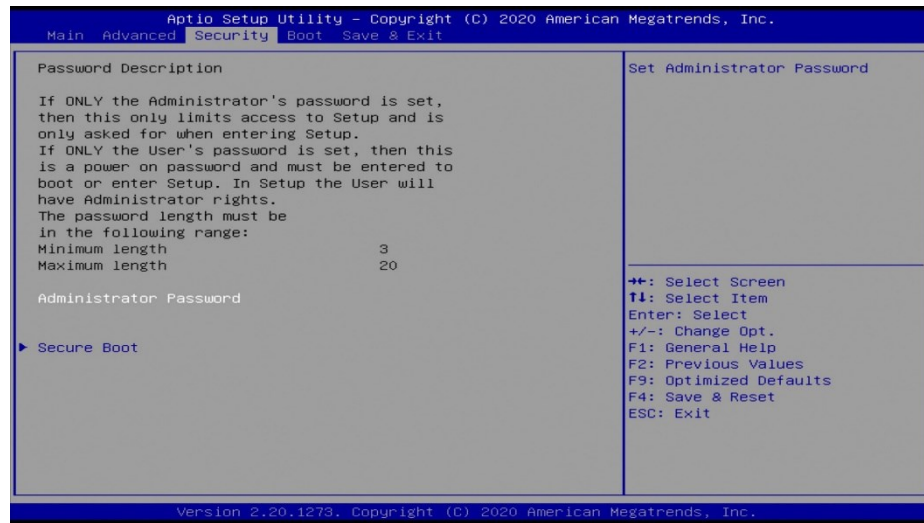


BIOS Parameter	Description
Administrator Password	Set the administrator password
Secure Boot	Secure boot configuration

3.7.15 Secure Boot menu

This section is used to configure customizable secure boot settings.


Figure 50: Secure Boot Menu

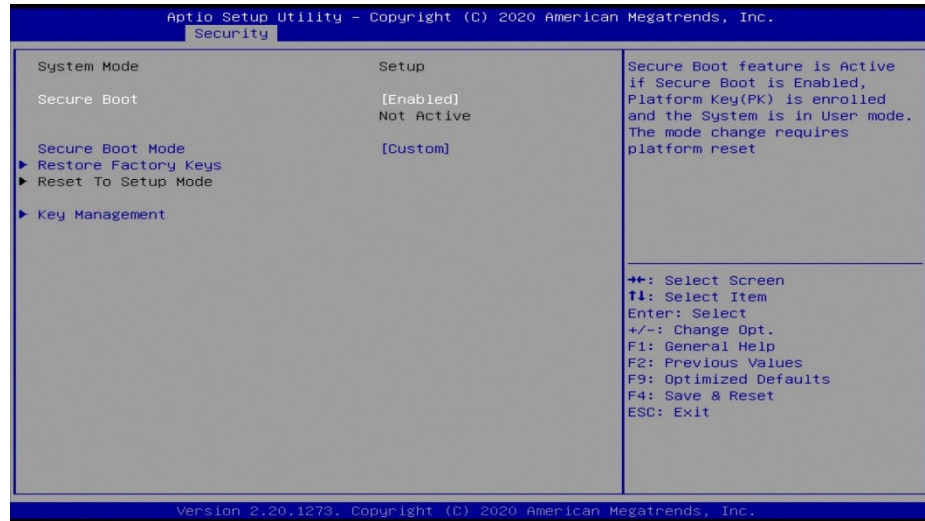

BIOS Parameter	Description
Secure Boot	Enable or disable secure boot. Secure Boot features are active if Secure Boot is enabled, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires a platform reset.
Secure Boot Mode	Select secure boot mode: Standard or Custom. In the Custom mode, secure boot policy variables can be configured by a physically present user without full authentication.
Restore Factory Keys	Force System to User mode. Install factory default Secure Boot key databases.
Reset to Setup Mode	Delete all Secure Boot key databases from NVRAM
Key Management	Enable expert users to modify Secure Boot Policy variables without full authentication. See the next page for details.

3.7.16 Vendor Keys


Figure 51:Vendor Keys

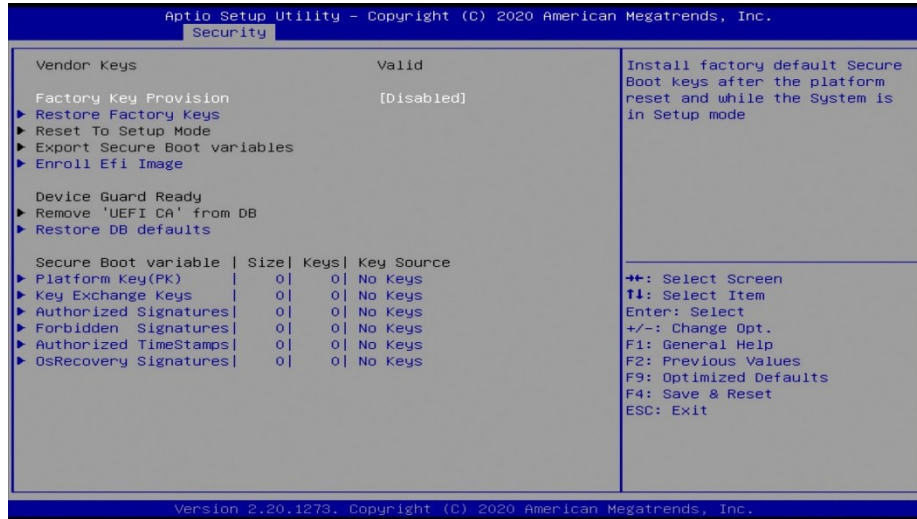

BIOS Parameter	Description
Factory Key Provision	Install factory default Secure Boot Keys after the platform reset and while the System is in Setup mode.
Restore Factory Keys	Force System to User mode. Install factory default Secure Boot key databases.
Reset to Setup Mode	Delete all Secure Boot key databases from NVRAM.
Export Secure Boot Variables	Export current secure boot variables.
Enroll Efi Image	Allow the image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database. (dB)
Device Guard Ready- Remove 'UEFI CA' from DB	Device Guard ready system must not list 'Microsoft UEFI CA' Certificate in Authorized Signature databases (dB)
Restore DB defaults	Restore DB variable to factory defaults.

3.7.17 Secure Boot Variables

Figure 52: Secure Boot Variables

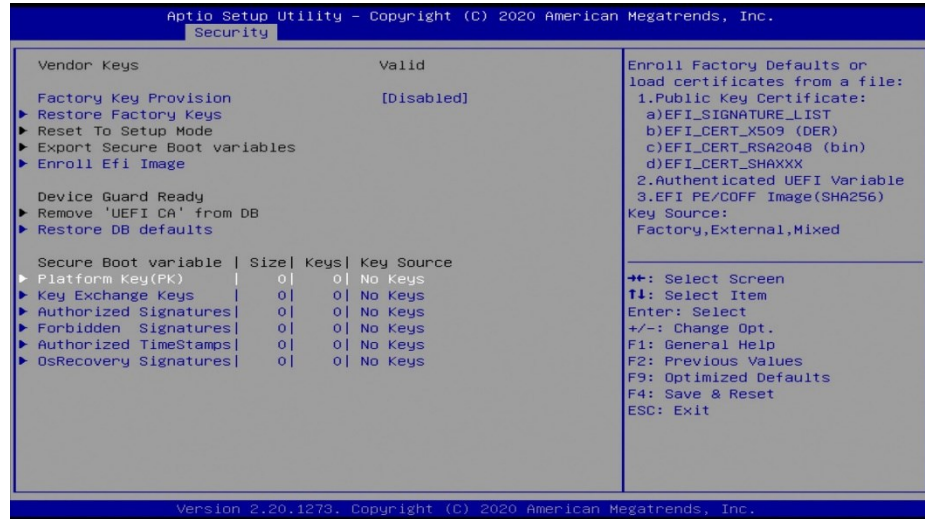

Enroll Factory Defaults or load certificates from a file:


1. Public Key Certificate:
 - a) EFI_SIGNATURE_LIST
 - b) EFI_CERT_X509 (DER)
 - c) EFI_CERT_RSA2048 (bin)
 - d) EFI_CERT_SHAXXX
2. Authenticated UEFI Variable
3. EFI PE/COFF Image(SHA256)

Key Source:

Factory, External, Mixed

3.7.18 Boot


Figure 53: Boot

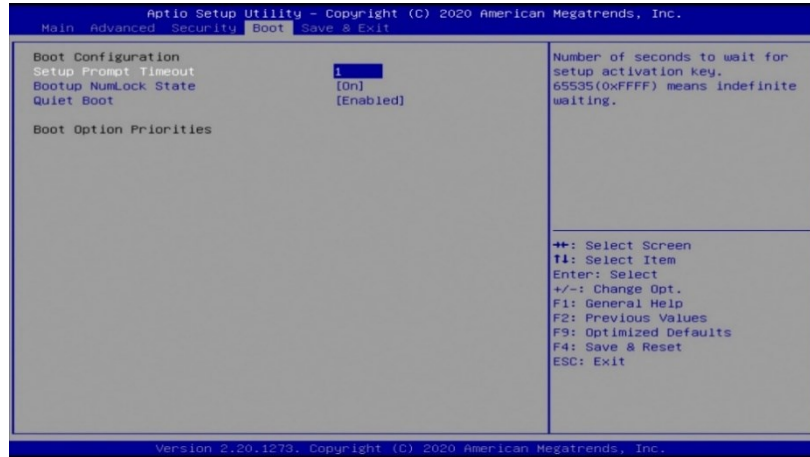

BIOS Parameter	Description
Setup Prompt Timeout	Select the number of seconds to wait for the setup activation key. 65535(0xFFFF) denotes indefinite waiting.
Bootup NumLock State	This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.
Quiet Boot	Enable or disable the Quiet Boot option.
Boot Option Priorities	Select the system boot order

3.7.19 Save & Exit

Figure 54: Save & Exit'

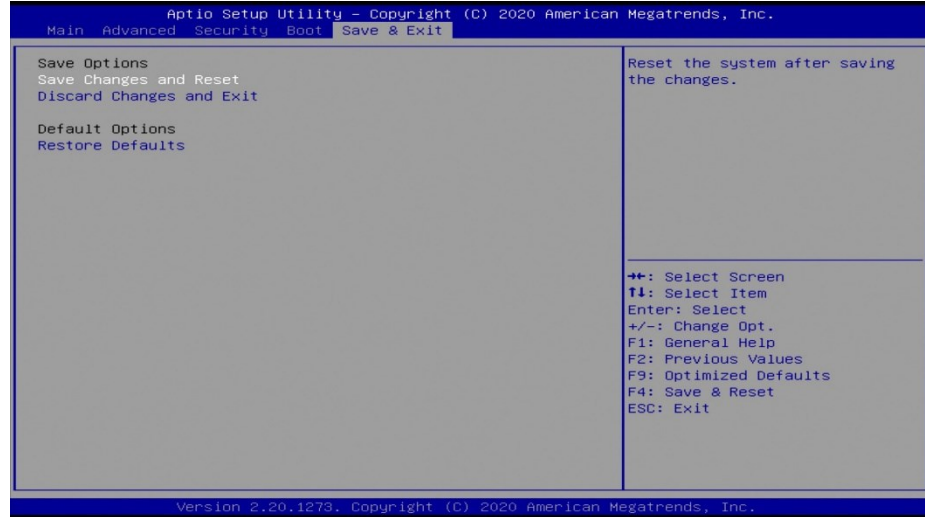

BIOS Parameter	Description
Save Changes and Reset	To save the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system after saving all changes made.
Discard Changes and Exit	To discard the changes, select this field and then press <Enter>. A dialog box will appear. Select Yes to reset the system setup without saving any changes
Restore Defaults	To restore and load the optimized default values, select this field and then press <Enter>. A dialog box will appear. Select Yes to restore the default values of all the setup options
Updating the BIOS	To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files.

3.7.20 Updating the BIOS

To update the BIOS, you will need the new BIOS file and a flash utility. Please contact technical support or your sales representative for the files.

Note: BIOS SPI ROM

1. Due to safety concerns, the BIOS (SPI ROM) chip cannot be removed from this system board and used on another system board of the same model.
2. The BIOS (SPI ROM) on this system board must be the original equipment from the factory and cannot be used to replace one which has been utilized on other system boards.
3. If you do not follow the methods above, the Management Engine will not be updated and will cease to be effective.

Section 4: PACSystems RXi - Web Panel Overview




An Emerson display that provides the ability to view web-hosted interfaces and dashboards.

4.1 Primary Technical Features

- Yocto Linux OS Version 5.15.5
- HTML5 Capability

4.2 Display Architecture Options

Figure 55: Backing Module and Screen Compatibility

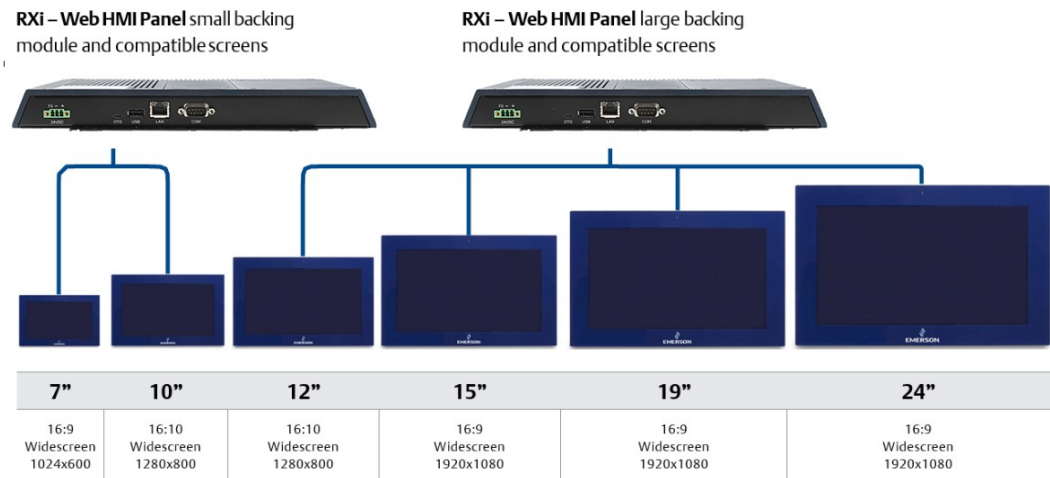

4.3 Configuration and Setup of RXi - Web Panel

4.3.1 Homepage Setup

Once the non-privileged wpuser and privileged wadmin password are set, the user will need to input the URL/IP address. The URL/IP address will enable the user to complete first-time set-up activities. After the Homepage configuration, the RXi Web Panel should boot with the Chromium browser by default in *Kiosk* mode with the URL/IP address that they input on the first start up.

After the password is setup successfully click on the **Home** button. The Homepage Setup page will be shown to the user as shown in Figure 56 or the URL configuration.

The user will need to enter a valid URL in the homepage text field as highlighted with blue (Figure 56) and click on **Apply**. After clicking on the **Apply** button, the chromium browser opens in *Kiosk* mode with configured URL.


Note: RXi WebPanel has no malicious URL checking mechanism and it is the system administrator's responsibility to enter a valid URL/IP Address to access the Web Page.

⚠ CAUTION

NO URL CHECKING MECHANISM

RXi WebPanel has no malicious URL checking mechanism and it is the system administrator's responsibility to enter a valid URL/IP Address to access the Web Page.

Figure 56: Homepage Setup

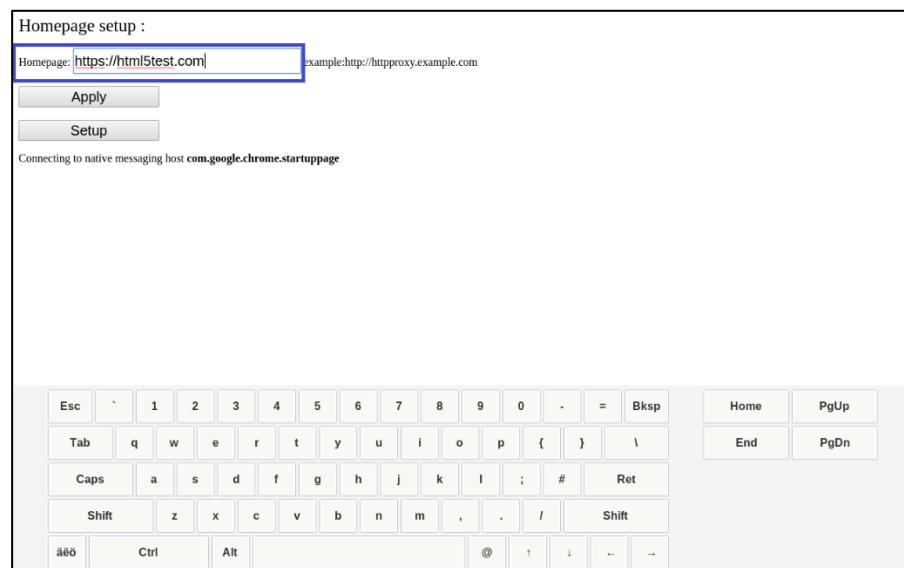


4.3.2 System Setup

System Setup page is used to configure the Web Panel settings.

Steps to Open Setup Pages

1. Navigate to setup Page either by clicking the **Setup** button on the Homepage setup page as shown in Figure 57 or on the startup screen as shown in Figure 58 to access the System Setup page. The user can swipe gesture to open setup page as discussed in Swipe gesture section.

Figure 57: Homepage Setup

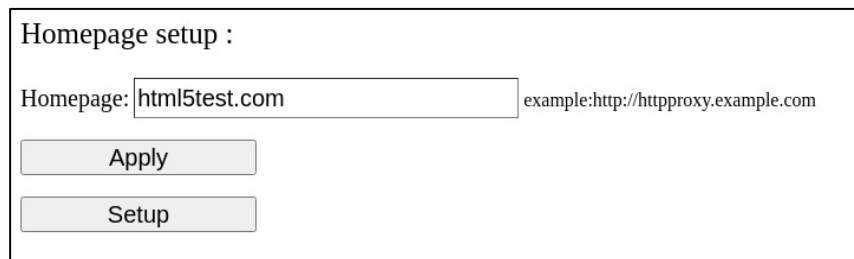

Homepage setup :

Homepage: example:http://httpproxy.example.com

Figure 58: Startup Sreen



Set wpuser password

Current password:

New password:

Confirm new password:

Set wpadmin password

Current password:


New password:

Confirm new password:

Note: Home and Setup button will not be visible until wpuser and wpadmin password is set properly.

2. The user needs to provide the non-privileged wpuser and privileged wadmin credentials and click on the **Confirm** button to access Web Panel settings.

Figure 59: System Setup

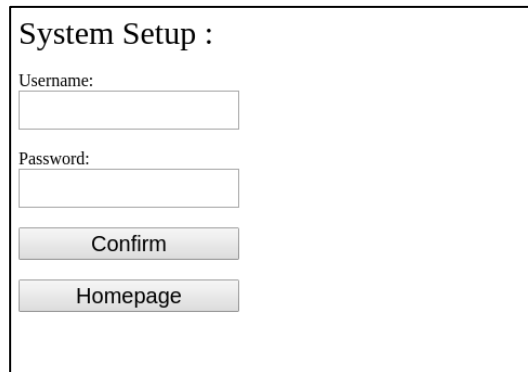

The screenshot shows a web form titled "System Setup :". It contains two input fields: "Username:" and "Password:". Below the "Password:" field are two buttons: "Confirm" and "Homepage".

3. Proceed to the next section.
-

Setup Page When Logged In Using Privileged Wpadmin


 




This is the System Setup page as viewed when logged in as wpadmin.





Figure 60: System Setup

System Setup :

File System Build Date:

Authenticated User: **wpadmin**





SSH Server Key Fingerprint

Hash:

MD5

SHA256

Key Type


ED25519

RSA

ECDSA

Fingerprint

visual

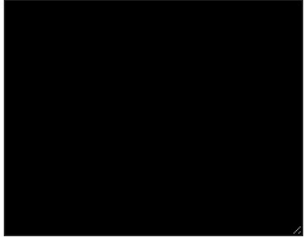

Setup Page When Logged In Using Non-privileged wpuser


 




This is the System Setup page as viewed when logged in as Non-Privileged wpuser .

 



Figure 61: System Setup Homepage

System Setup :

File System Build Date:

Authenticated User:





SSH Server Key Fingerprint

Hash:


MD5
 SHA256











Key Type





ED25519
 RSA
 ECDSA

Fingerprint

visual



WebPanel Settings	Icons Displayed	Description
File System Build Date	File System Build Date:	Display the File System Build Date
Authenticated user	Authenticated User:	Display the Authenticated user
Brightness		Click on Brightness icon to adjust the Brightness and configure Screen standby interval timer
Date and Time		Click on Date and Time icon to set the date and time.
Password Settings		Click on Password Settings icon to set the user and root password again.
Home page		Click on Home icon to Navigate to Home page. Chromium browser opens in Kiosk mode with the URL/IP Address that the user has configured on the first start up.
Network Setup		Click on Network icon to setup the network.
URL Page		Click on URL to input the url to access the Web Page.
Terminal		Click on terminal icon to open the terminal
Display Orientation		Click 270°, 180°, or 90° to change the orientation of the webpanel. By default, 0° is set.
Save		Click on Save Button to save the configured UI settings.
Kiosk Mode Exit		Click on Kiosk Mode Exit button to exit the running Chromium Browser from Kiosk Mode to normal Mode.

WebPanel Settings	Icons Displayed	Description
Desktop Restart		Click on Desktop Restart to close and start the browser again.
System Reboot		Click on System Reboot to reboot the complete device.
Enable/Disable SSH Server		Click on Enable SSH Server button to enable the SSH and click on Disable SSH Server button to disable the SSH. By default, SSH is disabled.
Enable/Disable USB Storage		Click on Enable USB Storage button to enable USB Storage and click on Disable USB Storage button to disable the USB Storage. This option needs System Reboot . By default , USB Storage is disabled.

Following are the restrictions on wpuser privileges for the System Setup page usage.

- The privileged wpadmin only can enable/ disable the SSH option for secure connectivity.
- Non-privileged wpuser cannot change the privileged wpadmin password.
- Non-privileged wpuser only can use terminal emulator like putty to access Web Panel over SSH.
- The privileged wpadmin only can enable/ disable the USB storage option.

Note: If the user clicks any of the following buttons, then the user it will be prompted with confirmation dialogue box:


- Kiosk Mode Exit
- Desktop Restart
- System Reboot
- Enable/Disable SSH Server
- Enable/Disable USB Storage
- Save

Click **Ok** to proceed with operation or click on **Cancel** to cancel the operation as shown below:

Swipe Gesture To Open Setup Page

Swipe your finger from **top to bottom in the upper left corner** of any screen to open the setup page. The user needs to swipe the finger slowly.

Figure 62: Swipe Gesture

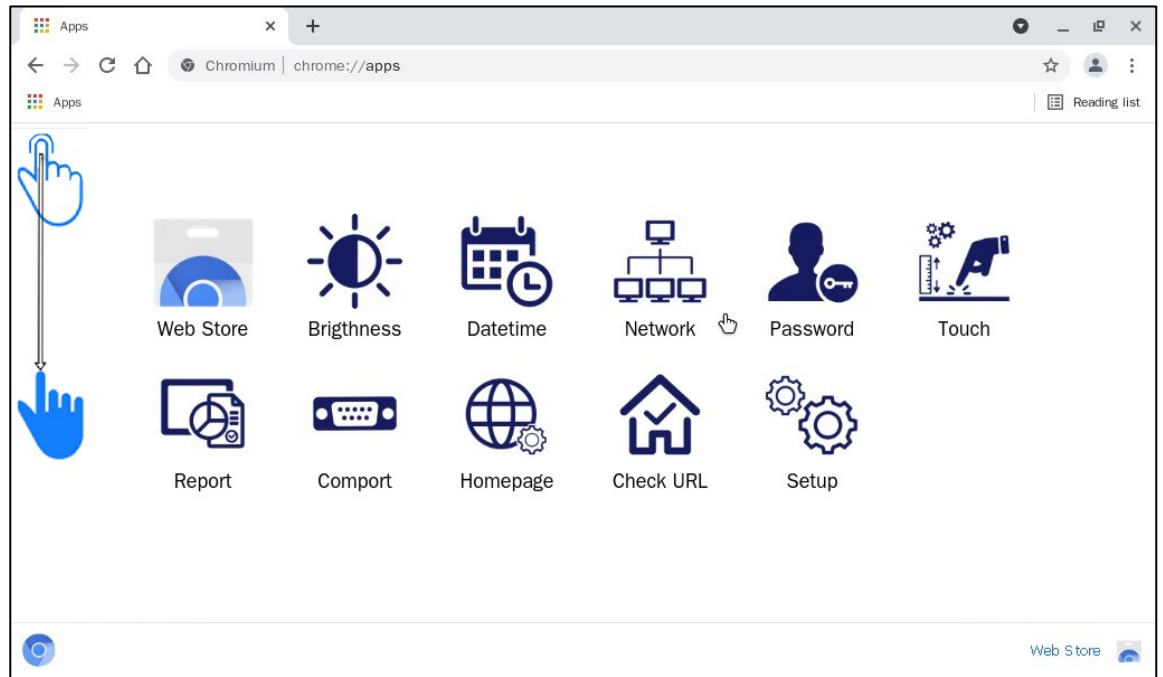

4.3.3 Configuration and Setup

Chromium Password Settings

When the RXi Web Panel boots for the first time, the following screen (Figure 63) will display and require the user to change the default passwords for the Non-privileged wpuser and wpadmin password (privileged).

Default Password for Non-privileged wpuser and privileged wpadmin user:

Non-privileged wpuser : **EMwpuser**

Privileged wpadmin: **EMwpadmin**

The password must meet the following criterion:

- Must contain at least 8 characters
- Must be fewer than 32 characters
- Must be a combination of both upper-case and lower-case letters (case sensitivity)
- Must contain at least one numeric character (0-9)

Note : Web Panel will not allow to set same passwords for privileged wpadmin and non-privileged wpuser accounts.

Figure 63: Password Screen

The screenshot shows a web interface for setting passwords. It is divided into two main sections: 'Set wpuser password' and 'Set wpadmin password'. Each section contains three input fields: 'Current password:', 'New password:', and 'Confirm new password:'. Below the input fields in each section is an 'Apply' button. The entire form is enclosed in a rectangular border.

1. Enter current (default) password.
2. Then enter and confirm new password.
3. Click on **Apply**.


Note: **Home** and **Setup** button will not be visible until wpuser and wpadmin password is set properly.

4.3.4 Adjusting Screen Sensitivity

TouchTool Steps

1. Navigate to Setup Page and provide the non-privileged wpuser or privileged wpadmin credentials and click on **Confirm**.

Figure 64: System Setup Login

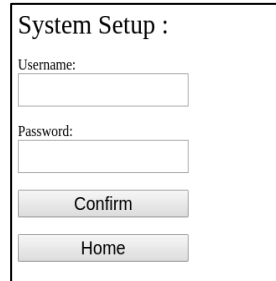


System Setup :

Username:

Password:

2. Select **Kiosk Mode Exit**.

Figure 65: Kiosk Mode Exit

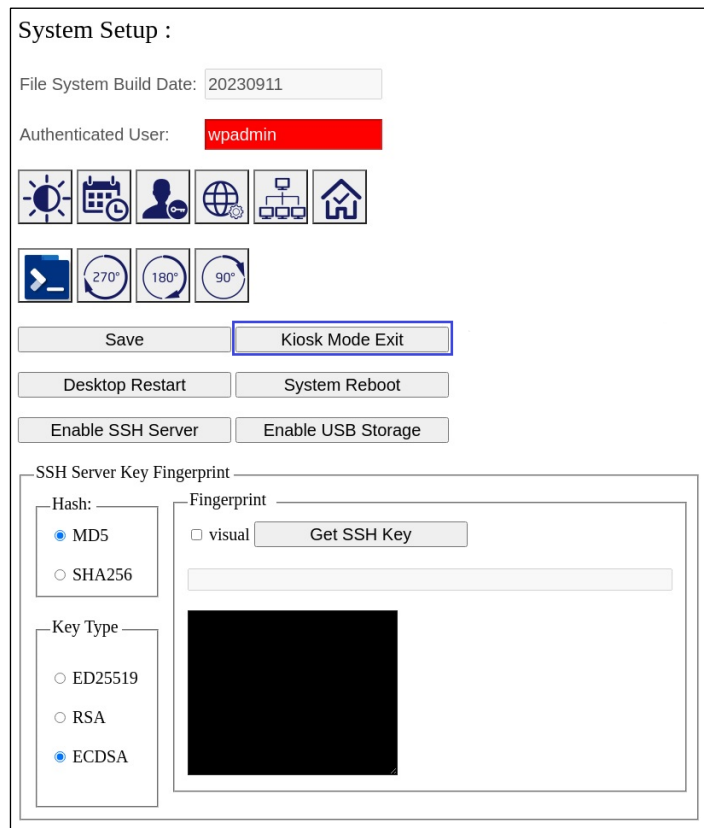

System Setup :

File System Build Date: 20230911

Authenticated User: wpadmin

SSH Server Key Fingerprint

Hash:


MD5
 SHA256

Key Type

ED25519
 RSA
 ECDSA


Fingerprint

visual




3. Click the Apps button in the upper-left corner of the Chromium browser.

Figure 66: Open Apps

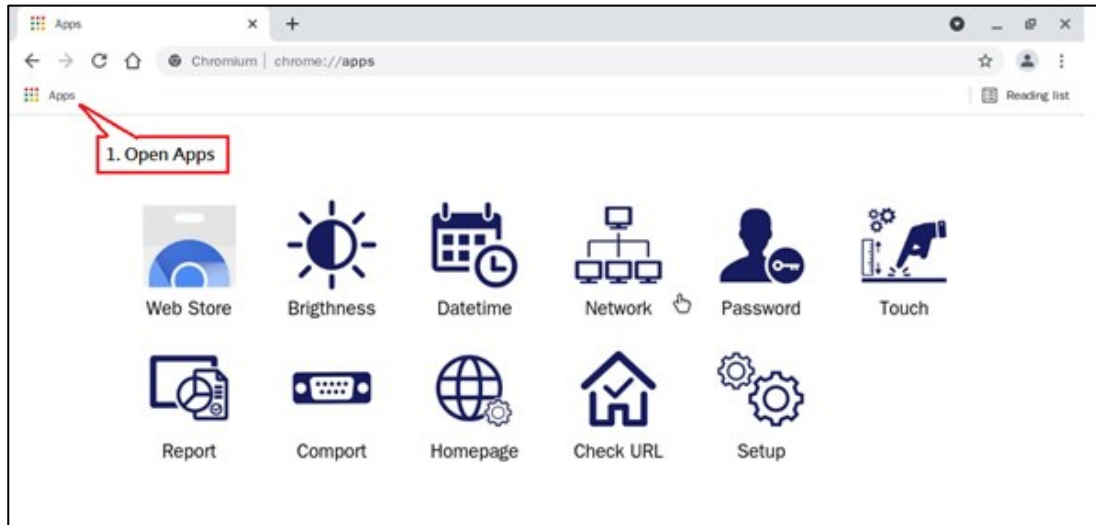


4. Select **Touch** for touchpoint and screen sensitivity adjustment as shown in Figure 67.

Figure 67: Touch

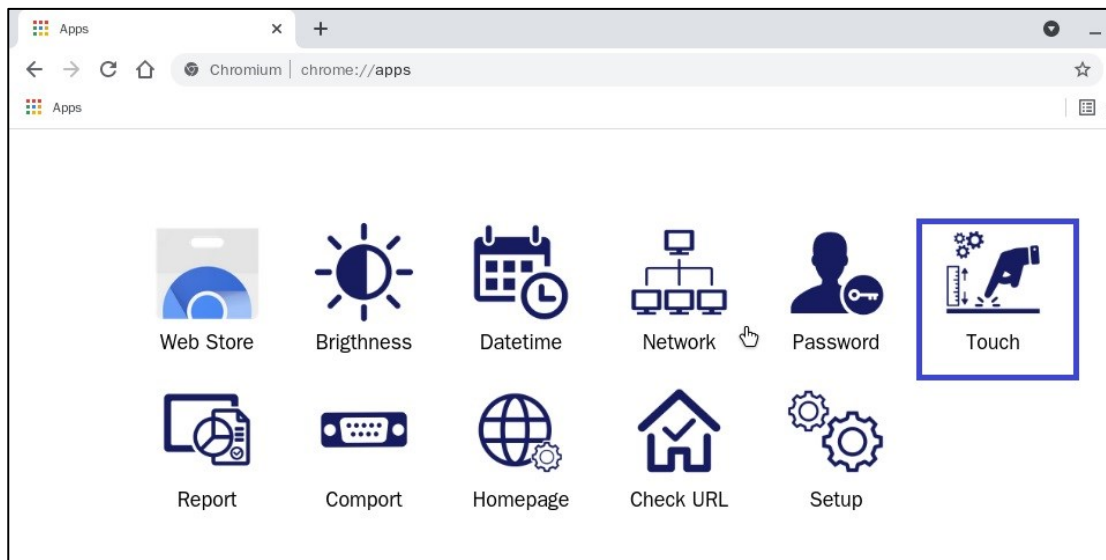


5. Select how many touchpoints are required.

Figure 68: EETI Touch Tool

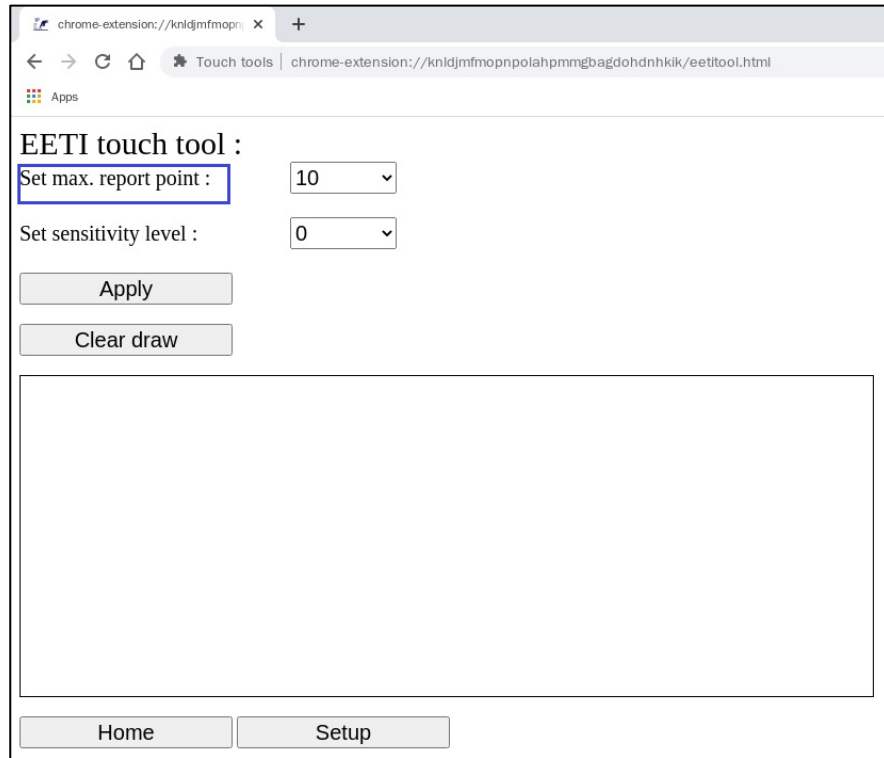

6. Set Sensitivity level appropriately based on the touchpoint

Figure 69: EETI Touch Tool

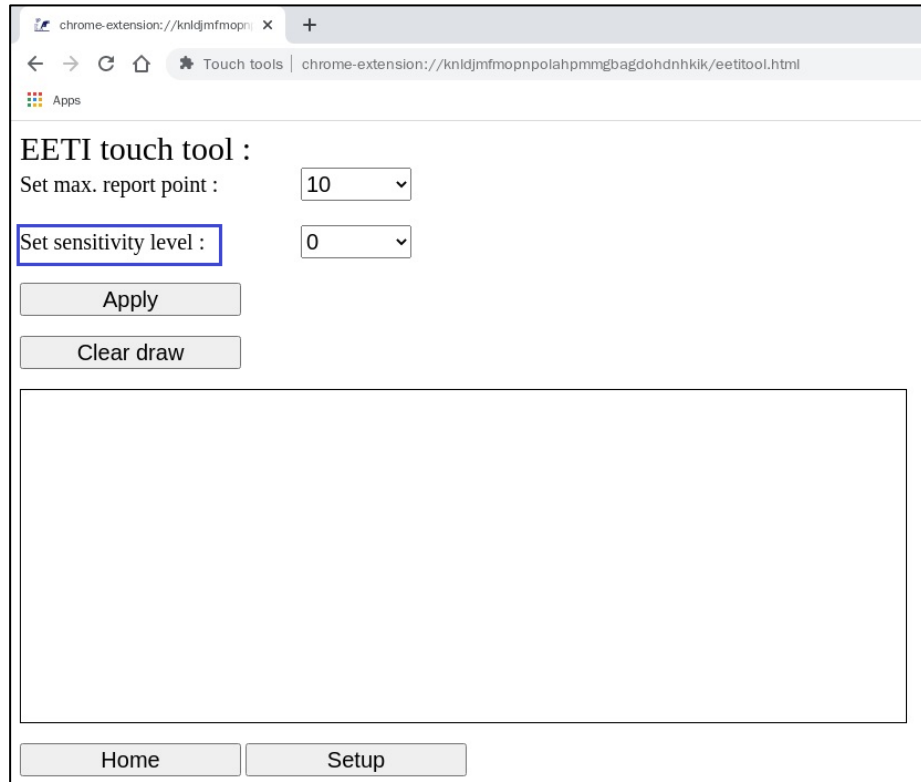


7. Click the **Apply** button.
8. Click the **Setup** button to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

Back to Kiosk Mode

Steps to go back to Kiosk mode if the user has exited the Kiosk Mode.


1. Open Apps as shown in below figure:

Figure 70: Open Apps

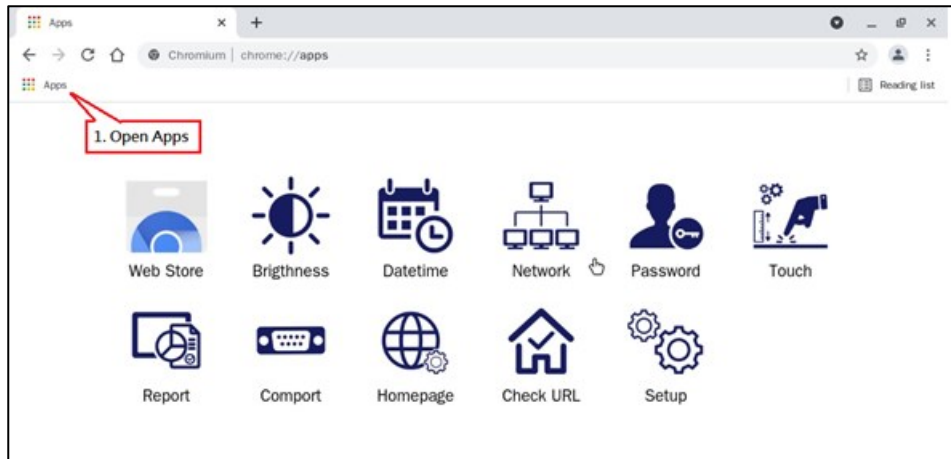

2. Select the **Setup** icon.

Figure 71: Setup

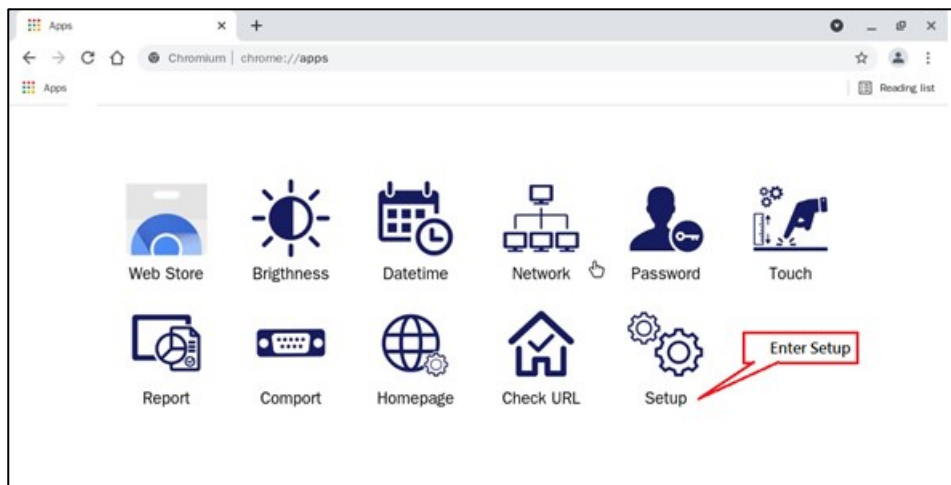

3. Select **Desktop Restart** as shown below to enter kiosk mode.

Figure 72: Desktop Restart

The screenshot displays the 'System Setup' interface. At the top, it shows 'File System Build Date: 20230911' and 'Authenticated User: wpadmin'. Below these are several icons for system settings, including a sun, calendar, user profile, globe, network, and home. There are also three rotation angle icons: 270°, 180°, and 90°. A row of buttons includes 'Save', 'Kiosk Mode Exit', 'Desktop Restart' (highlighted with a red border), 'System Reboot', 'Enable SSH Server', and 'Enable USB Storage'. The bottom section is titled 'SSH Server Key Fingerprint' and contains two sub-sections: 'Hash' with radio buttons for MD5 (selected) and SHA256, and 'Key Type' with radio buttons for ED25519, RSA, and ECDSA (selected). To the right, there is a 'Fingerprint' section with a 'visual' checkbox and a 'Get SSH Key' button, followed by a large black redacted area.

4.3.5 Adjusting Screen Brightness

1. Navigate to Setup Page and provide the non-privileged wpuser or privileged wpadmin credentials and click on **Confirm**.

Figure 73: System Setup



System Setup :

Username:


Password:

Confirm

Home

2. Select **Brightness** icon to adjust backlight dimming or ALS on/off control

Figure 74: Select Brightness from System Setup

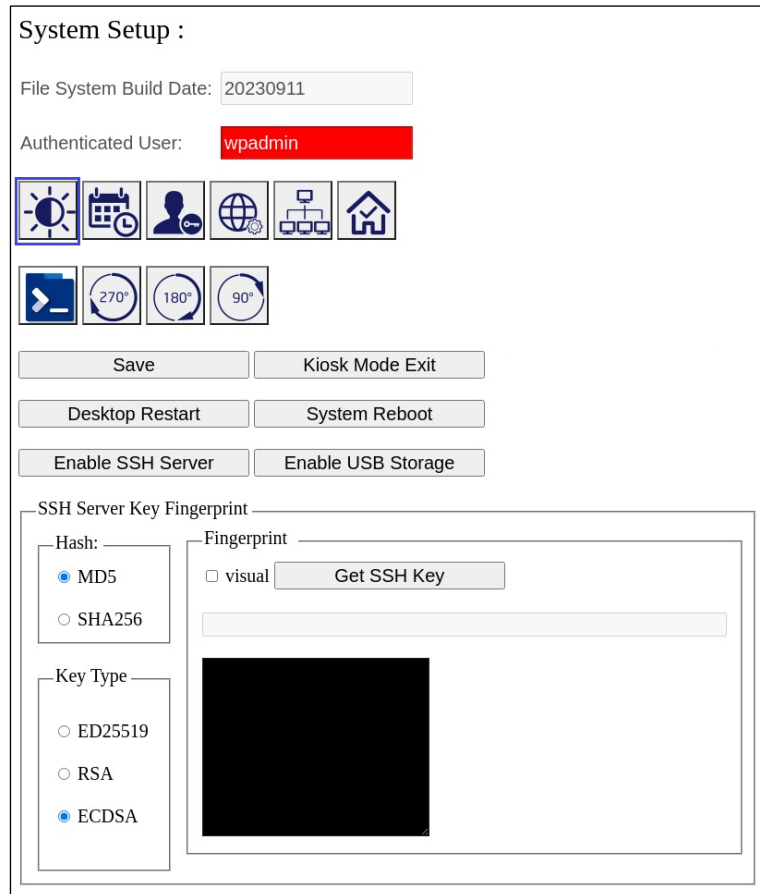

System Setup :

File System Build Date: 20230911

Authenticated User: wpadmin

Save Kiosk Mode Exit

Desktop Restart System Reboot

 
Enable SSH Server Enable USB Storage

SSH Server Key Fingerprint

Hash: MD5 SHA256

Key Type: ED25519 RSA ECDSA

Fingerprint: visual



Note: The RXi Web Panel uses a photodiode to sense the ambient light and in turn, the microcontroller reads the Ambient Light Sensor (ALS), adjusting the LCD backlight.

- The manual adjustment bar will only be shown when Ambient Light Sensor (ALS) is off.
 - Enable Ambient Light Sensor (ALS) ON to disable manual dimming control.
 - Alternatively, disable Ambient Light Sensor (ALS) ON to enable the manual dimming control.
3. The dimming level can be adjusted by inputting a number in the text field and clicking the Set button or clicking and dragging the adjustment bar.
 4. Click the Setup button to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

Figure 75: Brightness Setup

Brightness setup

Turn on ALS

85

Apply

Energy Saving Mode

0 ~30 minutes (0:disable): 0

Apply

Home Setup

Note: There is an internal setting for the minimum dimming level, which is 10% by default. When adjusting the dimming level below 10%, no change will be evident.

4.3.6 Energy Saving Mode

This is used to turn off the backlight when there is no activity happening on Web panel.

1. Navigate to Setup Page and provide the Non-privileged wpuser or privileged wpadmin credentials and click on **Confirm**


Figure 76: System Setup



A dialog box titled "System Setup :". It contains two input fields: "Username:" and "Password:". Below the fields are two buttons: "Confirm" and "Home".

2. Select **Brightness** icon to configure Energy Saving Mode. This will turn off the backlight when not in use

Figure 77: Brightness Adjustment

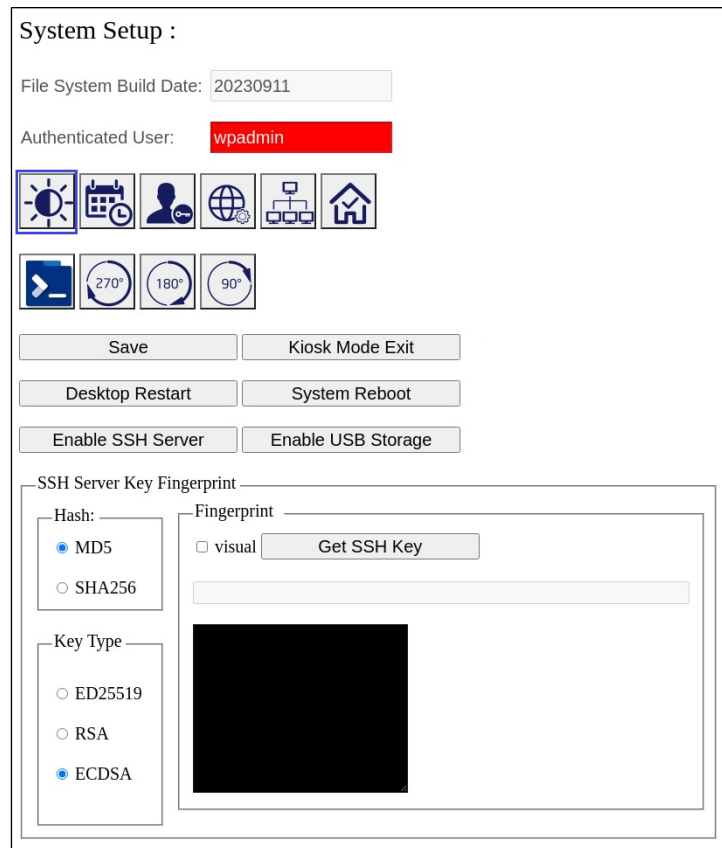

The "System Setup" page is shown with the "Brightness" icon highlighted with a red border. The page includes the following elements:

- File System Build Date: 20230911
- Authenticated User: wpadmin
- Navigation icons: Brightness (highlighted), Calendar, User, Globe, Network, Home.
- Rotation icons: 270°, 180°, 90°.
- Buttons: Save, Kiosk Mode Exit, Desktop Restart, System Reboot, Enable SSH Server, Enable USB Storage.
- SSH Server Key Fingerprint section:
 - Hash: MD5 (selected), SHA256
 - Key Type: ED25519, RSA, ECDSA (selected)
 - Fingerprint: visual checkbox, Get SSH Key button, and a large black redaction box.

3. Screen standby interval time can be set by incrementing the value between 1 to 30 minutes and clicking the **Apply** button

Figure 78: Energy Saving Mode

Brightness setup

Turn on ALS

85

Apply

Energy Saving Mode

0 ~30 minutes (0:disable): 0

Apply

Home Setup

4. Click on **Setup** to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

Note : Energy Saving Mode can be disabled by inputting the value to 0 and clicking the **Apply** button.

4.3.7 User Password Settings

The non-privileged wpuser can only change the wpuser password, but the privileged wpadmin can change both the wpuser and wpadmin password.

1. Navigate to Setup Page and provide the non-privileged wpuser credentials and click on **Confirm**.

Figure 79: System Setup

System Setup :

Username:

Password:

Confirm

Home

2. Select the password icon (Figure 80).

Figure 80: Select the Password Icon from the Setup Page

The screenshot shows the 'System Setup' interface. At the top, it displays 'File System Build Date: 20230911' and 'Authenticated User: wpuser'. Below this are several icons: a sun, a calendar, a person (highlighted with a blue border), a globe, a network diagram, and a house. Underneath are rotation control icons for 270°, 180°, and 90°. There are four buttons: 'Save', 'Kiosk Mode Exit', 'Desktop Restart', and 'System Reboot'. A section titled 'SSH Server Key Fingerprint' contains a 'Hash' dropdown with 'MD5' selected, a 'Key Type' dropdown with 'ECDSA' selected, a 'Fingerprint' section with a 'visual' checkbox and a 'Get SSH Key' button, and a large black redacted area.

3. Enter the current (old) and new password and then click the **Apply** to submit the new password.

Figure 81: Set New Password


The screenshot shows a dialog box titled 'Set wpuser password'. It contains three input fields: 'Current password:', 'New password:', and 'Confirm new password:'. Below these fields is an 'Apply' button. At the bottom of the dialog are two buttons: 'Home' and 'Setup'.

4. Click on **Setup** to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

4.3.8 Changing the Password for the Privileged Wpadmin

1. Navigate to Setup Page and provide the privileged wpadmin credentials and click on **Confirm**.

Figure 82: System Setup



System Setup :

Username:


Password:

Confirm

Home

2. Select the password icon (Figure 83).

Figure 83: Select the Password Icon

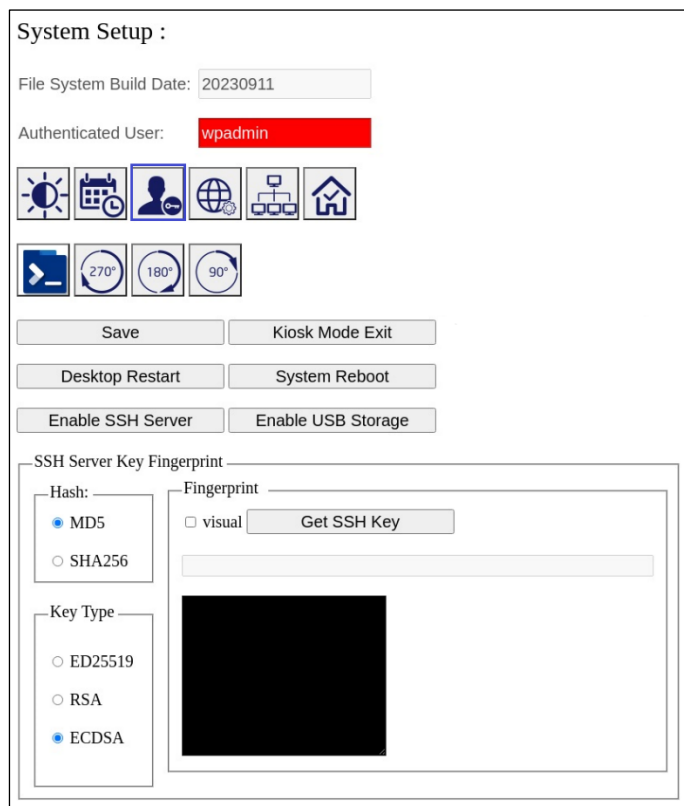

System Setup :

File System Build Date: 20230911

Authenticated User: wpadmin

Save Kiosk Mode Exit

Desktop Restart System Reboot


Enable SSH Server Enable USB Storage

SSH Server Key Fingerprint

Hash: MD5 SHA256

Key Type: ED25519 RSA ECDSA

Fingerprint: visual



3. Enter the current (old) and new password then click **Apply** to submit the new password.

Figure 84: Set User Password

Set user password
Current password:

New password:

Confirm new password:

Apply

Set root password
Current password:

New password:

Confirm new password:

Apply

Home Setup

Connecting to native messaging host com.google.chrome.userchange

4. Click **Setup** to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

4.3.9 Network Setup

1. Navigate to Setup Page and provide the non-privileged wpuser or privileged wpadmin credentials and click on **Confirm**.

Figure 85: System Setup

System Setup :

Username:

Password:

Confirm

Home

3. Select the Network Setup icon (Figure 86).

Figure 86: Select Network Setup

The screenshot shows the 'System Setup' interface. At the top, it displays 'File System Build Date: 20230911' and 'Authenticated User: wpadmin'. Below this are several icons for system functions: a light icon, a calendar, a person, a globe, a network diagram, and a home icon. There are also three rotation angle icons: 270°, 180°, and 90°. A row of buttons includes 'Save', 'Kiosk Mode Exit', 'Desktop Restart', 'System Reboot', 'Enable SSH Server', and 'Enable USB Storage'. The 'SSH Server Key Fingerprint' section is expanded, showing 'Hash' options (MD5 selected, SHA256), 'Key Type' options (ED25519, RSA, ECDSA selected), and a 'Fingerprint' section with a 'visual' checkbox and a 'Get SSH Key' button. A large black redaction box covers the fingerprint details.

4. Assign values to the Network parameters to setup your network and click **Apply**.

Figure 87: Network Setup

The screenshot shows the 'Network setup' page. It contains input fields for 'Ippaddress: 192.168.20.135', 'Netmask: 255.255.255.0', 'Gateway: 192.168.20.1', and 'DNS: 192.168.20.1'. The 'Type' section has radio buttons for 'Static IP' and 'DHCP' (selected). An 'Apply' button is located below. The 'Proxy type' section has radio buttons for 'direct' (selected) and 'manual'. A 'Proxy:' field is present with a placeholder 'example:http://httpproxy.example.com' and a 'PROXY-Setup' button. At the bottom are 'Home' and 'Setup' buttons.

Note: Be sure to provide a DNS value, otherwise an error will display when the user clicks **Apply**.

5. Click **Setup** to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

4.3.11 Date and Time Settings

1. Navigate to Setup Page and provide the non-privileged wpuser or privileged wpadmin credentials and click **Confirm**.


Figure 88: Login Before Date and Time Settings



The image shows a 'System Setup' dialog box. It contains two input fields: 'Username:' and 'Password:'. Below these fields are two buttons: 'Confirm' and 'Home'.

2. Select **Date and Time** as shown in Figure 89.

Figure 89: Select Date and Time

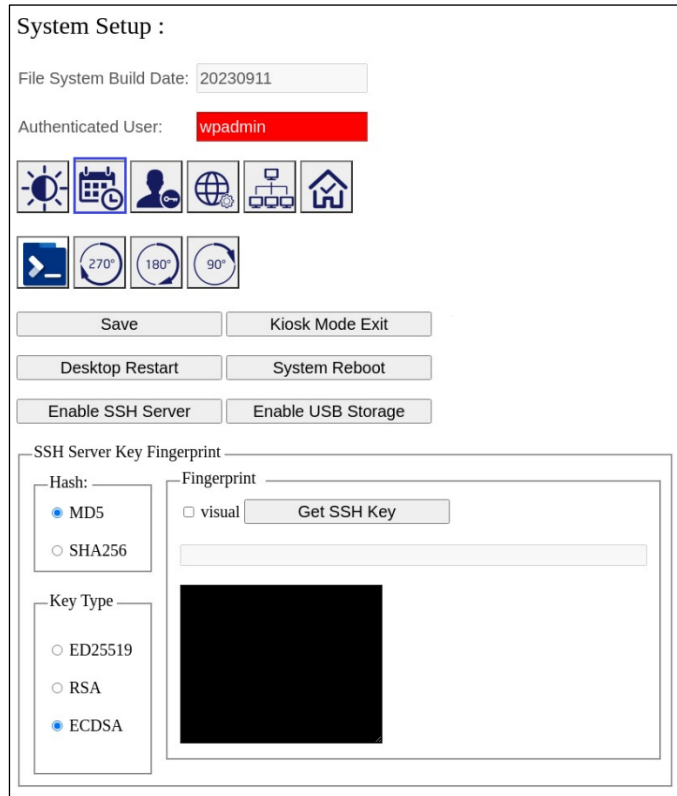

The image shows the 'System Setup' configuration screen. At the top, it displays 'File System Build Date: 20230911' and 'Authenticated User: wpadmin'. Below this is a row of icons: a sun, a calendar, a person, a globe, a network diagram, and a house. Underneath are four circular icons for rotation: a right arrow, 270°, 180°, and 90°. There are several buttons: 'Save', 'Kiosk Mode Exit', 'Desktop Restart', 'System Reboot', 'Enable SSH Server', and 'Enable USB Storage'. The bottom section is titled 'SSH Server Key Fingerprint' and contains two sub-sections: 'Hash' with radio buttons for 'MD5' (selected) and 'SHA256'; and 'Key Type' with radio buttons for 'ED25519', 'RSA', and 'ECDSA' (selected). To the right of these is a 'Fingerprint' section with a 'visual' checkbox, a 'Get SSH Key' button, and a large black square representing the fingerprint.

3. Manually set the date and time and click **Set Date and Time**. Input the NTP server IP address and click Apply.

Figure 90: Date and Time Setup

Date and Time Setup :

Manual Setup:

05/06/2022

10:01 AM

Set Date&Time

NTP address:

211.22.103.157

Apply

Connect NTP Server

Timezone Setup:

(GMT) Western Europe Time, London, Lisbon, Casablanca

Set Timezone

Home Setup

4. Click **Connect NTP Server** button to connect to NTP Server.
5. Click **Setup** to go back to main System Setup Page. Finally, click on **Save** button to save the changed configuration.

4.3.12 Display Orientation


The user can set the following display screen rotations on the RXi Web Panel :

- 0° rotation.
- 90° rotation.
- 180° rotation.
- 270° rotation.

By default, screen display is set to 0°.

1. Navigate to the Setup Page and provide the non-privileged wpuser or privileged wpadmin credentials and click **Confirm**.


Figure 91: Credentials



The screenshot shows a 'System Setup' dialog box. It contains two text input fields: 'Username:' and 'Password:'. Below the 'Password:' field are two buttons: 'Confirm' and 'Home'.

2. Select 90°, 180°, or 270° as shown in the boxed area of Figure 92.

Figure 92: Screen Rotation

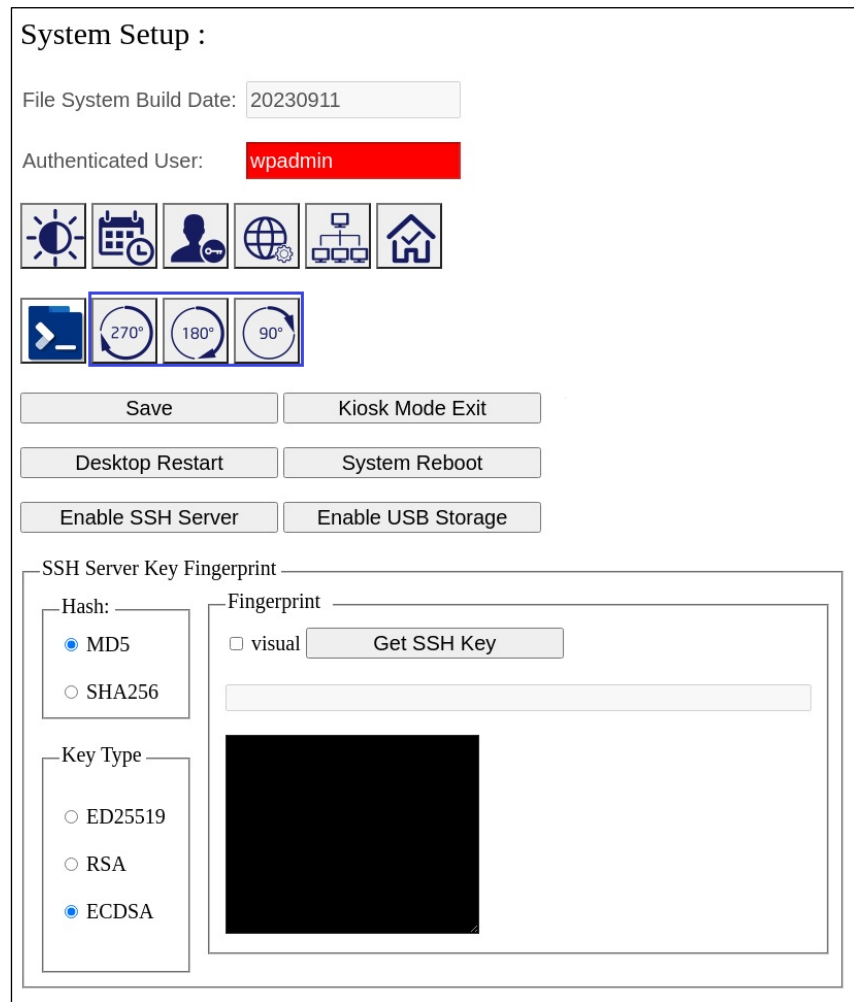

3. After clicking the screen orientation icon, the user will be prompted with the following message:
Press OK to rotate <degree> and Reboot.
4. Click on **OK** to apply the changes and reboot the device.

4.4 Firewall Support

Firewall Support is included by enabling iptables module. Iptables is a software firewall for Yocto Linux Kernel. Iptables is a command-line interface for configuring and maintaining tables in the Yocto Linux kernel's Netfilter firewall for IPv4. The firewall compares packets to the rules in these tables and takes the appropriate action if a match is found.

Default ruleset can be checked by using **sudo iptables -S**.

Steps to check the default firewall ruleset:

1. Navigate to Setup Page and provide the non-privileged wpuser or privileged wadmin credentials and click on **Confirm**.


Figure 93: System Setup



The screenshot shows a web form titled "System Setup :". It contains two input fields: "Username:" and "Password:". Below the input fields are two buttons: "Confirm" and "Home".

2. Select **terminal** as shown in below figure:

Figure 94: Select the Terminal icon

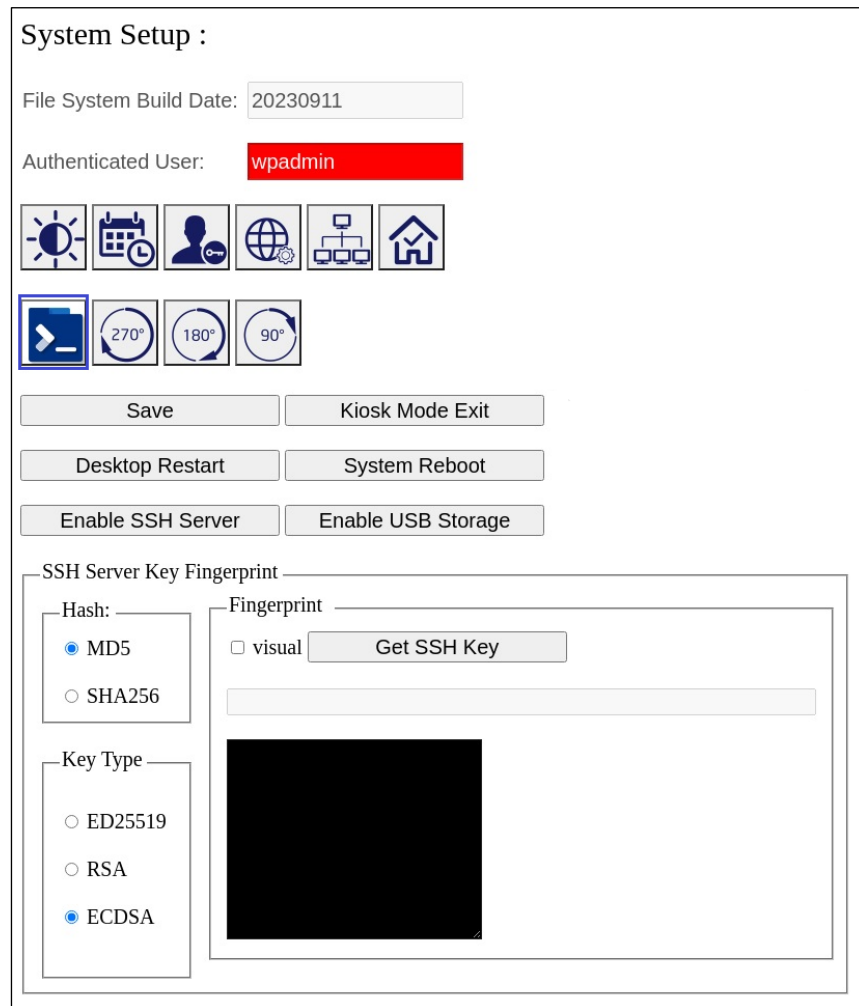

3. Switch to the privileged user wpadmin by running the su wpadmin command and entering the password for the wpadmin user.
4. Run sudo iptables -S

Figure 95: Run command iptables -S

```
webpanel:/home/wpuser$ sudo iptables -S
Password:
-P INPUT DROP
-P FORWARD DROP
-P OUTPUT DROP
-A INPUT -p udp -m udp --sport 53 -j ACCEPT
-A INPUT -p tcp -m tcp --sport 80 -j ACCEPT
-A INPUT -p tcp -m tcp --sport 443 -j ACCEPT
-A INPUT -p tcp -m tcp --dport 22 -j ACCEPT
-A INPUT -p icmp -m icmp --icmp-type 8 -j ACCEPT
-A INPUT -p icmp -m icmp --icmp-type 0 -j ACCEPT
-A INPUT -i lo -j ACCEPT
-A INPUT -p udp -m udp --sport 123 -j ACCEPT
-A INPUT -p tcp -m tcp --tcp-flags RST RST -m limit --limit 2/min --limit-burst
2 -j ACCEPT
-A INPUT -p tcp -m tcp --sport 1880 -j ACCEPT
-A INPUT -p tcp -m tcp --sport 5001 -j ACCEPT
-A FORWARD -p tcp -m tcp --tcp-flags FIN,SYN,RST,ACK SYN -m limit --limit 1/sec
-j ACCEPT
-A FORWARD -p udp -m limit --limit 1/sec -j ACCEPT
-A FORWARD -p icmp -m icmp --icmp-type 8 -m limit --limit 1/sec -j ACCEPT
-A FORWARD -p tcp -m tcp --tcp-flags FIN,SYN,RST,ACK RST -m limit --limit 1/sec
-j ACCEPT
-A OUTPUT -p udp -m udp --dport 53 -j ACCEPT
-A OUTPUT -p tcp -m tcp --dport 80 -j ACCEPT
-A OUTPUT -p tcp -m tcp --dport 443 -j ACCEPT
-A OUTPUT -p tcp -m tcp --sport 22 -j ACCEPT
-A OUTPUT -p icmp -m icmp --icmp-type 0 -j ACCEPT
-A OUTPUT -p icmp -m icmp --icmp-type 8 -j ACCEPT
-A OUTPUT -o lo -j ACCEPT
-A OUTPUT -p udp -m udp --dport 123 -j ACCEPT
-A OUTPUT -p tcp -m tcp --dport 1880 -j ACCEPT
-A OUTPUT -p tcp -m tcp --dport 5001 -j ACCEPT
```

4.4.1 Firewall Rules

```
# Flush all existing rules
```

```
iptables
```

-F

```
# Set 'close all ports' chain policies
```

```
iptables -P INPUT DROP
```

```
iptables -P FORWARD DROP
```

```
iptables -P OUTPUT DROP
```

```
# apt-get to resolve (53) and initiate connections (80, 443) to fetch updates from repo
```

```
iptables -A INPUT -p udp --sport 53 -j ACCEPT
```

```
iptables -A OUTPUT -p udp --dport 53 -j ACCEPT
```

```
iptables -A INPUT -p tcp --sport 80 -j ACCEPT
```

```
iptables -A OUTPUT -p tcp --dport 80 -j ACCEPT
```

```
iptables -A INPUT -p tcp --sport 443 -j ACCEPT
```

```
iptables -A OUTPUT -p tcp --dport 443 -j ACCEPT
```

```
# Accept all incoming SSH
```

```
iptables -A INPUT -p tcp --dport 22 -j ACCEPT
```

```
iptables -A OUTPUT -p tcp --sport 22 -j ACCEPT
```

```
# Accept all incoming 9001(websocket)
```

```
iptables -A INPUT -p tcp --dport 9001 -j ACCEPT
```

```
iptables -A OUTPUT -p tcp --sport 9001 -j ACCEPT
```

```
# Accept incoming PING
```

```
iptables -A INPUT -p icmp --icmp-type echo-request -j ACCEPT
```

```
iptables -A OUTPUT -p icmp --icmp-type echo-reply -j ACCEPT
```

```
# Accept out PING
```

```
iptables -A OUTPUT -p icmp --icmp-type echo-request -j ACCEPT
iptables -A INPUT -p icmp --icmp-type echo-reply -j ACCEPT

# Accept loopback access
iptables -A INPUT -i lo -j ACCEPT
iptables -A OUTPUT -o lo -j ACCEPT

#Accept NTP Server Ports
iptables -A OUTPUT -p udp --dport 123 -j ACCEPT
iptables -A INPUT -p udp --sport 123 -j ACCEPT

# ANTI DDOS
iptables -A FORWARD -p tcp --syn -m limit --limit 1/second -j ACCEPT
iptables -A FORWARD -p udp -m limit --limit 1/second -j ACCEPT
iptables -A FORWARD -p icmp --icmp-type echo-request -m limit --limit 1/second -j ACCEPT
iptables -A FORWARD -p tcp --tcp-flags SYN,ACK,FIN,RST RST -m limit --limit 1/s -j ACCEPT
iptables -A INPUT -p tcp -m tcp --tcp-flags RST RST -m limit --limit 2/minute --limit-burst 2 -j ACCEPT

#Accept node-red dashboard pages
iptables -A INPUT -p tcp --sport 1880 -j ACCEPT
iptables -A OUTPUT -p tcp --dport 1880 -j ACCEPT

#Accept Movicon WebHMI
iptables -A INPUT -p tcp --sport 5001 -j ACCEPT
iptables -A OUTPUT -p tcp --dport 5001 -j ACCEPT
```

4.4.2 Saving Firewall Rules

1. Navigate to Setup Page and provide the non-privileged wpuser or privileged wpadmin credentials and click on **Confirm**.

Figure 96: Credentials




The image shows a 'System Setup' dialog box with the following fields and buttons:

- System Setup :**
- Username:** [Text input field]
- Password:** [Text input field]
- Confirm** button
- Home** button

2. Select terminal as shown below:

Figure 97: Terminal

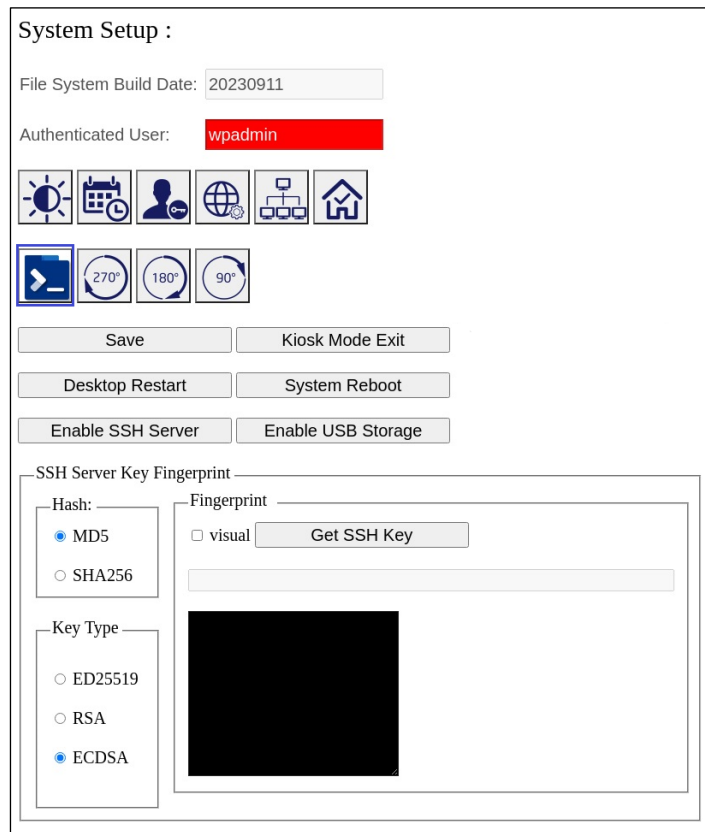

The image shows a 'System Setup' screen with the following elements:

- System Setup :**
- File System Build Date:** 20230911
- Authenticated User:** wpadmin
- Navigation icons: Sun, Calendar, User, Globe, Network, Home
- Rotation icons: 270°, 180°, 90°
- Save** button
- Kiosk Mode Exit** button
- Desktop Restart** button
- System Reboot** button
- Enable SSH Server** button
- Enable USB Storage** button
- SSH Server Key Fingerprint** section:
 - Hash:** MD5, SHA256
 - Key Type:** ED25519, RSA, ECDSA
 - Fingerprint:** visual, **Get SSH Key** button, [Text input field]
 - [Large black redacted area]

4. Switch to the privileged user wpadmin by running the su wpadmin command and entering the password for the wpadmin user
5. Type sudo vi /usr/bin/iptables_rule.sh. Enter the wpadmin password.
6. Press I to insert the rules
7. Add the new rules at the end.
8. Press “**esc**” to enter the command mode.
9. Type: wq to save and exit the file
10. Type sudo cat /usr/bin/iptables_rule.sh to confirm that the entry is saved.
11. Restart the device.

4.5 Secure Shell (SSH) Key Pair

SSH allows secure transfer protocols using encryption only. Encryption keys are therefore automatically exchanged between server and client. So, if establishing an SSH client connection for the first time, the user will be asked to accept the remote host public key. Accepted public keys are stored in a client database to be used in future communications. If a fake server tries to masquerade as a known server whose public key is already stored in the client database, SSH tools will warn about a key change, thus enabling the user to identify the fraud.

4.5.1 Steps to view SSH Server Key

For in-depth instruction on the configuration of Secure Shell, please consult GFK-3076, *RXi Web Panel Secure Deployment Guide*.

4.6 RXi Web Panel with PACEdge 2.1

The RXi Web Panel can act as a Movicon WebHMI client with PACEdge2.1 where the Movicon WebHMI server is running on CPL410 or CPE400.

The user is recommended to use the following configuration for their Movicon WebHMI project for PACEdge2.1.:

4.6.1 Recommended Configuration

1 HMI Screen: if the Graphical Objects applied are equal to or fewer than 20.

2 HMI screens: if the Graphical Objects applied per page are equal to or fewer than 10.

To use an RXi Web Panel for a Movicon WebHMI project with PACEdge 2.1, the project must have fewer than 500 PLC tags.

Note: If the recommended screens, object, or tag limits are exceeded, the user will be unable to navigate between screens.

Section 5: Specifications

5.1 RXi - Industrial Monitor

	Size (inch)	7"	10"	12"	15"	19"	24"	
Display	Resolution	1024 x 600 WSVGA	1280 x 800 WXGA		1920 x 1080 Full HD			
	Format	Widescreen (16:0)	Widescreen (16:10)		Widescreen (16:9)			
	Orientation	Landscape						
	Reading Angle (°)	150 (H) / 145 (V)	170 (H) / 170 (V)	176 (H) / 176 (V)	170 (H) / 170 (V)	178 (H) / 178 (V)		
	Display Off-Color	Black						
	Contrast	800:1		1000:1	800:1	1000:1	5000:1	
	Brightness (cd/m2)	500		400	450	350	300	
	Brightness with Outdoor SLR Screen (cd/m2)	1000				N/A		
	MTBF Backlighting	50,000 h (at 25 °C)						
Touchscreen	Technology	Projected Capacitive Touch (PCT/PCAP)						
	Touch Sensor	Multi-touch (Ten-Point)						
Interfaces	Port 1	1 x HDMI-In						
	Port 2	1 x Display Port-In						
	Port 3	1 x Display Port-Out						
	Port 4	(MST - Daisy Chain)						
	Port 5	1 x USB Input (For Touch)						
Status Indicators	Front Bezel Tri-color LED	Amber/Green/Red						
Power-Supply	Voltage (V)	+24 VDC ±10% (3-Pin Connector, Isolated, use 28-14AWG (0.2-1.5mm ²) wire rated 90C, 1.7 in-lbs (0.19Nm) torque)						
Power Consumption	Maximum Wattage (W)	5 W	11 W	17 W	15 W	22 W	30 W	
Protection-Class	Front-Side	IP66 & Type 4/4X (When Installed to a suitable Wall/Panel)						
	Back-Side	IP20						
Design	Housing	Aluminum Die Casting (Front)						
Environment	Operating Temperature	-20 °C to +65 °C						
	Storage Temperature	-30 °C to +70 °C						
	Operating Humidity	85% RH (non- condensing) @ 30 °C						
	Operating Altitude	10000 ft. (3.000 m)						
	Vibration	1 Grms / 5 ~ 500Hz (Random) / Operation IEC 60068-2-64 10 G peak acceleration (11 msec. duration)/operation IEC 60068-2-27						

		Size (inch)	7"	10"	12"	15"	19"	24"
Compliance	Certifications	UL and cUL Information Technology Equipment (UL/CSA 62368-1) UL and cUL Class 1 Division 2: Programmable Controllers for Use in Hazardous Locations (UL/CSA 61010-2-201, UL 121201, CSA C22.2 No. 213) IECEx & ATEX Zone 2/22 Hazardous Locations(IEC/EN 60079-0, IEC/EN 60079-7, IEC/EN 60079-31) IECEE CB Scheme (IEC 61010-2-201) UL TYPE 4 & 4X, IP66 (ANSI/IEC 60529) Marine: ABS, BV, DNVGL, LR Bureau of Indian Standards (IS 13252 Part 1/IEC60950-1) CE Mark, UKCA						
Mounting	Panel Cutout Dimensions (mm)	183.5 (W) 128.5 (H)	255.5 (W) 174 (H)	317 (W) 214.5 (H)	398 (W) 245.5 (H)	482 (W) 297 (H)	581 (W) 360 (H)	
	VESA Mounting	100 x 100						
	Hardware Included	Mounting Clamps						
Physical Specification	Net Weight (kg)	2.0	2.6	3.8	5.1	6.9	9.0	
	Dimensions (mm)	192 (W) 137 (H) 65 (D)	267 (W) 186.2 (H) 65 (D)	329.1 (W) 226.8 (H) 66 (D)	410.2 (W) 257.6 (H) 65 (D)	500 (W) 315 (H) 70 (D)	600 (W) 382 (H) 71 (D)	

5.1.1 RXi - Industrial Monitor Motherboard Specifications

Item	Description
Board Size	170 x 113mm
Scalar IC	Realtek RTD2556T-CG
Input	1 x HDMI Input 1 x Display Port (DP) Input (DP1) 1 x USB 2.0 (Type B)
Output	1 x Support up to 24-bit LVDS FULL HD panel interface 1 x Display Port (DP) Output (DP2) 1 x Line-Out (Audio Jack)
Resolution	Up to 1920 x 1080@60Hz for LVDS Up to 1920 x 1080@60Hz for Display Port
Power Input	DC24V±20%
Temperature	Operating: -20°C to 65°C Storage: -30°C to 85°C
Humidity	10%-90%, non-condensing, operating
EMI/EMS	Meet CE/FCC class A

5.2 RXi - Panel PC

5.2.1 Panel PC (Base Model)

Display Size		7"	10"	12"	15"	19"	24"	
Display	Resolution	1024 x 600 WSVGA	1280 x 800 WXGA		1920 x 1080 Full HD			
	Format	Widescreen (16:10)			Widescreen (16:9)			
	Orientation	Landscape						
	Reading Angle (°)	150 (H) / 145 (V)	170 (H) / 170 (V)	176 (H) / 176 (V)		170 (H) / 170 (V)	178 (H) / 178 (V)	
Display Off-Color		Black						
	Contrast	800:1	1000:1	800:1		1000:1	5000:1	
	Brightness (cd/m2)	500 (1000 with Outdoor SLR Screen)	400 (1000 with Outdoor SLR Screen)	450 (1000 with Outdoor SLR Screen)		350	300	
	Colors	16.2 Million						
	MTBF Backlighting	50,000 h (at 25°C)						
	Backlight	LED, Dimmable via Software						
Processor	Chipset	AMD Embedded G-Series SOC			AMD Embedded G-Series SOC or AMD Embedded V1000-Series SoC			
	Processor	GX-210HL		GX-412GC or V1404I				
	# of cores/TDP	2/7W		4/15W				
	CPU frequency/L2 Cache	1.0Ghz/1MB		GX-412GC: 1.2Ghz/2MB V1404I: 2.0/2MB				
	GPU frequency	267Mhz		GX-412GC: 300MHz V1404I: 2400MHz				
Memory	Capacity	4GB or 8GB DDR3L (Soldered with ECC, -40°C ~ 85°C)			GX-412GC: 4GB or 8GB DDR3L (Soldered with ECC, -40°C ~ 85°C) V1404I: 8GB/ 16GB DDR4 (Soldered with ECC, -40°C ~ 85°C)			
Storage	Internal	32 / 64 / 128GB MLC SSD (SATA Slim, -40°C ~ 85°C)		GX-412GC: 64 / 128GB MLC SSD (SATA Slim, -40°C ~ 85°C) V1404I: 128 / 256 / 512GB M.2 MLC SSD (SATA III)				
	External Slot	1 x External Micro SD/ SDHC Card Slot (up to 32GB)			GX-412GC: 1 x External Micro SD/ SDHC Card Slot (up to 32GB) V1404I: 1 x Micro SD Slot, 1 x Microchip USB2642-I			
Watchdog Timer	Timer Levels	255 timer levels, set up by software						
Operating Control	Method	Touch						
Touchscreen	Technology	Projected Capacitive Touch (PCT/PCAP)						
	Touch Sensor	Multi-touch (Ten-Point)						
Interfaces	Port 1	2 x 10/100/1000 Base T Ethernet RJ45 Note: Ports will have unique IP addresses			4 x 10/100/1000 Base T Ethernet RJ45 Note: Ports will have unique IP addresses			
	Port 2	1 x RS-232 COM Port (5-Pin Connector, Isolated, use 24-16AWG (0.2-1.3mm ²), strip-length 10mm) 1 x RS-485 COM Port (5-Pin Connector, Isolated, use 24-16AWG (0.2-1.3mm ²), strip-length 10mm)						
	Port 3	2 x USB 3.0 (Type-A)			2 x USB 3.0 (Type-A) 2 x USB 2.0 (Type-A)			
	Port 4	1 x DisplayPort						
	Port 5	1 x Mic In (Mono) (3.5mm Jack)						

Display Size		7"	10"	12"	15"	19"	24"	
Status Indicators	Port 6	1 x Line Out (Stereo) (3.5mm Jack)						
	Front Bezel Tri-color LED	Amber / Green / Red						
	On-board Buzzer	Yes (85 dB sound level with 80mA mean current when connected to speaker)						
Power-Supply	Voltage [V]	+24VDC ±10% (3-Pin Connector, Isolated, use 28-14AWG (0.2-1.5mm ²) wire rated 90C, 1.7 in-lbs (0.19Nm) torque)						
Power Consumption	Maximum Wattage [W]	14 W	19 W	19 W	19 W	19 W	43 W	
Protection-Class/Installation	Front-Side	IP66 & Type 4/4X (When Installed to a suitable Wall/Panel)						
	Back-Side	IP20/Open Type product for mounting in an ultimate enclosure Pollution Degree 2 environment						
Operating System	Installed Standard	Windows 10 IOT Enterprise LTSC						
Software Tools	Tool 1	Secure & Trusted Boot Capability						
	Tool 2	DHCP-Client, Web Browser (IE or FireFox), Java JRE Capability						
Secure & Trusted Boot	Item 1	On-Board TPM2.0						
Design	Housing	Aluminum Die Casting (Front)						
	Construction Type	Modular (Detachable Modules; Computer, Monitor, Touch Display, DIO)						
	Cooling	Natural Convection (Fanless Passive Cooling)						
Environmental	Operating Temperature	-20°C to +65°C						
	Storage Temperature	-30°C to +70°C						
	Operating Humidity	85% RH (non- condensing) @ 30°C						
	Operating Altitude	10000 ft. (3.000 m)						
	Vibration	1Grms / 5 ~ 500Hz (Random) / Operation IEC 60068-2-64 10G peak acceleration (11 msec. duration)/operation IEC 60068-2-27						
Mounting	Panel Cutout	183.5 (W)	255.5 (W)	317 (W)	398 (W)	482 (W)	581 (W)	
	Dimensions (mm)	128.5 (H)	174 (H)	214.5 (H)	245.5 (H)	297 (H)	360 (H)	
	VESA Mounting	75 x 75			100 x 100			
	Hardware Included	Mounting Clamps						
Physical Specification	Net Weight (kg)	2.0	2.6	3.8 6kg	5.1 7kg	6.9 9kg	9.0 11kg	
	Dimensions (mm)	192(W) 137(H) 65(D)	267(W) 186.2(H) 65(D)	329.1(W) 226.8(H) 66(D)	410.2(W) 257.6(H) 65(D)	500(W) 315(H) 70(D)	600(W) 382(H) 71(D)	
Certifications	Certifications	UL and cUL Class 1 Division 2: Programmable Controllers for Use in Hazardous Locations (UL/CSA 61010-2-201, UL 121201, CSA C22.2 No. 213) IECEx & ATEX Zone 2/22 Hazardous Locations(IEC/EN 60079-0, IEC/EN 60079-7, IEC/EN 60079-31) IEC EE CB Scheme (IEC 61010-2-201) UL TYPE 4 & 4X, IP66 (ANSI/IEC 60529) Marine: ABS, BV, DNVGL, LR Bureau of Indian Standards (IS 13252 Part 1/IEC60950-1) ¹ CE Mark, UKCA, CCC, CMIM						

¹ BIS Certifications only apply to select part numbers. For a complete list of affected part numbers, please visit: https://emerson-mas.force.com/communities/en_US/Article/Certifications-and-Agency-Approvals-Landing-Page

5.2.2 Panel PC Motherboard Specifications

Item	Description								
Board Size	170mm x 113mm								
CPU Support	AMD® Embedded G-Series AMD® GX-210HL, Dual-Core, 1M Cache, 1.0GHz, 7W AMD® GX-412GC, Quad-Core, 2M Cache, 1.2GHz, 15W								
Memory Support	Onboard 4GB/8GB DDR3L Memory with ECC Supports Single Channel DDR3 1066/1333MHz								
Graphics	AMD Radeon™ R3E GPU DirectX® 11.2, OpenGL 4.3, OpenCL™ 1.2 graphics support 1 x DP++ 1 x LVDS DP++: resolution up to 4096x2160 @ 30Hz LVDS: dual channel 24-bit, resolution up to 1920x1200 @ 60Hz								
BIOS	AMI SPI 64Mbit								
Storage	1 x Micro SD 1 x SATA 3.0 (7+15pin)								
Ethernet	2 x Intel® I210IT, -40 to 105°C PCIe (10/100/1000Mbps)								
Outside I/O	<table border="0"> <tr> <td>2 x USB 3.0</td> <td>1 x Mic-in</td> </tr> <tr> <td>1 x RS-232</td> <td>2 x GbE (RJ-45)</td> </tr> <tr> <td>1 x RS-485</td> <td>1 x DP++</td> </tr> <tr> <td>1 x Line-out</td> <td>1 x Power Button</td> </tr> </table>	2 x USB 3.0	1 x Mic-in	1 x RS-232	2 x GbE (RJ-45)	1 x RS-485	1 x DP++	1 x Line-out	1 x Power Button
2 x USB 3.0	1 x Mic-in								
1 x RS-232	2 x GbE (RJ-45)								
1 x RS-485	1 x DP++								
1 x Line-out	1 x Power Button								
Internal I/O	1 x LVDS LCD Panel Connector 1 x AIO/DIO 1x30pin Connector (JAE TX24-30R-10ST-H1E)								
Battery	CR2032 Coin Cell								
Audio	Codec:92HD73C								
Expansion	1 x Mini PCIe (PCIe/USB 2.0) 1 x M.2 E key 2230 (PCIe/USB 2.0)								
Security	TPM2.0								
Watchdog Timer	System Reset Programmable via Software from 1 to 255 Seconds/Minutes								
Temperature	Operating: -30 to 85 °C Storage: -30 to 85 °C								
Humidity	Operating: 10 to 90% RH Storage: 10 to 90% RH								
OS Support	Windows 10 IoT Enterprise (64-bit)								

5.2.4 Panel PC (with AMD Ryzen)

Display Size		7"	10"	12"	15"	19"	24"
Display	Resolution	NA	NA	NA	1920 x 1080 Full HD		
	Format	NA			Widescreen (16:9)		
	Orientation	Landscape					
	Reading Angle (°)	NA	NA	176 (H) / 176 (V)	170 (H) / 170 (V)	178 (H) / 178 (V)	
	Display Off-Color	Black					
	Contrast	NA		1000:1	800:1	1000:1	5000:1
	Brightness (cd/m2)	NA		400 (1000 with Outdoor SLR Screen)	450 (1000 with Outdoor SLR Screen)	350	300
	Colors	16.2 Million					
	MTBF Backlighting	50,000 h (at 25°C)					
	Backlight	LED, Dimmable via Software					
Processor	Chipset	AMD® Embedded V1000-Series SoC					
	Processor	NA		V1404I			
	# of cores/TDP	NA		4/15W			
	CPU frequency/L2 Cache	NA		2.0~3.6GHz/2MB			
	GPU frequency	NA		2400MHz			
Memory	Capacity	8GB/ 16GB DDR4 (Soldered with ECC, -40 °C ~ 85 °C)					
Storage	Internal	NA		1 x M.2 M Key 2280 size with (w/PCIex4 and SATA III)			
	External Slot	1 x Micro SD Slot 1 x Microchip USB2642-I					
Watchdog Timer	Timer Levels	255 timer levels, set up by software					
Operating Control	Method	Touch					
Touchscreen	Technology	Projected Capacitive Touch (PCT/PCAP)					
	Touch Sensor	Multi-touch (Ten-Point)					
Interfaces	Port 1	NA		4 x 10/100/1000 Base T Ethernet RJ45			
	Port 2	1 x RS-232 COM Port (5-Pin Connector, Isolated, use 24-16AWG (0.2-1.3mm ²), strip-length 10mm) 1 x RS-485 COM Port (5-Pin Connector, Isolated, use 24-16AWG (0.2-1.3mm ²), strip-length 10mm)					
	Port 3	NA		2 x USB 3.0 (Type-A) 2 x USB 2.0 (Type-A)			
	Port 4	1 x DisplayPort					
	Port 5	1 x Mic In (Mono) (3.5mm Jack)					
	Port 6	1 x Line Out (Stereo) (3.5mm Jack)					
Status Indicators	Front Bezel Tri-color LED	Amber / Green / Red					
	On-board Buzzer	Yes (85 dB sound level with 80mA mean current when connected to speaker)					
Power-Supply	Voltage [V]	+24VDC ±10% (3-Pin Connector, Isolated, use 28-14AWG (0.2-1.5mm ²) wire rated 90C, 1.7 in-lbs (0.19Nm) torque)					
Power Consumption	Maximum Wattage [W]	NA	NA	49 W	52 W	50 W	64 W
Protection-Class	Front-Side	IP66 & Type 4/4X (When Installed to a suitable Wall/Panel)					
	Back-Side	IP20					
Operating System	Installed Standard	Windows 10 IOT Enterprise LTSC Secure & Trusted Boot Capability					
Software Tools	Tool 1	DHCP-Client, Web Browser (IE or FireFox), Java JRE Capability					
	Tool 2	DHCP-Client, Web Browser (IE or FireFox), Java JRE Capability					
Secure & Trusted Boot	Item 1	On-Board TPM2.0					
Design	Housing	Aluminum Die Casting (Front)					
	Construction Type	Modular (Detachable Modules; Computer, Monitor, Touch Display, DIO)					

Display Size		7"	10"	12"	15"	19"	24"
	Cooling	Natural Convection (Fanless Passive Cooling)					
	Operating Temperature	-20 °C to +65 °C					
	Storage Temperature	-30°C to +70 °C					
	Operating Humidity	85% RH (non- condensing) @ 30 °C					
	Operating Altitude	10000 ft. (3.000 m)					
	Vibration	1Grms / 5 ~ 500Hz (Random) / Operation IEC 60068-2-64 10G peak acceleration (11 msec. duration)/operation IEC 60068-2-27					
Compliance	Certifications	UL and cUL Information Technology Equipment (UL/CSA 62368-1) UL and cUL Class 1 Division 2: Programmable Controllers for Use in Hazardous Locations (UL/CSA 61010-2-201, UL 121201, CSA C22.2 No. 213) IECEx & ATEX Zone 2/22 Hazardous Locations(IEC/EN 60079-0, IEC/EN 60079-7, IEC/EN 60079-31) IECEE CB Scheme (IEC 61010-2-201) UL TYPE 4 & 4X, IP66 (ANSI/IEC 60529) Marine: ABS, BV, DNVGL, LR Bureau of Indian Standards (IS 13252 Part 1/IEC60950-1) ² CE Mark, UKCA, CCC, CMIM					
Mounting	Panel Cutout Dimensions (mm)	NA	NA	317(W) 214.5(H)	398(W) 245.5(H)	482(W) 297(H)	581(W) 360(H)
	VESA Mounting	100 x 100					
	Hardware Included	Mounting Clamps					
Physical Specification	Net Weight (kg)	NA	NA	3.8	5.1	6.9	9.0
	Dimensions (mm)	NA	NA	329(W) 228(H) 103(D)	410(W) 250(H) 108(D)	500(W) 315(H) 80(D)	600(W) 382(H) 108(D)

^{2 2} BIS Certifications only apply to select part numbers. For a complete list of affected part numbers, please visit: https://emerson-mas.force.com/communities/en_US/Article/Certifications-and-Agency-Approvals-Landing-Page

5.2.5 Panel PC Motherboard Specifications (Panel PC with AMD Ryzen)

Item	Description
Board Size	282mm (11.1") x 138mm (5.43")
CPU Support	AMD® Embedded V1000-Series SoC AMD® V1404I, Quad-Core, 2M L2 Cache, 2.0~3.6GHz, 15W AMD® V1605B, Quad-Core, 2M L2 Cache, 2.0~3.6GHz, 15W
Memory Support	Onboard Dual Channel DDR4 ECC RAM up to 2400MHz 8/16GB
Graphics	AMD Radeon™ Vega 8 Graphics DirectX® 12.1, OpenGL 4.6, OpenCL™ 2.0 graphics support 1 x DP++ 1 x LVDS DP++: resolution up to 4096x2160 @ 60Hz LVDS: dual channel 24-bit, resolution up to 1920x1200 @ 60Hz LVDS + DP++
BIOS	AMI SPI 64Mbit
Storage	1 x M.2 M Key 2280 size with (w/PCIe4 and SATA III) 1 x Micro SD Slot 1 x Microchip USB2642-I
Ethernet	4 x GbE (RJ-45)
Outside I/O	2 x USB 3.1 2 x USB 2.0 1 x RS-232 1 x RS-485 1 x Line-out 1 x Mic-in 4 x GbE (RJ-45) 1 x DP++ 1 x Power Button
Internal I/O	1 x LVDS LCD Panel Connector 1 x AIO/DIO 1x30pin Connector (JAE TX24-30R-10ST-H1E)
Battery	CR2032 Coin Cell
Audio	Codec:92HD73C
Expansion	1 x Mini PCIe (PCIe/USB 2.0) 1 x M.2 E key 2230 (PCIe/USB 2.0)
Security	TPM2.0
Watchdog Timer	255 timer levels, set up by software
Temperature	Operating: -30 to 85 °C Storage: -30 to 85 °C
Humidity	Operating: 10 to 90% RH Storage: 10 to 90% RH
OS Support	Windows 10 IoT Enterprise (64-bit)

5.4 RXi - Web HMI Panel

Display Size		7"	10"	12"	15"	19"	24"
Display	Resolution	1024 x 600 WSVGA	1280 x 800 WXGA		1920 x 1080 Full HD		
	Format	Widescreen (16:10)			Widescreen (16:9)		
	Orientation	Landscape					
	Reading Angle (°)	150 (H) / 145 (V)	170 (H) / 170 (V)	176 (H) / 176 (V)	170 (H) / 170 (V)	178 (H) / 178 (V)	
	Display Off-Color	Black					
	Contrast	800:1		1000:1	800:1	1000:1	5000:1
	Brightness (cd/m2)	500 (1000 with Outdoor SLR Screen)		400 (1000 with Outdoor SLR Screen)	450 (1000 with Outdoor SLR Screen)	350	300
	MTBF Backlighting	50 000 h (at 25°C)					
	Backlight	LED, Dimmable via Software					
	Processor i.MX 6DualLite	Processor	Freescale i.MX 6DualLite				
# of cores/TDP		2 core/2.5W					
CPU frequency		1.0Ghz					
Memory	Capacity	2GB DDR3L					
Storage	Internal	4GB eMMC NAND Flash Memory					
Watchdog Timer	Setup	Setup by software					
Operating Control	Method	Touch					
Touchscreen	Technology	Projected Capacitive Touch (PCT/PCAP)					
	Touch Sensor	Multi-touch (Ten-Point)					
Interfaces	Port 1	1 x 10/100/1000 Base T Ethernet RJ45					
	Port 2	1 x RS-232/422/485 COM Port (DB-9 connector)					
	Port 3	1 x USB 2.0 (Type-A) 1 x USB OTG (micro USB)					
Status Indicators	Front Bezel Tri-color LED	Amber/Green/Red					
	On-board Buzzer	Yes (85 dB sound level with 80mA mean current when connected to speaker)					
Power-Supply	Voltage [V]	+24VDC ±10% (3-Pin Connector, Isolated, use 28-14AWG (0.2-1.5mm ²) wire rated 90C, 1.7 in-lbs (0.19Nm) torque)					
Power Consumption	Maximum Wattage [W]						
Protection-Class	Front-Side	P66 & Type 4/4X (When Installed to a suitable Wall/Panel)					
	Back-Side	IP20					
Operating System	OS	Linux kernel 5.15.5: Yocto					
Software Tools	Tool 1	Web Browser					
	Tool 2	HTML5 Capability					
Secure and Trusted Boot	Item 1	CAAM					
Design	Housing	Aluminum Die Casting (Front)					
	Construction Type	Modular (Detachable Modules; Computer, Monitor, Touch Display, DIO)					

	Cooling	Natural Convection (Fanless Passive Cooling)					
Environment	Operating Temperature	-20°C to +65°C					
	Storage Temperature	-30°C to +70°C					
	Operating Humidity	85% RH (non- condensing) @ 30°C					
	Operating Altitude	10000 ft. (3.000 m)					
	Vibration	1Grms / 5 ~ 500Hz (Random) / Operation IEC 60068-2-64 10G peak acceleration (11 msec. duration)/operation IEC 60068-2-27					
Compliance	Certifications	<p>UL and cUL Information Technology Equipment (UL/CSA 62368-1)</p> <p>UL and cUL Class 1 Division 2: Programmable Controllers for Use in Hazardous Locations (UL/CSA 61010-2-201, UL 121201, CSA C22.2 No. 213)</p> <p>IECEx & ATEX Zone 2/22 Hazardous Locations(IEC/EN 60079-0, IEC/EN 60079-7, IEC/EN 60079-31)</p> <p>IECEE CB Scheme (IEC 61010-2-201)</p> <p>UL TYPE 4 & 4X, IP66 (ANSI/IEC 60529)</p> <p>Marine: ABS, BV, DNVGL, LR</p> <p>Bureau of Indian Standards (IS 13252 Part 1/IEC60950-1)³</p> <p>CE Mark, UKCA, CCC, CMIM</p>					
Mounting	Panel Cutout Dimensions (mm)	183.5 (W) 128.5 (H)	255.5 (W) 174 (H)	317 (W) 214.5 (H)	398 (W) 245.5 (H)	482 (W) 297 (H)	581 (W) 360 (H)
	VESA Mounting	100 x 100					
	Hardware Included	Mounting Clamps					
Physical Specification	Net Weight (kg)	2.0	2.6	3.8	5.1	6.9	9.0
	Dimensions (W x H x D)	192 (W) 137 (H) 65 (D)	267 (W) 186.2 (H) 65 (D)	317 (W) 214.5 (H) (D)	398 (W) 245.5 (H) (D)	482 (W) 297 (H) 70 (D)	581 (W) 360 (H) 71 (D)

^{3 3} BIS Certifications only apply to select part numbers. For a complete list of affected part numbers, please visit: https://emerson-mas.force.com/communities/en_US/Article/Certifications-and-Agency-Approvals-Landing-Page

5.4.1 RXi - Web Panel HMI Motherboard Specifications

Item	Description
Board Size	170mm x 113mm, 10 Layers, 1.6mm
CPU Support	Freescale ARM Cortex A9 i.MX6 Dual Lite 1.0GHz
Memory Support	Onboard 2GB DDR3L SDRAM
Storage	Onboard 4GB eMMC Flash Onboard Micro SD Card slot
Ethernet	1 x 10/100/1000MHz, RJ45 connector
Outside I/O	1 x USB 2.0, Type A connector 1 x RS-232/422/485, DB9 connector 1 x USB OTG, Micro USB connector
Internal I/O	1 x Debug port
Battery	CR2032 Coin Cell
Watchdog Timer	System Reset, Programmable via Software from 1 to 255 Seconds/Minutes
Temperature	Operating: -20 to 65 °C Storage: -40 to 70 °C
Humidity	Storage: 10 to 90% @40 °C
OS Support	Linux Kernel 5.15.5 + Chromium Browser 96.0.4664.45


Section 6: Hardware

6.1 RXi - Industrial Monitor

6.1.1 Jumpers and Connectors Location

Figure 98: Jumpers and Connectors Location


External IO

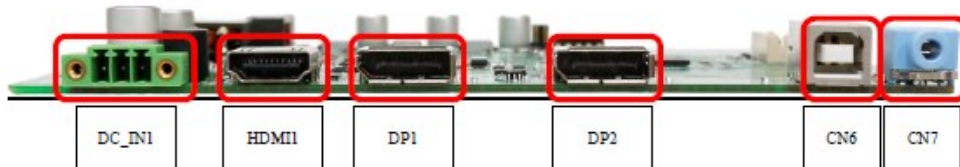

Connecting Input Power (24V DC-in)

To connect to power, follow these steps:

1. Verify that the power cable is not energized.
 2. Loosen the screw clamps on the mating power connector.
 3. Strip the insulation from the power cables.
 4. Secure the power cable to the mating connector, noting polarity, and tighten the screw clamps. The torque for the attaching screws is 0.3 Nm (2.26 in-lb).
 5. Apply dc power to the unit. During normal startup and operation, the LED status indicator displays as follows:
 - Solid amber while the RXi Industrial Display unit is starting up
 - Solid green during normal operation
 6. Once power is applied, the unit begins initializing. The first thing to display is the splash screen.
- Be sure to connect a DC power cord to this 3-pin power connector. Using a voltage out of the range may fail to boot the system or cause damage to the system board.

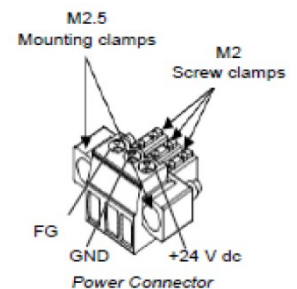

Note: All RXi Industrial Displays are configured with reverse voltage protection to mitigate power failure if plugged in by error.

6.1.2 I/O and Connectors

DC_IN1


(3.5mm Pitch 1x3 Pin Connector), DC24V power input connector

Pin #	Power Input
Pin1	DC+24V
Pin2	Ground
Pin3	FG

HDMI (HDMI Input)

(HDMI Connector), High Definition Multimedia Interface connector, provides high-quality video and audio input.

 Figure 99: HDMI Layout



Signal Name	Pin#	Pin#	Signal Name
DATA2+	1	2	DATA2 Shield
DATA2-	3	4	DATA1+
DATA1 Shield	5	6	DATA1-
DATA0+	7	8	DATA0 Shield
DATA0-	9	10	CLK+
HDMI CAB DET	11	12	CLK-
NC	13	14	NC
HDMI SCL	15	16	HDMI SDA
GND	17	18	HDMI 5V
HDMI HPD	19		

DP1 (Display Port Input)

(Display Port Connector), Display Port Interface connector, provide high-quality video and audio input.

Signal Name	Pin#	Pin#	Signal Name
LANE3-	1	2	GND
LANE3+	3	4	LANE2-
GND	5	6	LANE2+
LANE1-	7	8	GND
LANE1+	9	10	LANE0-
GND	11	12	LANE0+
GND	13	14	GND
AUX_CHP	15	16	DP CAB DET
AUX_CHN	17	18	DP HPD
RETURN	19	20	DP 3.3V

DP2 (Display Port Output)

(Display Port Connector), Display Port Interface connector, provide high-quality video and audio output.

Signal Name	Pin#	Pin#	Signal Name
LANE0+	1	2	GND
LANE0-	3	4	LANE1+
GND	5	6	LANE1-
LANE2+	7	8	GND
LANE2-	9	10	LANE3+
GND	11	12	LANE3-
GND	13	14	GND
AUX_CHP	15	16	GND
AUX_CHN	17	18	DP HPD
RETURN	19	20	DP 3.3V

CN1 (Debug) - Reserved

(2.0mm 1x4 Pin Header), Reserved for debugging only.

Pin #	Signal Name
1	3.3V
2	UART TX
3	UART RX
4	GND

CN2 - Reserved

(2.0mm 1x4 Pin Header)

Pin #	Signal Name
1	HOST_I2C_SCL
2	HOST_I2C_SDA
3	HOST_IRQ_OUT
4	GND

CN3 - Reserved

(2.0mm 1x4 Pin wafer connector), Reserved for IR receiver

Pin #	Signal Name
1	GND
2	IR
3	3.3V
4	NC

CN4 (OSD)

(2.0mm 1x9 Pin wafer connector), On-Screen Display menu Control connector.

Pin #	Signal Name
1	Power Key
2	R_LED
3	G_LED
4	GND
5	MENU Key
6	DOWN Key
7	UP Key
8	SELECT Key
9	NC

CN5 (LVDS Output)


(2.0mm 2x25 Female Pin Header), Connect to TB-572B, providing LVDS, USB, SM BUS, and LED signals.

Signal Name	Pin#	Pin#	Signal Name
+12V	1	2	+12V
BackLight Enable	3	4	BackLight CTRL
GND	5	6	GND
Panel 3.3V	7	8	Panel 3.3V
Panel 5V	9	10	Panel 5V
GND	11	12	GND
LVDS Odd0-	13	14	LVDS Odd0+
LVDS Odd1-	15	16	LVDS Odd1+
LVDS Odd2-	17	18	LVDS Odd2+
LVDS Odd CLK-	19	20	LVDS Odd CLK+
LVDS Odd3-	21	22	LVDS Odd3+
LVDS Even0-	23	24	LVDS Even0+
LVDS Even1-	25	26	LVDS Even1+
LVDS Even2-	27	28	LVDS Even2+
LVDS Even CLK-	29	30	LVDS Even CLK+
LVDS Even3-	31	32	LVDS Even3+
GND	33	34	GND
USB D-	35	36	USB 5V
USB D+	37	38	GND
GND	39	40	SM Bus CLK1
5V	41	42	SM Bus Data1
Reserved	43	44	Reserved
GND	45	46	SM Bus CLK2
3.3V	47	48	SM Bus Data2
LED1	49	50	LED2

CN6 (USB 2.0)

(2.0mm 1x9 Pin wafer connector), For external USB2.0 signal.

Figure 100: USB2.0

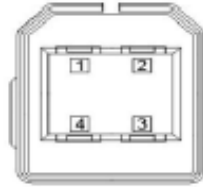

Pin #	Signal Name
1	USB 5V
2	USB-
3	USB+
4	GND

CN7 (Line Out)

(Diameter 3.5mm Jack), Line Out audio port. Line Out can be connected to headphones, speakers, or an amplifier.

Figure 101: Line Out



JP1

(2.0mm Pitch 1x3 Pin Header),

JP1 Pin #	Function
Close 1-2	Backlight Enable & Backlight PWM Level select 3.3V
Close 2-3	Backlight Enable & Backlight PWM Level select 5V

JP2

(2.0mm Pitch 1x3 Pin Header), Backlight control setting.

JP1 Pin #	Function
Close 1-2	For PWM Mode (Default)
Close 2-3	For DC Mode

SW1 - Reserved

Panel Type Select.

6.1.3 LED Indicators

Operation Status LEDs (Screen)

All RXi Industrial Displays have a tri-color LED built into the screen that provides a visual indication of the operation status.

Figure 102: LED Location (Circled)



LED State	System State
Amber, Solid	Operating system starting
Green, Solid	Normal operating state
Green, Blinking	Backlight off
Red, Blinking	Backlight failure
Off	Power not applied to the unit

6.2 RXi - Panel PC


6.2.1 Battery

The lithium-ion battery powers the real-time clock and CMOS memory. It is an auxiliary source of power when the main power is shut off or disconnected. It is a standard CR2032 battery and is accessible on the bottom of the computing module when separated from the screen (as shown below)

Safety Measures

- Danger of explosion if battery incorrectly replaced.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to local ordinances.

Figure 103: CR2032 Battery

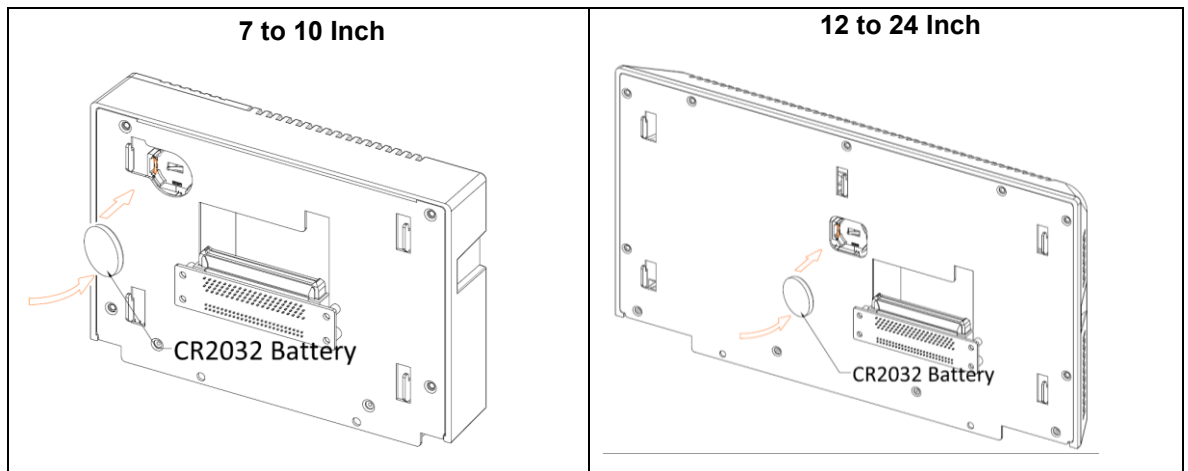


6.2.2 I/O and Connectors

Outside I/O

The rear panel I/O port arrangement consists of the following:

- 1 power button
- 1 24V DC-in 3-pin power connector
- 1 DP++
- 2 USB 3.0 ports
- 2 RJ45 LAN ports
- 1 UART terminal-block
- 1 Line-out jack
- 1 Mic-in jack


Figure 104: Rear Panel Arrangement

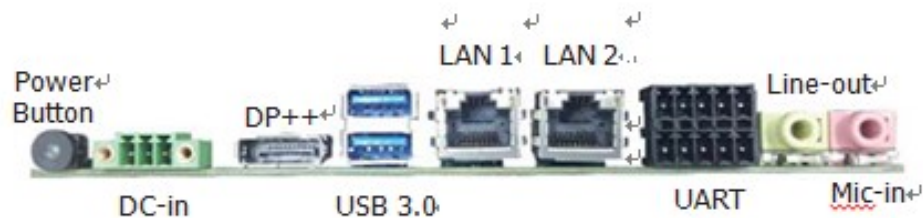

Connecting Input Power (24V DC-in)

To connect to power, follow these steps:

5. Verify that the power cable is not energized.
6. Loosen the screw clamps on the mating power connector.
7. Strip the insulation from the power cables.
8. Secure the power cable to the mating connector, noting polarity, and tighten the screw clamps. The torque for the attaching screws is 0.3 Nm (2.26 in-lb).
9. Apply dc power to the unit. During normal startup and operation, the LED status indicator displays as follows:
 - a. Solid amber while the RXi - Industrial Display unit is starting up
 - b. Solid green during normal operation
10. Once power is applied, the unit begins initializing. The first thing to display is the splash screen.

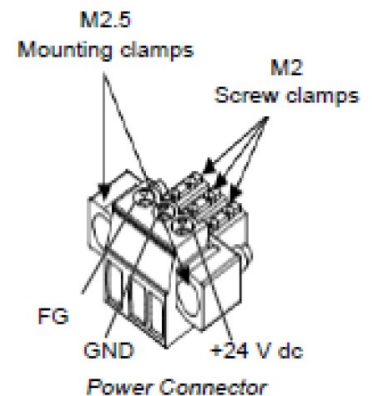

Be sure to connect a DC power cord to this 3-pin power connector. Using a voltage out of the range may fail to boot the system or cause damage to the system board.

Graphics Interface

The display port consists of the following:

DP++ Port

The DP++ is a digital display interface used to connect a display device such as a computer monitor. It is used to transmit audio and video simultaneously. The interface, which is developed by VESA, delivers higher performance features than any other digital interface.

BIOS Setting

Configure the display device in the Chipset menu (“DISPLAY control” submenu) of the BIOS. Refer to chapter 3 for more information.

RJ45 LAN Ports

Features

2 Intel® I210IT PCI Express Gigabit Ethernet controllers (4 on larger box module)

The LAN ports allow the system board to connect to a local area network through a network hub or router.

BIOS Setting

Configure the onboard LAN in the Advanced menu (“Wakeup Configuration” submenu) of the BIOS. Refer to chapter 3 for more information.

USB Ports

The USB ports allow for data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals. The RXi – Panel PC is equipped with 2 onboard USB 3.0 ports (USB 0-1) in the small configuration with an additional 2 USB 2.0 ports (USB 4-5) in the large box configuration.

BIOS Setting


Configure the onboard USB in the Advanced menu (“Wakeup Configuration” submenu) of the BIOS. Refer to chapter 3 for more information.

Wake-On-USB Keyboard/Mouse

The Wake-On-USB Keyboard/Mouse function allows you to use a USB keyboard or USB mouse to wake up a system from the S3 (STR - Suspend To RAM) state.


Panel PC (Base Model) Serial Ports (UART)

Serial Connection	Pin	Function
RS232	1	TXD
	2	RXD
	3	RTS
	4	CTS
	5	GND
RS485	6	TX+
	7	TX-
	8	RX+
	9	RX-
	10	GND



Panel PC (Ryzen Model) Serial Ports (UART)

Serial Connection	Pin	Function
RS232	1	TXD
	2	RXD
	3	RTS
	4	CTS
	5	GND
RS485	6	TX+
	7	TX-
	8	RX+
	9	RX-
	10	GND



Audio

Rear Audio

The system board is equipped with 2 audio jacks (Line-out and Mic-in). A jack is a one-hole connecting interface for inserting a plug.

- Line-out Jack (Lime)

This jack is used to connect a headphone or external speakers.

- Mic-in Jack (Pink)

This jack is used to connect an external microphone.

BIOS Setting

Configure the onboard Audio device in the Chipset menu (“SB HD Azalia Configuration” submenu) of the BIOS.

I/O Connectors

Serial ATA (SATA) Connector

Features

- 1 Serial ATA 3.0 port with data transfer rate up to 6Gb/s
- Integrated Advanced Host Controller Interface (AHCI) controller

The Serial ATA connector is used to connect the Serial ATA device. Connect one end of the Serial ATA data connector to a SATA connector on the other end to your Serial ATA device.

BIOS Setting

Configure the BIOS's Serial ATA drive in the Chipset menu ("SB SATA Configuration" submenu). Refer to chapter 3 for more information.

Expansion Slots

Micro SD Socket

The micro SD socket allows you to install a micro SD card to expand available storage.

LVDS LCD Panel Connector

The system board lets you connect an LCD Display Panel with the LVDS LCD panel connector. This connector transmits video signals and power from the system board to the LCD Display Panel. Refer to the right side for the pin functions of the LVDS connector.

BIOS Setting

Configure the BIOS's LCD panel in the Chipset menu ("DISPLAY control" submenu). Refer to Chapter 3 for more information.

AIO/DIO Connector

AIO/DIO connector provides functionality to external devices connected to the connector. **(FOR FUTURE USE)**


6.2.3 LED Indicators

Operation Status LEDs (Screen)

All RXi Industrial Displays have a tri-color LED built into the screen that visually indicates the operation status.

LED State	System State
Amber, Solid	Operating system starting
Green, Solid	Normal operating state
Green, Blinking	Backlight off
Red, Blinking	Backlight failure
Off	Power not applied to the unit

Ethernet Port Operation LEDs

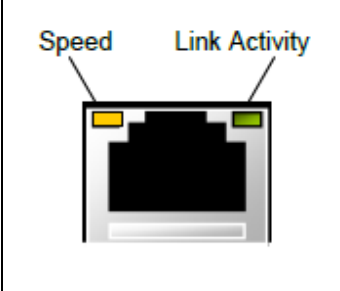	LED	LED State	Operating State
	Speed	Yellow, ON	10/100/1000
	Link Activity	Green, ON	Link Status


6.3 RXi - Web Panel

6.3.1 Jumpers and Connectors Locations

Setting Jumper Functions

1. Locate the SW1 Switch (Figure 105) and remove the display to access the switch.

Figure 105: SW1 Switch Location

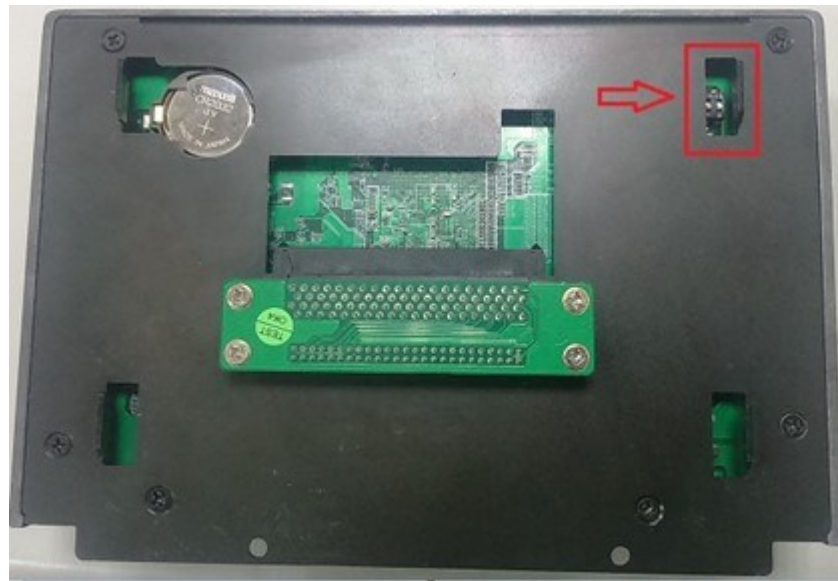

- **Note:** Before installing the Web Panel, please set the necessary functions following the chart below.
- **Note:** Please observe the marking beside the plug to determine Pin 1 of the jumper and port. It will be marked as “1”, a bolded line, or a “△”; see the welding plate at the backside; the square welding plate is Pin 1.


Setting Jumper Functions (SW1)

SW1: 2bit switching ON/OFF, used to set the recording and the starting mode of the Motherboard.

		ON	OFF
SW1	1.BOOT_MODE1_S	UPGRADE MODE	NORMAL MODE

•

Figure 106: Junction Function (SW1)

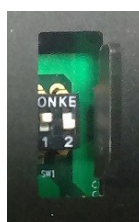

Socket Description

Connecting Input Power (24V DC-in)

To connect to power, follow these steps:

1. Verify that the power cable is not energized.
 2. Loosen the screw clamps on the mating power connector.
 3. Strip the insulation from the power cables.
 4. Secure the power cable to the mating connector, noting polarity, and tighten the screw clamps. The torque for the attaching screws is 0.3 Nm (2.26 in-lb).
 5. Apply dc power to the unit. During normal startup and operation, the LED status indicator displays as follows:
 - Solid amber while the RXi - Industrial Display unit is starting up
 - Solid green during normal operation
 6. Once power is applied, the unit begins initializing. The first thing to display is the splash screen.
- Be sure to connect a DC power cord to this 3-pin power connector. Using a voltage out of the range may fail to boot the system or cause damage to the system board.
- Before connecting the Web Panel to other devices, please read this manual carefully to prevent Motherboard damage.
 - Power Socket (DC_IN1)
 - DC_IN1: (Conn. Header Socket, 3.5mm, 1 x 3PIN), used to provide 24V voltage for the system.

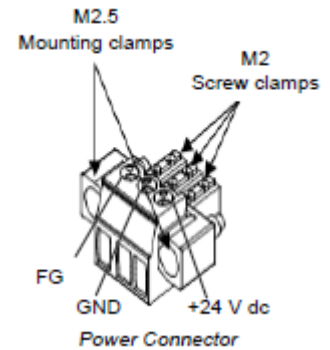



Figure 107: Power Socket (DN-IN1)



6.3.2 USB Socket (USB_OTG1/USB1)

USB_OTG1: Conn. Mini-USB, B-Type Female, SMD-5P With DIP 4pin, used to load system firmware

Figure 108: USB, LAN, and COM Ports

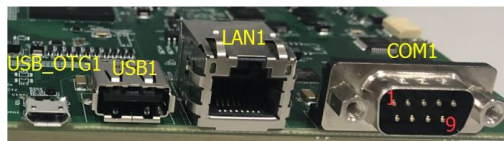

USB_OTG1 Pin#	Signal Name
1	5V_USB_OTG
2	USB_OTG_DN
3	USB_OTG_DP
4	USB0_ID
5	GND

USB1: Type-A connector, supports USB devices.

USB_OTG1 Pin#	Signal Name
1	5V_USB_HOST1
2	USBDN_DM1
3	USBDN_DP1
4	GND
5	GND
6	GND

LAN Socket (LAN1)

LAN 1: Conn. I/O Port, RJ45, 1000M, provide a solid RJ45 Ethernet Dock, GREEN denotes data transfer, and YELLOW verifies a connection to the Internet.

Connecting Socket (COM1)

COM1: Conn. I/O Port, RS232, DB9, Male. Standard DB9 port, provide one route for RS232/422/485.

COM1 Pin#	Signal Name
1	DCD1-_422TX-_485-
2	RXD1_422TX+_485+
3	TXD1_422RX+
4	DTR1-_422RX-
5	GND
6	NC
7	NC
8	NC
9	NC

SD-Card Socket (SD1)

SD1: Socket, mini SD/TF Card, 9 pins, SMD, supports SD/TF Card devices.

BAT1 Socket (BAT1)

BAT1: BAT Socket, BS-10-A1B0J001, 20mm SMT, supports non-chargeable batteries. CR-2032

Backlight Board Socket (BTB_MAIN_TB572B_1)

BTB_MAIN_TB-572B_1: Conn. Female, WCON, 2243-225M3CUT, 2 x 25P, 2.00mm, 180°, H=4.35, 10u”, SMD-50P, TB-572B Backlight Board Socket.

6.3.3 LED Indicators Operation Status LEDs (Screen)

All RXi Industrial Displays have a tri-color LED built into the screen that visually indicates the operation status.

LED State	System State
Amber, Solid	Operating system starting
Green, Solid	Normal operating state
Green, Blinking	Backlight off
Red, Blinking	Backlight failure
Off	Power not applied to the unit

6.3.4 Ethernet Port Operation LEDs

	LED	LED State	Operating State
	Speed	Yellow, ON	10/100/1000
Link Activity	Green, ON	Link Status	

Section 7: Installation and Mounting Information

7.1 Panel Cutout Dimensions

7.1.1 Industrial Monitor

The RXi Industrial Monitor can be panel-mounted as presented in Section 7.2, *Panel Installation Steps*.

A Type 4, Type 4X, or IP 66 rating is achieved when mounted to the flat surface of a sufficiently rated enclosure. Please follow the instructions in Section 7.2, *Panel Installation Steps*.

Panel Thickness: 16⁴ to 7 gauge (1.6 to 5 mm)

Figure 109: Panel Cutout Dimension Definitions



Display Size (in)	Width (mm)	Height (mm)
15	398	245.5
19	482	297
24	581	360

All panel cutout measurements should be within ± 0.5 mm. The values presented are width and height only.

⁴ For IP66 installations of 12-inch displays (IC758CSW12SCREEN-A and IC758COW12SCREENSLR-A) use a 14 to 7 gauge (2 to 5 mm) thick panel.

7.1.2 Panel PC Cutout Dimensions

The RXi Panel PC can be panel-mounted as presented in Section 7.3, *Mounting to Modular Display*.


A Type 4, Type 4X, or IP 66 rating is achieved when mounted to the flat surface of a sufficiently rated enclosure. Please follow the instructions in Section 7.2, *Panel Installation Steps*.

Panel Thickness: 16⁵ to 7 gauge (1.6 to 5 mm)

Panel Thickness: 1.6 to 5mm

All measurements within ±0.5mm

Figure 110: Panel Cutout Dimension Definitions

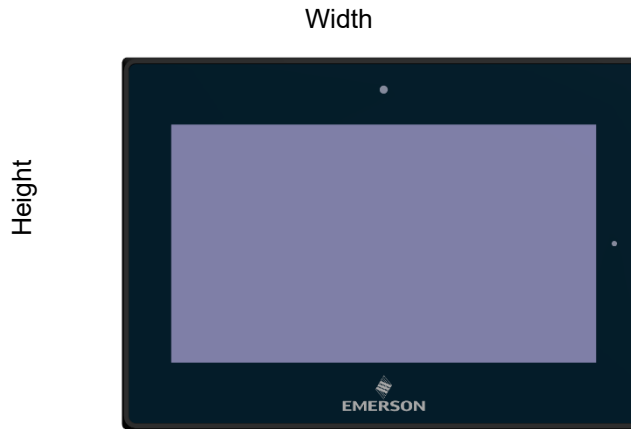


Display Size (in)	Width (mm)	Height (mm)
7	183.5	128.5
10	255.5	174
12	317	214.5
15	398	245.5
19	482	297
24	581	360

⁵ For IP66 installations of 12-inch displays (IC758CSW12SCREEN-A and IC758COW12SCREENSLR-A) use a 14 to 7 gauge (2 to 5 mm) thick panel.

7.1.3 Web Panel Cutout Dimensions

Figure 111: Panel Cutout Dimension Definitions

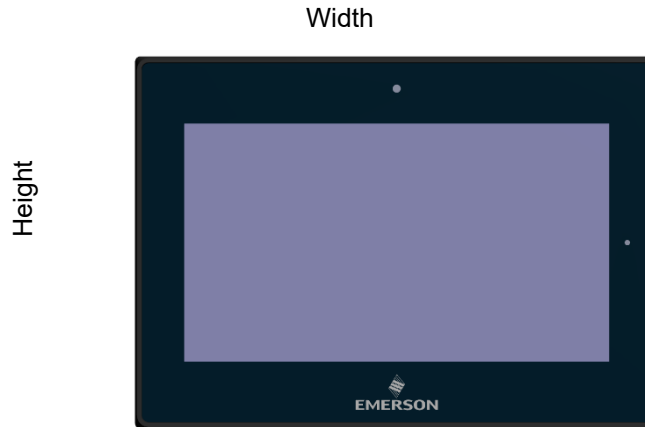


Display Size (in)	Width (mm)	Height (mm)
7	183.5	128.5
10	255.5	174
12	317	214.5
15	398	245.5
19	482	297
24	581	360

7.2 Panel Installation Steps


1. Verify that the gasket is present and properly seated in the bezel channel located on the sides of the unit
2. Insert the unit into the mounting panel cutout

Figure 112: Panel Install View

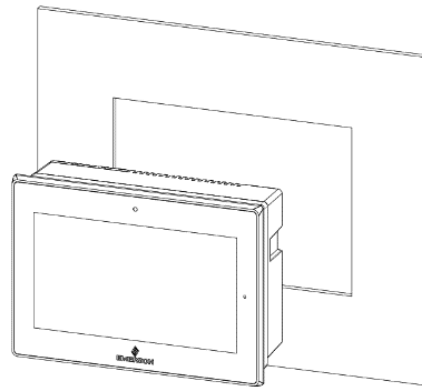


3. Insert the hook of the mounting bracket into the mounting hole, as displayed in the following figure.

Figure 113: Mounting Bracket Insertion

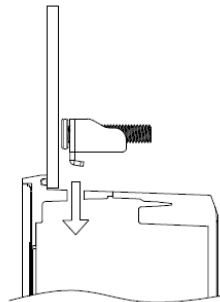

4. Tighten all mounting brackets by hand until the gasket seal contacts the mounting surface uniformly.
5. In a cross pattern around the monitor, tighten all mounting clip screws to a torque of 13 to 13.9 in-lbs. (15 to 16kgf-cm) making sure not to overtighten the bracket.

Figure 114: Tighten Mounting Bracket

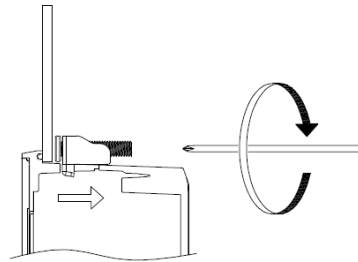

7.3 Mounting to Modular Display

Figure 115: 7" Mount

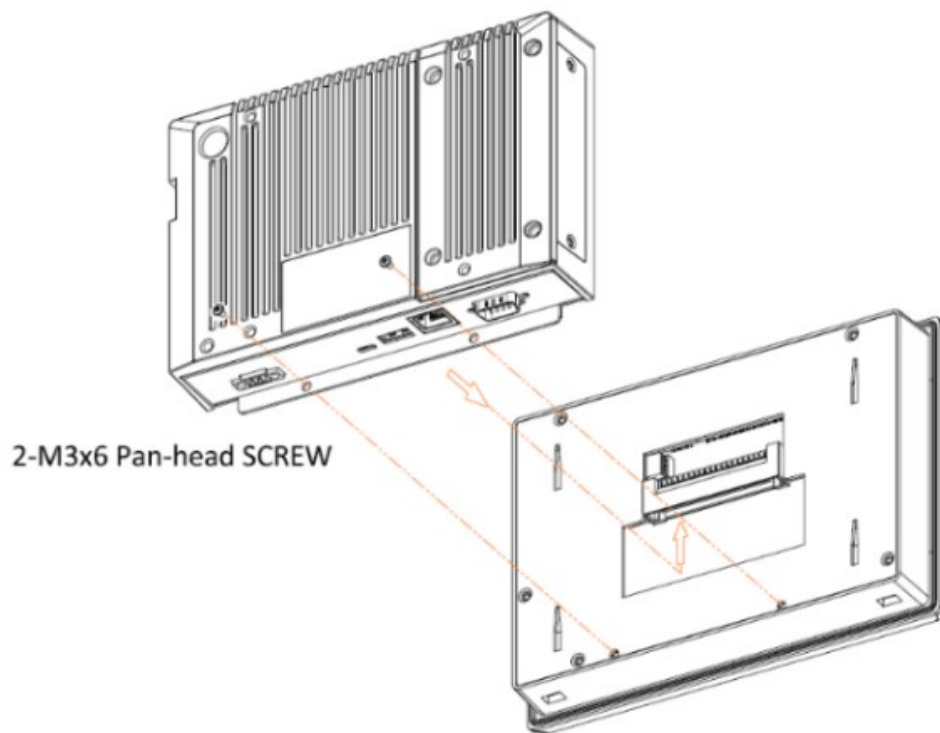


Figure 116: 10" Mount

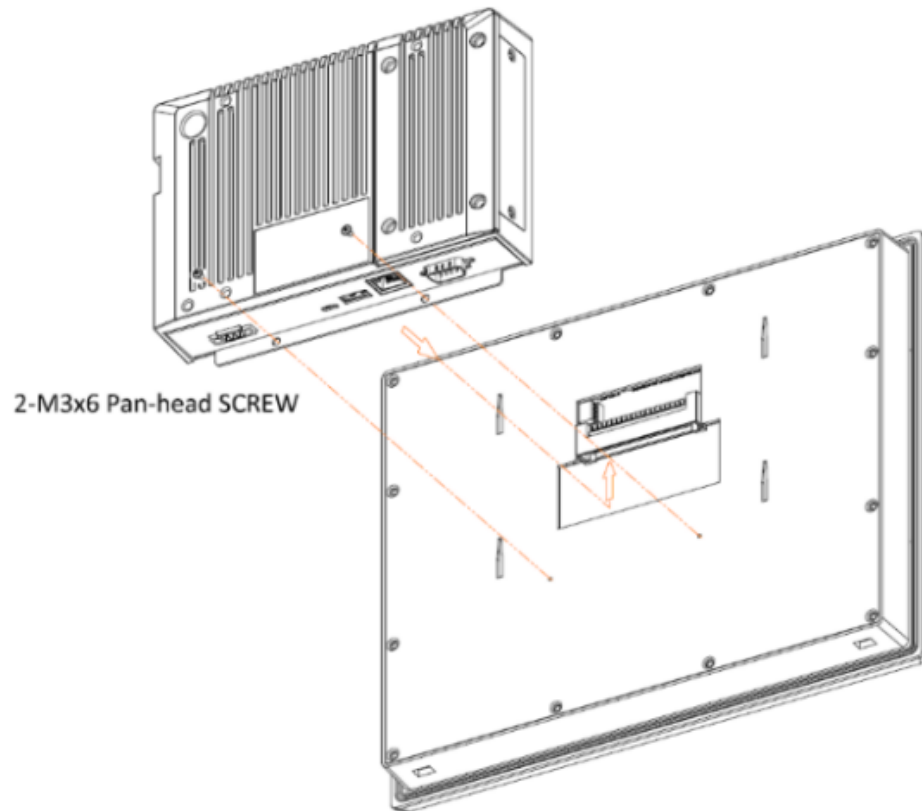


Figure 117: 12" Panel Mount

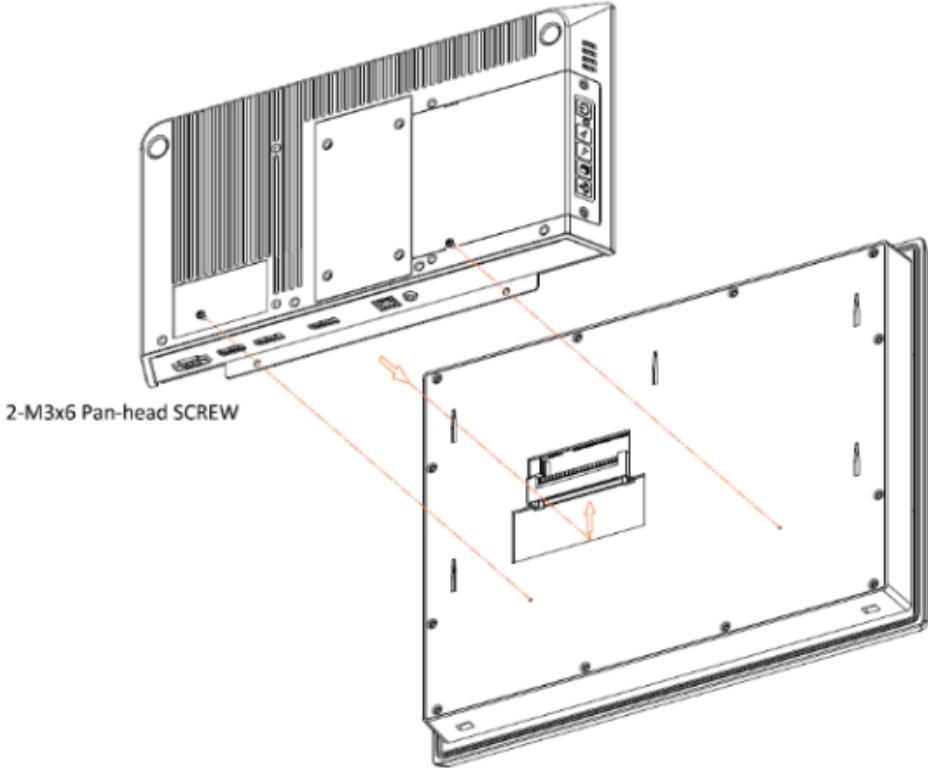


Figure 118: 15" Panel Mount

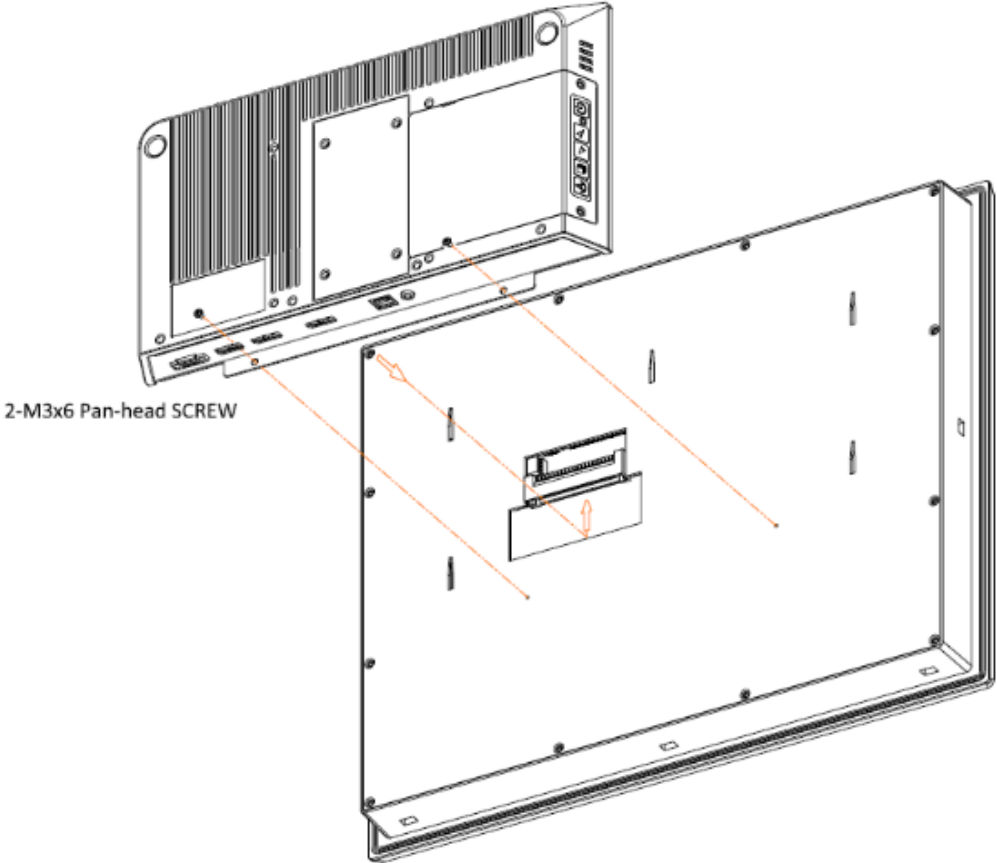


Figure 119: 19"/24" Panel Mount


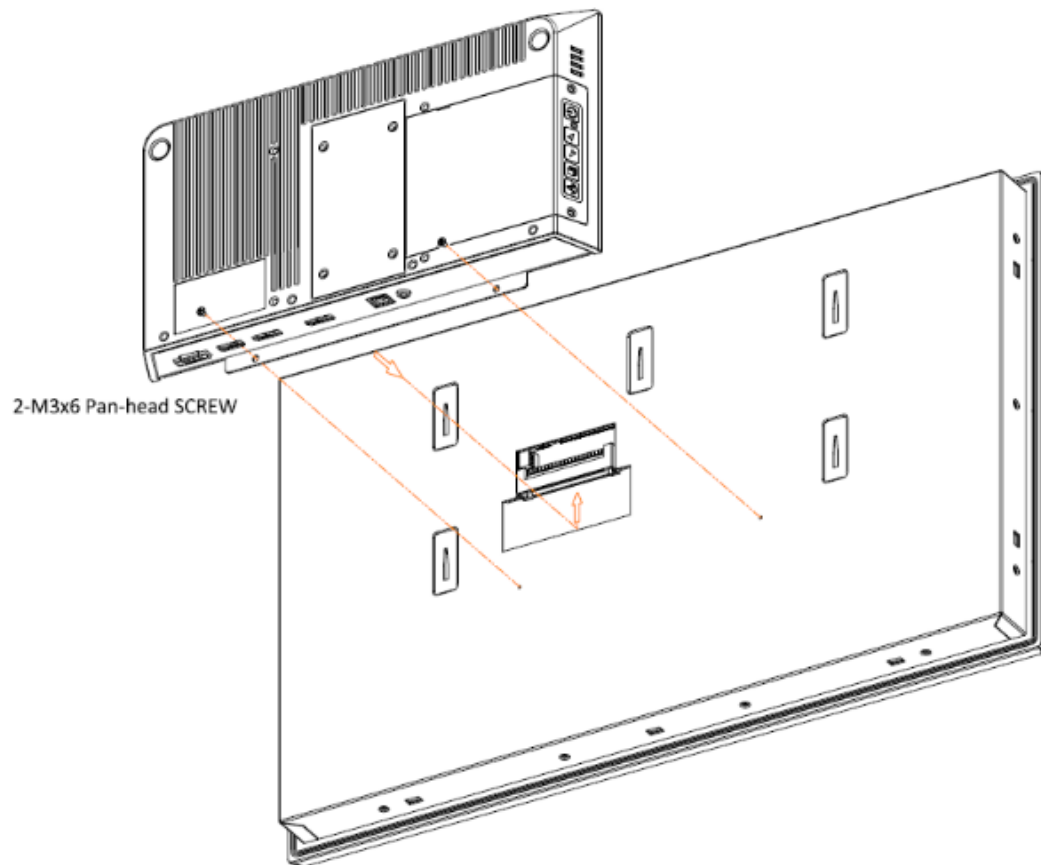


Figure 120: Panel PC with AMD Ryzen Mount

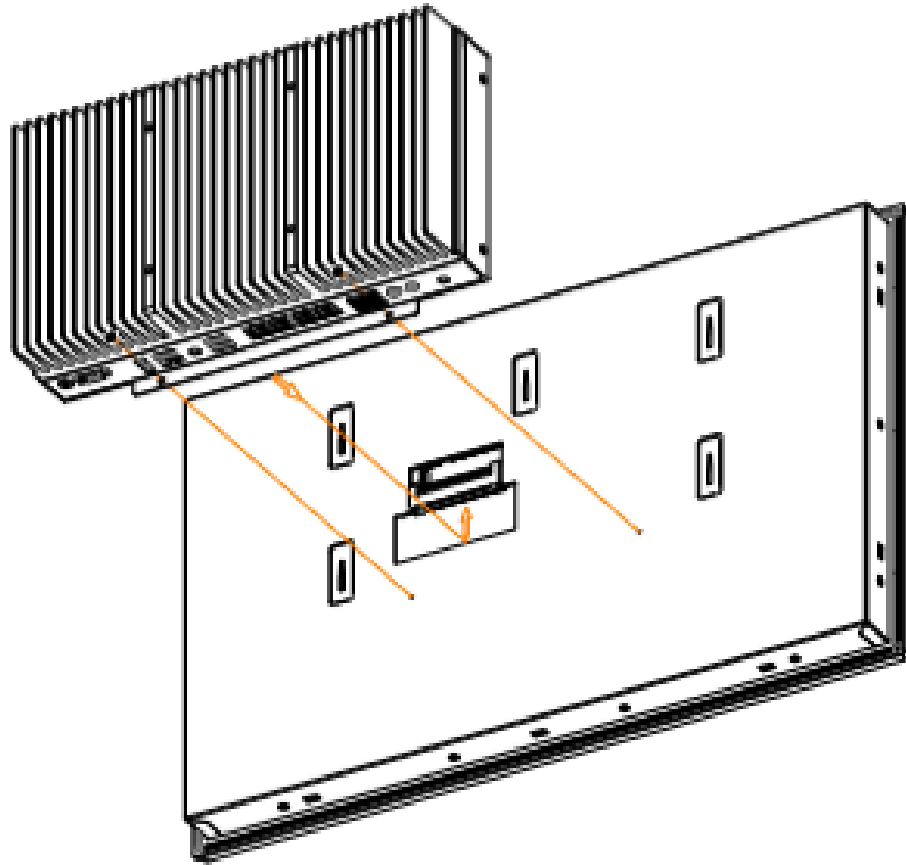

7.4

VESA Mount

Figure 121: 7" VESA Mount

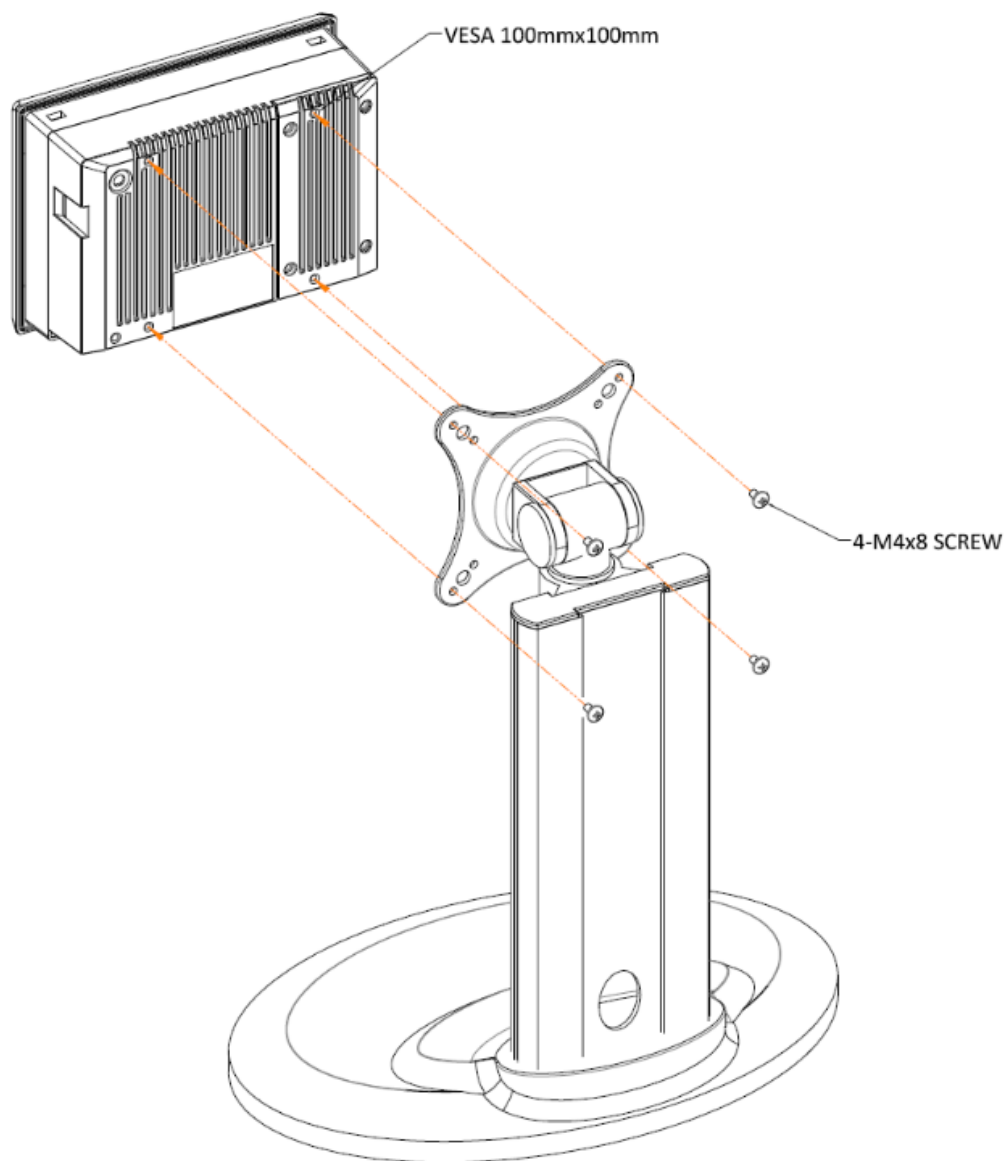


Figure 122: 10" VESA Mount

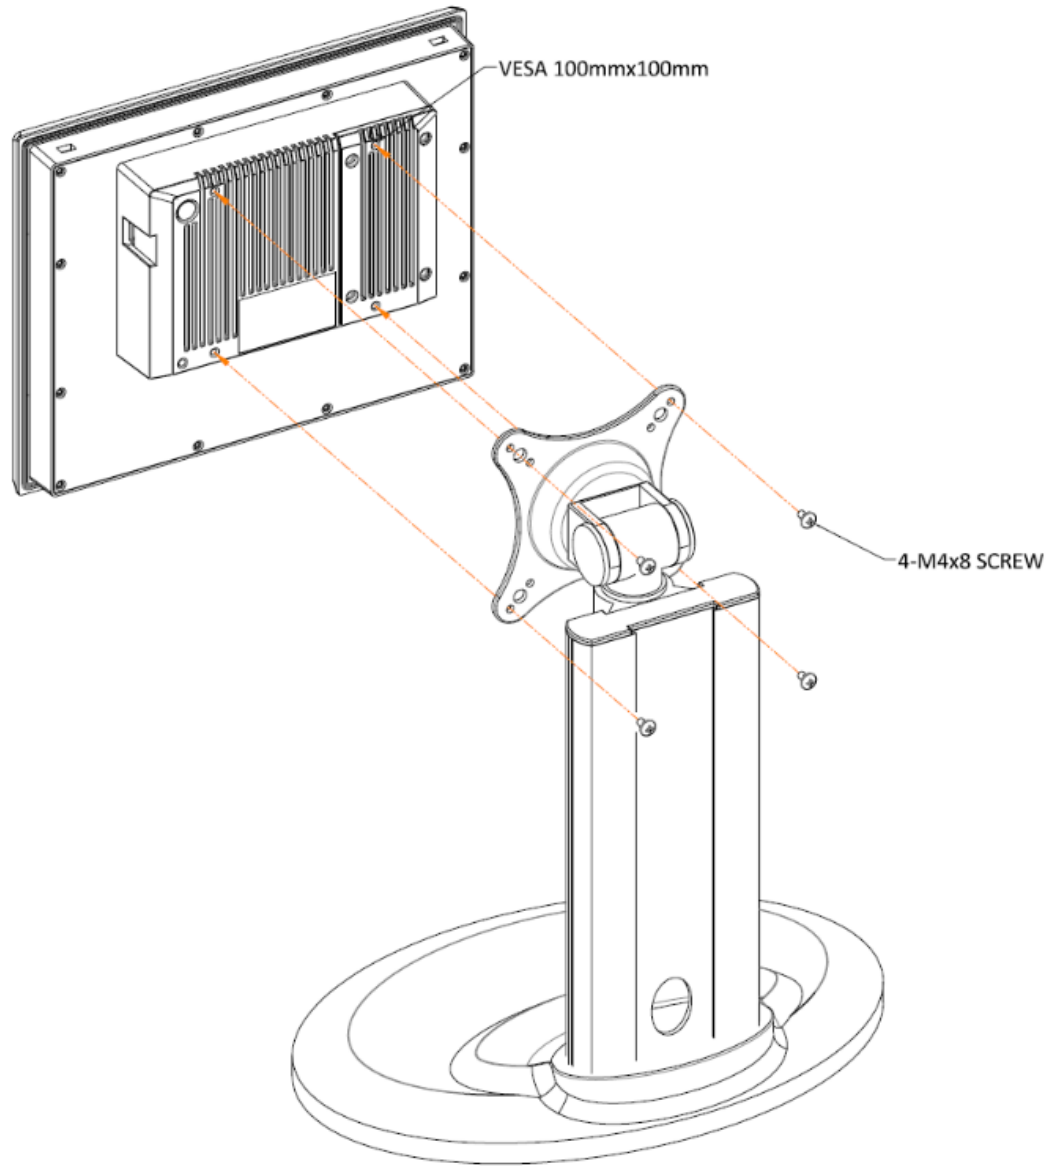


Figure 123: 12" VESA Mount

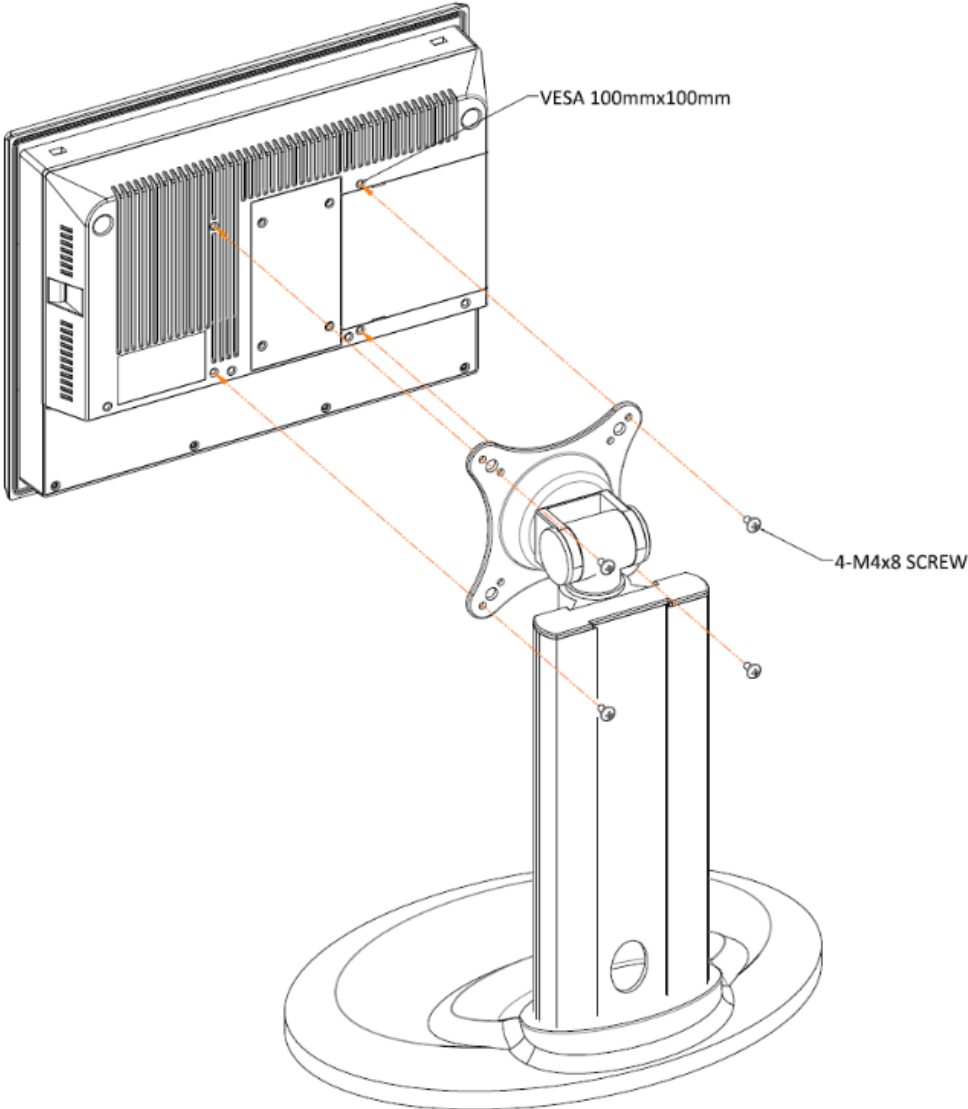


Figure 124: 15" VESA Mount

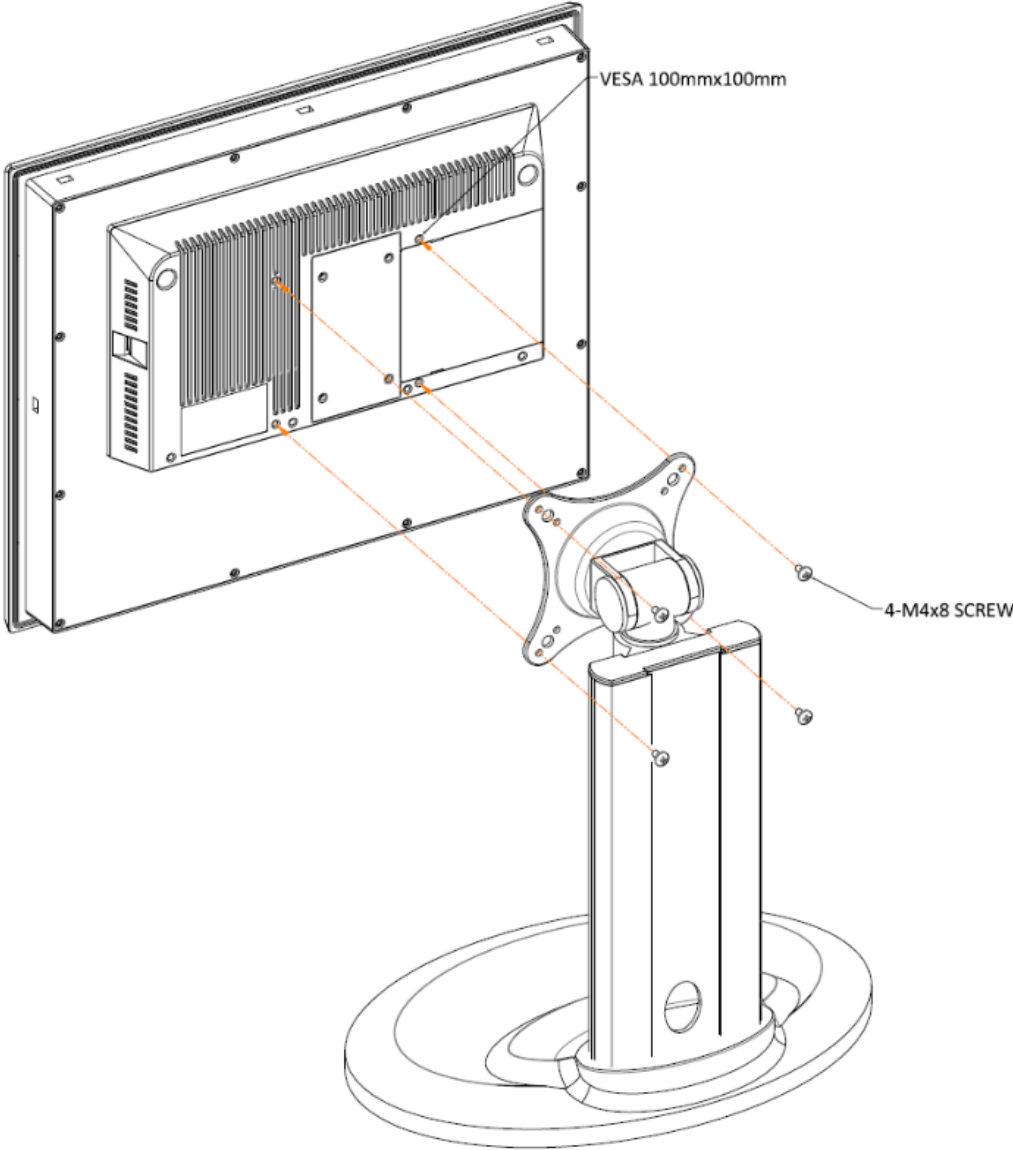


Figure 125: 19"/24" VESA Mount


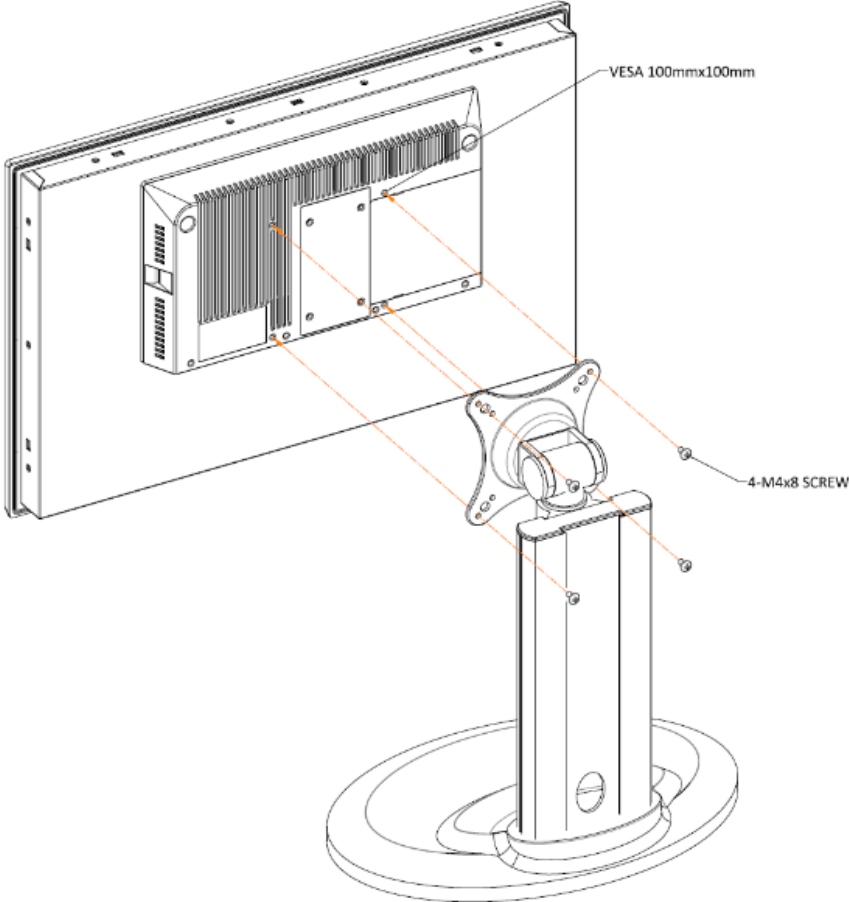


Figure 126: Panel PC with AMD Ryzen VESA Mount

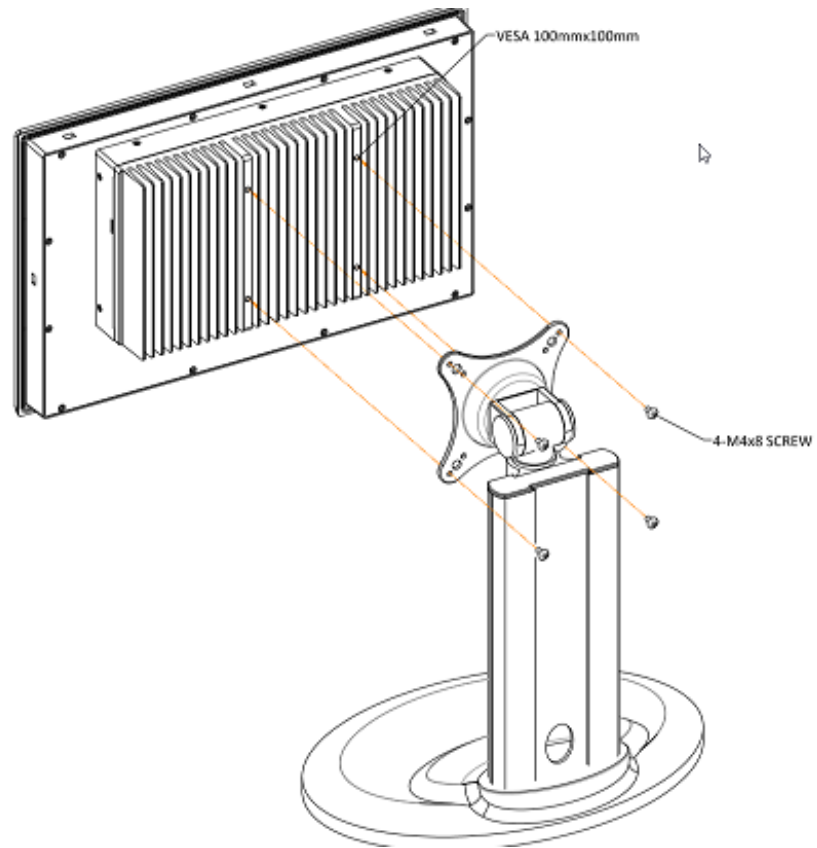

⚠ CAUTION

- Tighten the mounting clip screws by hand until the gasket contacts the mounting surface uniformly.
- Tighten the mounting clip screws to a torque of 8-10 kgf-cm using the specified sequence. Be sure not to overtighten.

Section 8: Firmware Update Instructions for the RXi-Panel PC and RXi2-LP IPC

The following Firmware Update requires the user to use a portable media storage device. Users can deploy to either a DVD or a USB stick.

8.1 Deploy to DVD (Option 1)

1. Place a blank DVD in your optical drive.
 - a. If your system does not have a DVD drive, connect an external DVD drive to the system first.
 - b. **Note:** The optical drive must support DVD burning to continue with this process.
2. Download the .iso file to your computer, and open File Explorer to the .iso file location
3. Right-click on the .iso file and select **Burn disk image**.
4. A prompt will appear requesting the user to select the disk burner. Select the disk burner containing the blank DVD and select **Burn**.
 - a. If you only have one disk burner with a blank DVD inside, it will default to that burner.
 - b. Optionally, select **Verify disc after burning**, but it is not required for this process
5. The optical drive will begin burning the DVD. Upon completion, the Windows Disk Image Burner will notify you that the process is complete and that the drive's contents will be viewable in File Explorer.
6. Once the process is complete and the files are viewable, you may recover the system.

8.2 Deploy to USB Stick (Option 2)

1. Insert a blank USB drive into your computer.
 - a. This process may erase any data stored on the USB drive. If your selected USB drive contains any important data, please create a backup of the files before proceeding.
2. Download the .iso file to your computer and open your USB boot media creation tool.
3. Following the process with your chosen USB boot media creation tool.

8.3 Recover from Image


1. During startup, open the boot menu by repeatedly pressing **F7**.
2. Under the boot menu, select the recovery image as your boot option.
3. Once you have selected the correct boot option, a Windows PE environment will begin to boot.
4. Once the Windows PE environment has loaded, you will be presented with a GUI with multiple options.
5. Select **Recover**, and the process will begin.
6. Once the process has been completed, the unit will automatically restart. Once it has restarted, remove your recovery media, and the unit will boot into Windows 10
 - a. NOTE: If the boot priority has been changed, please go back into BIOS to adjust the boot priority to ensure the internal SSD is the primary boot device

8.4 Steps for Checking the Installed Version

1. Release note file location:

You can find the release notes file in the **AX** directory on the recovery disc and the C:\Windows directory (after recovery); the file name will be a string of numbers with no extension.


Figure 127: AX Directory.

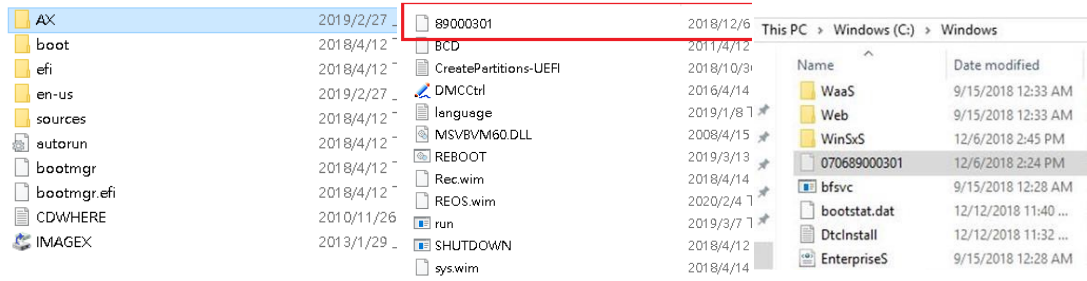

2. Folder Options:

In C:\Windows, the file properties of the release notes file are set to hidden; the user must change the file browsing settings in **Folder Options** to see the file.


Figure 128: Folder Options

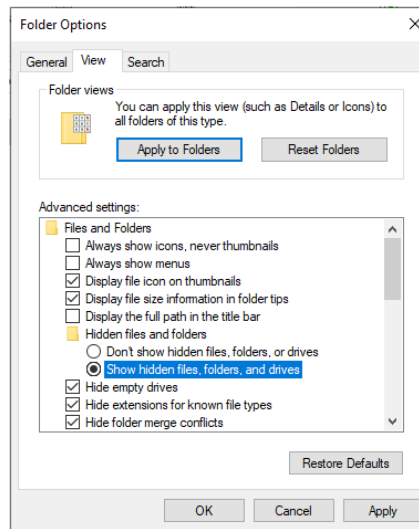

3. Revision check:

The release notes file uses dates to publish each change.

Figure 129: Release Notes

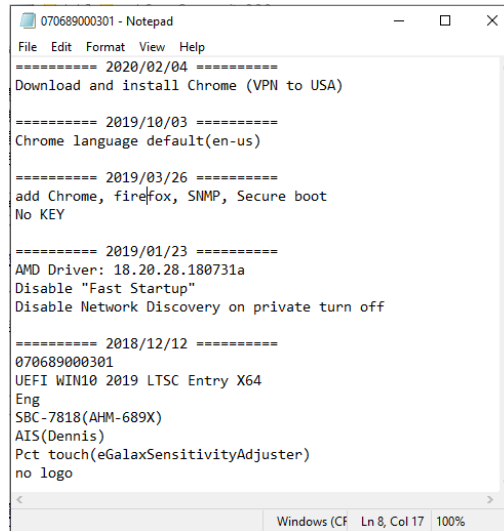

```
070689000301 - Notepad
File Edit Format View Help
===== 2020/02/04 =====
Download and install Chrome (VPN to USA)

===== 2019/10/03 =====
Chrome language default(en-us)

===== 2019/03/26 =====
add Chrome, fireffox, SNMP, Secure boot
No KEY

===== 2019/01/23 =====
AMD Driver: 18.20.28.180731a
Disable "Fast Startup"
Disable Network Discovery on private turn off

===== 2018/12/12 =====
070689000301
UEFI WIN10 2019 LTSC Entry X64
Eng
SBC-7818(AHM-689X)
AIS(Dennis)
Pct touch(eGalaxSensitivityAdjuster)
no logo

Windows (CF Ln 8, Col 17 100%
```

Section 9:RXi Panel PC Windows Activation Procedure

The preloaded Windows 10 IOT Enterprise image on Panel PC is not activated by default. The product key is on the rear of the Panel PC backing module to activate Windows 10 IOT Enterprise.


9.1 Activate a Windows 10 IoT Enterprise LTSC device Using an Internet Connection

NOTICE

It is required to place the Panel PC unit in a DMZ network architecture with internet access temporarily to perform the activation with Microsoft.

1. Press the Windows key (Start button), then go to Settings > Update and Security > Activation (or) Launch This PC properties.
2. Proceed with license activation by pressing the **Change Product Key** option highlighted in the below image in green color.

Figure 130: Activation

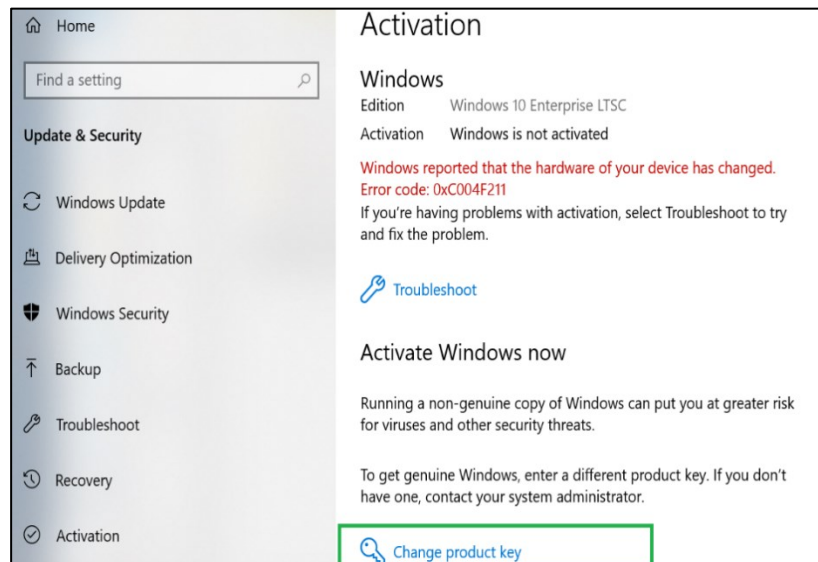

Note: Ignore the error message – “Windows reported that your device's hardware has changed. Error code: 0xC004F211.”


1. Find the **Product Key Sticker** on the rear side of the Panel PC backing module, as shown in (Figure 131).

Figure 131: Product Key Sticker



2. Part of the **Product Key** may be covered with gray scratch ink. Remove (scratch) the ink layer to reveal the Product Key, as shown in (Figure 132).

Figure 132: Removing the Scratch Layer

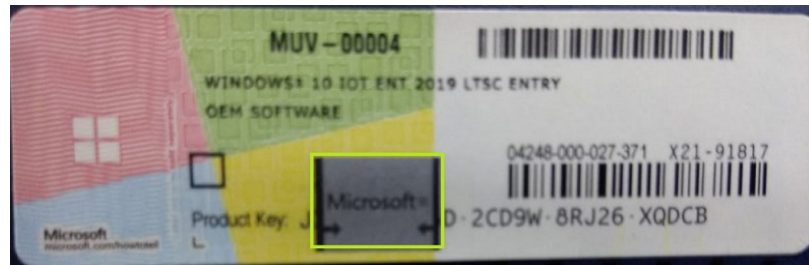

3. Enter the retrieved **Product Key** into the popup box and press **Next** (Figure 133).

Figure 133: Enter the Product Key



4. The Windows 10 product key is now active.

9.2 Activate a Windows 10 IoT Enterprise LTSC Device Using a Telephone

1. On the device, open a command prompt as the administrator.
2. Navigate to the `<system drive>:\Windows\System32` with folder type `slmgr.vbs /ipk XXXXX-XXXXX-XXXXX-XXXXX-XXXXX`. The `XXXXX` characters will be the 25-character product key present on the side of the device (Figure 134).
3. **The Product Key** is on the Panel PC backing module, as shown below.

Figure 134: Product Key Sticker




4. The Product Key part is covered by the scratch layer, as highlighted below. The user needs to retrieve this by removing the scratch layer (scratch-off Microsoft labeled layer), as highlighted below.

Figure 135: Revealing the Product Key




5. After step 2, a message stating that the Product Key was installed successfully. Click **OK** to proceed.

Figure 136: Windows Script Host

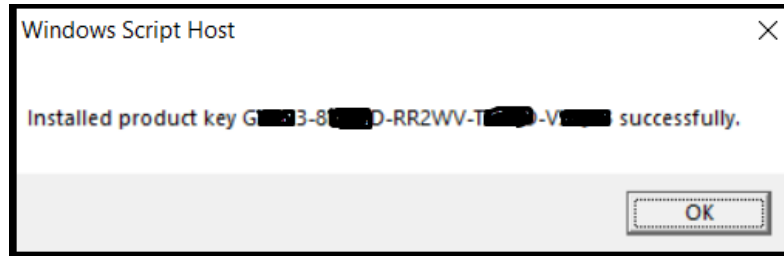

6. Press the **Win+R** keys to open **Run**, then type: **SLUI 4** and click **OK**.


Figure 137: Run the SLUI 4 Command

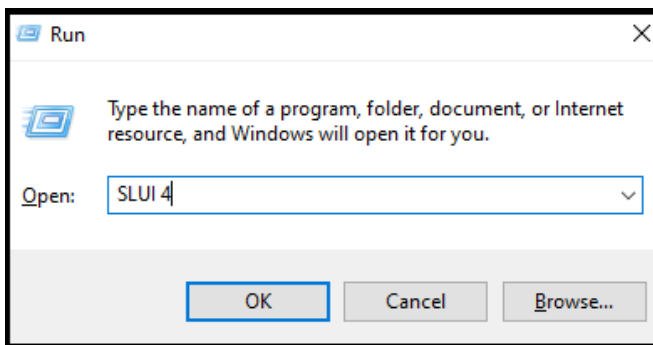

Note: There is a space between SLUI and 4. The four option instructs SLUI to launch the telephone activation UI.


7. Select your country or region and click **Next**. It navigates to the next page, where we can see the **Installation ID**.

Figure 138: Select Country or Region

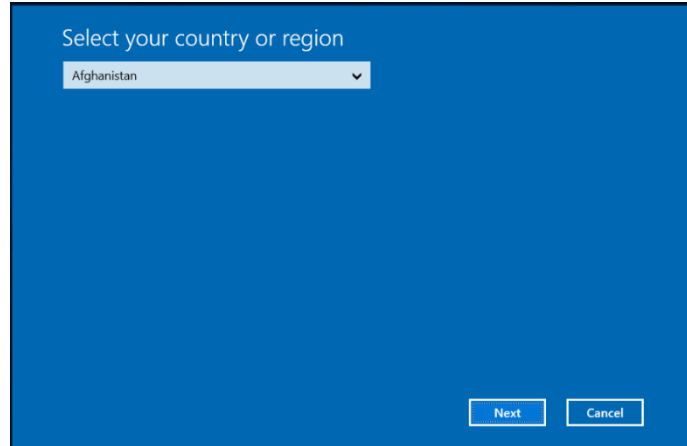


8. Call the Microsoft Product Activation Center. (The phone number is provided based on the selected region.) Proceed through the automated menu and answer a few questions about the Windows activation.
9. The user must confirm the 63-digit Installation ID number at the end of the automated menu. Enter the Installation ID number as shown in Figure 139. The Installation ID number will be grouped into sets of nine (seven digits per set).

Figure 139: Technical Support

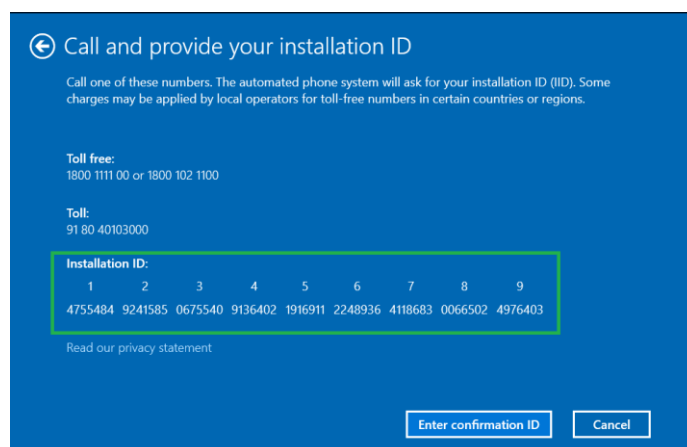

- The phone activation system will provide the user with a 48-digit **Confirmation ID**. Enter the Confirmation ID as seen in (Figure 140).


Figure 140: Confirmation ID

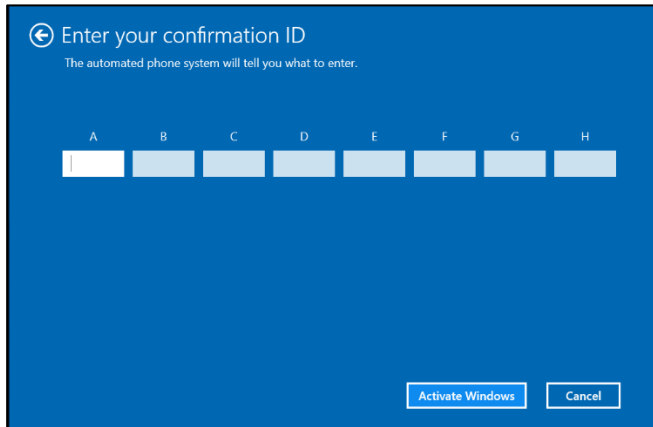

- Once the Confirmation ID has been entered, click the **Activate Windows** button.
- To verify the licensing status, open the command prompt as the Administrator on the device.
- Navigate to the <system drive >:\Windows\System32 folder, and type **cscript slmgr.vbs /dlv**, and verify that the License Status now displays Licensed.

Example: c:\Windows\System32>cscript slmgr.vbs /dlv

Figure 141: Command Prompt

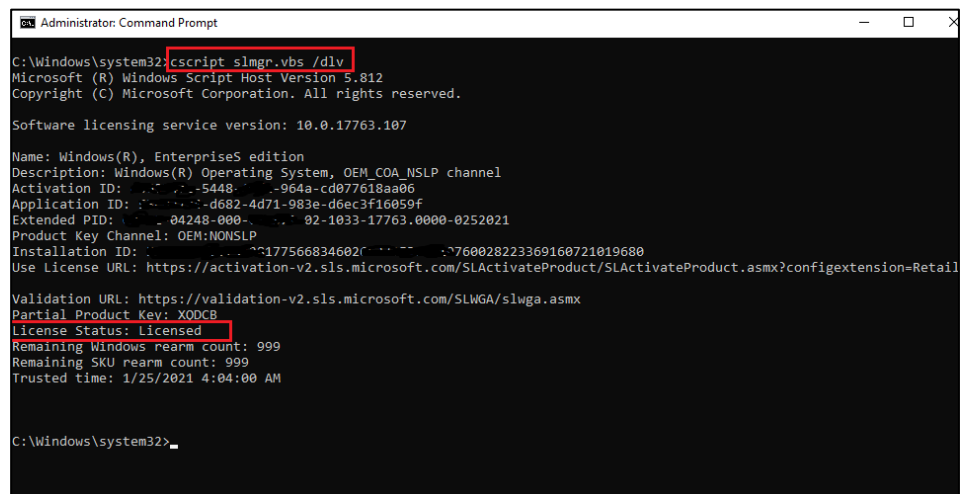


Section 10: Firmware Update Instructions for the RXi - Web Panel

10.1 Updating Firmware with Physical Access to Web Panel

Note: These firmware steps are applicable for build versions until R313 and from R328 also.


1. Remove the display to access the switch, and do not reattach the display until the upgrade process is completed.

Figure 142: SW1 DIP Switch

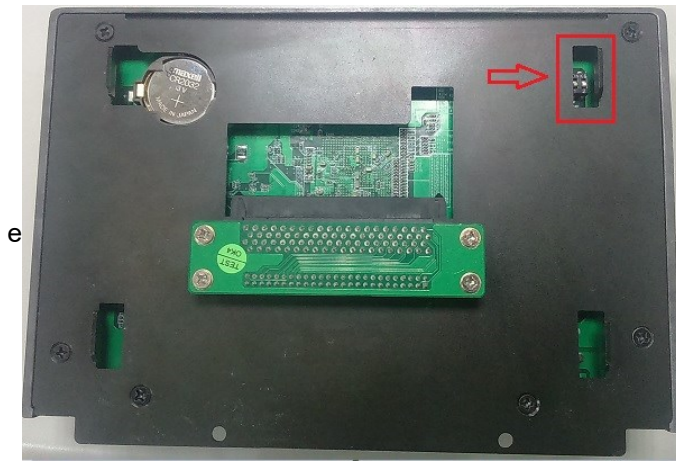

2. Change SW1 1 to **ON** to enable download mode.

Figure 143: SW1 Switch Toggled to ON

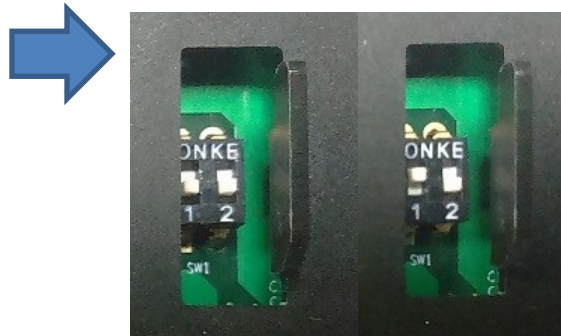


3. Connect a Micro USB Cable from your desktop/laptop PC (running the Windows operating system) to the web panel in the OTG port on the Web Panel.

Figure 144: OTG Port Location






4. Power on the Web Panel, and then on your desktop/laptop PC, double-click the firmware update tool **mfgtool2-yocto-mx-sabresd-emmc.vbs** executable file.

Figure 145: VBS Location

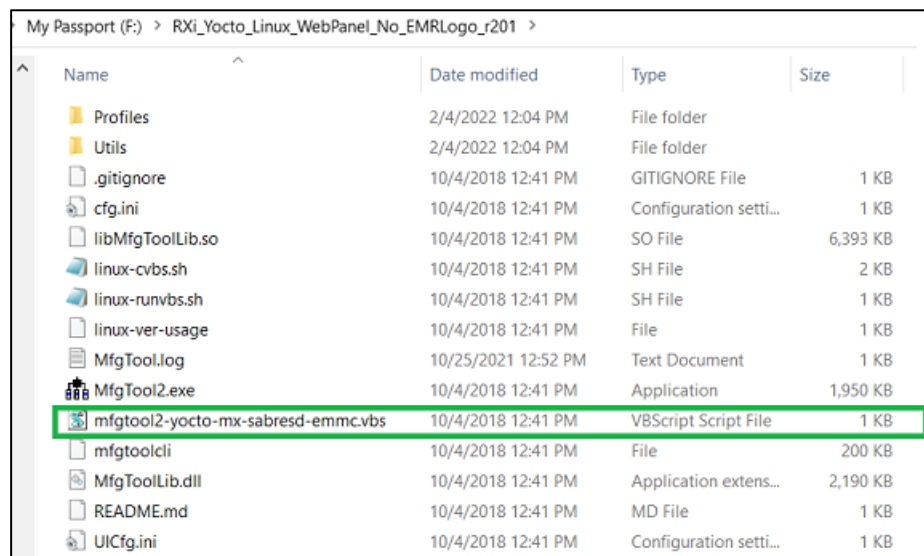


5. If a USB connection is detected, you will see the **HID-Compliance device**, as shown in the following picture, then click **Start** to update the Web Panel firmware.

Figure 146: HID-Compliant Device

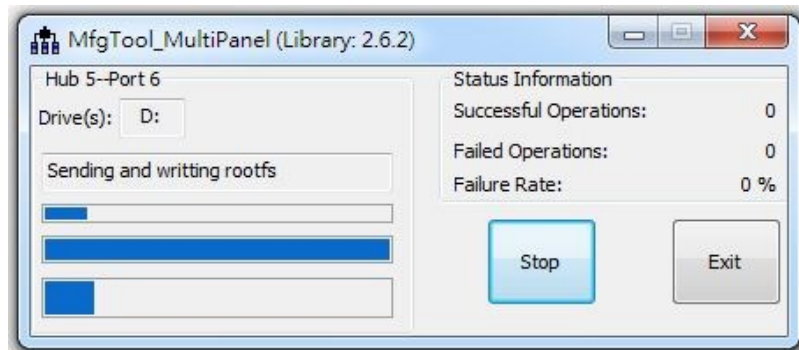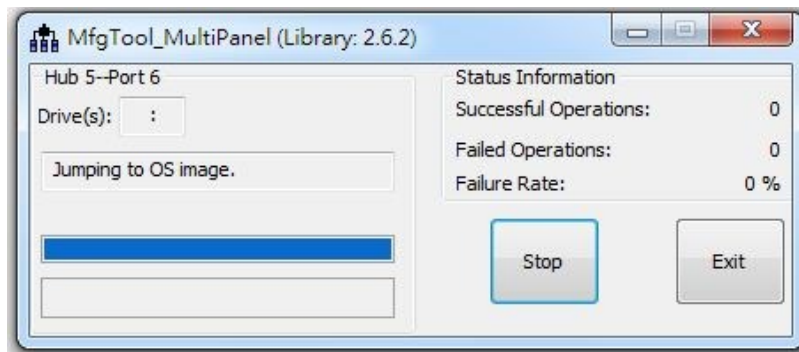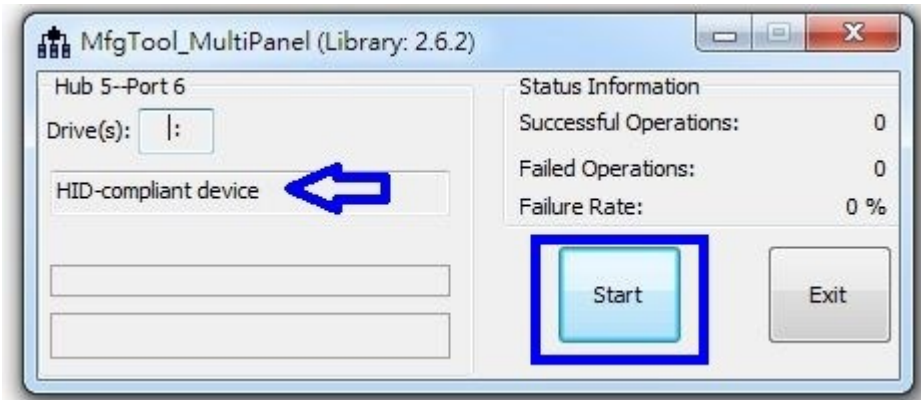


- Upon completing the update, you will see **one** under **Successful Operations**—Click **Stop** and **Exit**, then Power-off Web Panel.

Figure 147: Successful Operations

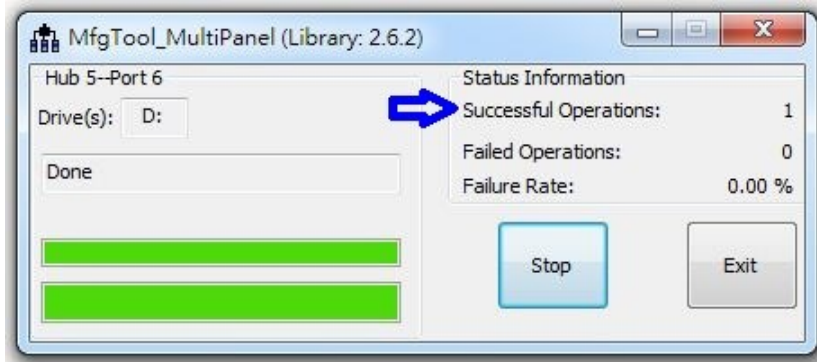

- Adjust SW1 1 back to **Off** for normal operation mode.

Figure 148: SW1 Toggled to OFF

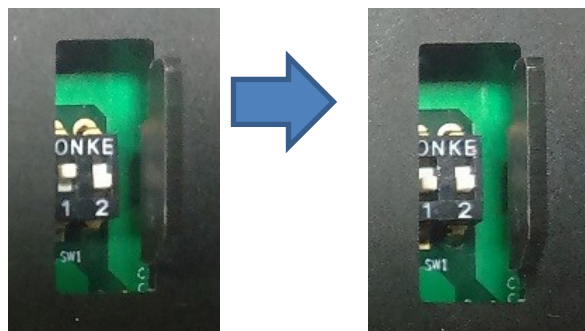

10.2.2 Copying Firmware Files to the Web Panel

The RXi Web Panel's firmware image can be updated using SSH.

1. Use the OpenSSH command line version (preinstalled on Windows or Mac OS) for copying the files.

Or

Use the WinSCP tool to copy the firmware files from the Desktop/Laptop to Web Panel Device. WinSCP tool can be downloaded from the below site:

<https://winscp.net/eng/download.php>

2. Launch the WinSCP tool and set the parameters as mentioned below:

File Protocol: SFTP


Hostname: <IP Address of WebPanel>

Port number: 22

Username: wpuser

Password: <wpuser password>


Figure 151: Credentials

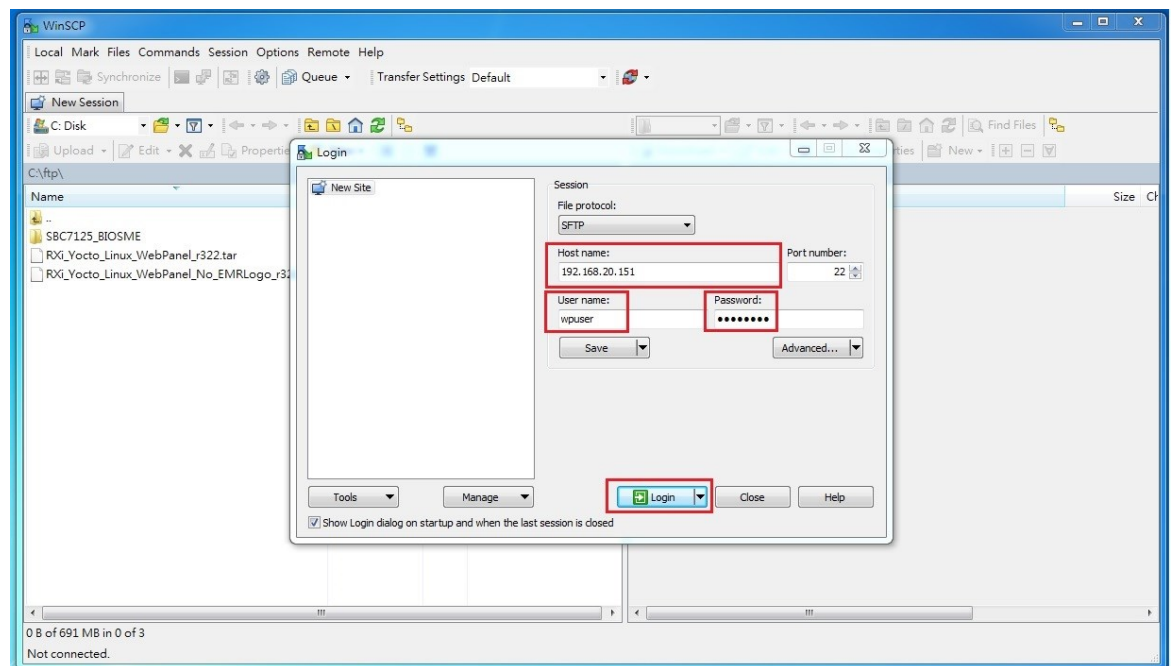

3. Click on **Login**.
4. Drag and drop the firmware file to */tmp* directory of Web Panel.

Note: Firmware filename is RXi_Yocto_Linux_WebPanel_r32X.tgz or RXi_Yocto_Linux_WebPanel_No_EMRLogo_r32X.tgz)
5. Click **OK** to transfer the files.

Figure 152: Transfer the files

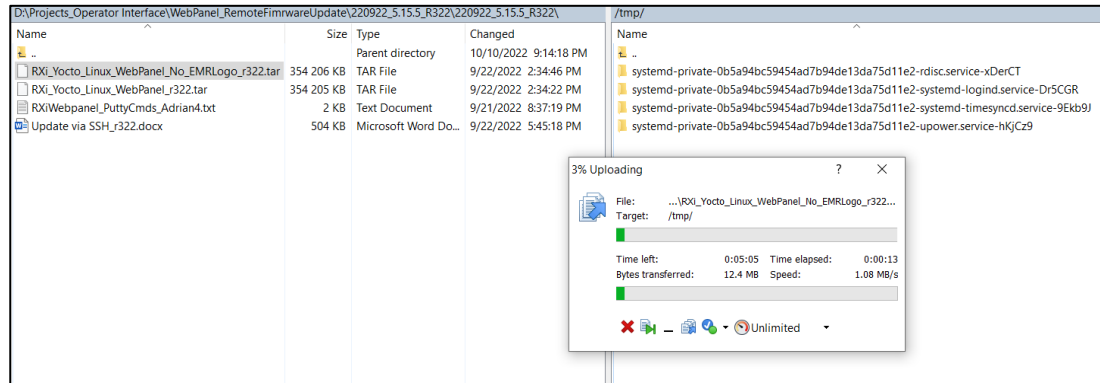

10.3 Updating the Firmware after Copying Firmware Files

10.3.1 Updating Firmware using SSH Client After SSH is Enabled

1. Confirm the IP address using the Network setup page.

Note: This step is necessary if using a DHCP address, Link-Local, or otherwise.
2. Connect to the Web Panel from your SSH client.
3. Verify the fingerprint. If correct, trust it

Figure 153: Verify Fingerprint and then Trust it

```

: user@laptop; ssh wpuser@169.254.16.106
The authenticity of host '169.254.16.106 (169.254.16.106)'
can't be established.
ED25519 key fingerprint is
SHA256:jGwFv9B3DzqrELK7MfZORNSSYsbKQK950GhQxrc+6hQ. COMPARE-TO-
SETUP-PAGE-FINGERPRINT
This key is not known by any other names
Are you sure you want to continue connecting
(yes/no/[fingerprint])? yes
Warning: Permanently added '169.254.16.106' (ED25519) to the
list of known hosts.
    
```

5. Enter the User: **wpuser password**.
6. Switch to the Admin user: wpadmin by running **su wpadmin** and entering the wpadmin password.

Figure 154: Sudo admin

```
webpanel:~$ su wpadmin  
Password: <WPADMIN-PASSWORD>
```

7. Switch to root by running the command: **sudo -s**.

Figure 155: Switch to Root

```
webpanel:/home/wpuser$ sudo -s  
webpanel:/home/wpuser# id  
uid=0(root) gid=0(root) groups=0(root)  
webpanel:/home/wpuser#
```

- Execute lsblk command to check for the partition.

Figure 156: Run lsblk Command

```

192.168.20.132 - PuTTY
login as: wpuser
wpuser@192.168.20.132's password:
Software version:r324
webpanel:~$ su wpadmin
Password:
webpanel:/home/wpuser$ lsblk
NAME                MAJ:MIN RM  SIZE RO TYPE  MOUNTPOINTS
mmcblk3             179:0   0   3.7G  0 disk
|--mmcblk3p1        179:1   0   200M  0 part  /run/media/mmcblk3p1
|--mmcblk3p2        179:2   0   1.6G  0 part
|--mmc_crypt        254:0   0   1.6G  0 crypt /
|--mmcblk3p3        179:3   0   200M  0 part  /run/media/mmcblk3p3
|--mmcblk3p4        179:4   0   1.6G  0 part
mmcblk3boot0        179:8   0     2M  1 disk
mmcblk3boot1        179:16  0     2M  1 disk
webpanel:/home/wpuser$
    
```


```

192.168.20.149 - PuTTY
login as: wpuser
wpuser@192.168.20.149's password:
Software version:r324
webpanel:~$
webpanel:~$ lsblk
NAME                MAJ:MIN RM  SIZE RO TYPE  MOUNTPOINTS
mmcblk3             179:0   0   3.7G  0 disk
|--mmcblk3p1        179:1   0   200M  0 part  /run/media/mmcblk3p1
|--mmcblk3p2        179:2   0   1.6G  0 part
|--mmcblk3p3        179:3   0   200M  0 part  /run/media/mmcblk3p3
|--mmcblk3p4        179:4   0   1.6G  0 part
|--mmc_crypt        254:0   0   1.6G  0 crypt /
mmcblk3boot0        179:8   0     2M  1 disk
mmcblk3boot1        179:16  0     2M  1 disk
webpanel:~$
    
```

Note: The firmware builds R328 or later require the system to boot from the second partition before the update operation can be performed. If you see that mmc_crypt is mounted under mmcblk3p2, then the first boot partition is being used. If you find that the system is using the first boot partition, you cannot perform this version (R328) update. You must first perform an R324 version firmware update, because after the R324 update, the system will switch to using the second boot partition. However, if you see that the system is already using the second boot partition, you can proceed directly with the R328 update.

10. Run Command: `tar -mxvf /tmp/RXi_Yocto_Linux_WebPanel_r32x.tar -C /tmp/`

Figure 157: Run Tar Command

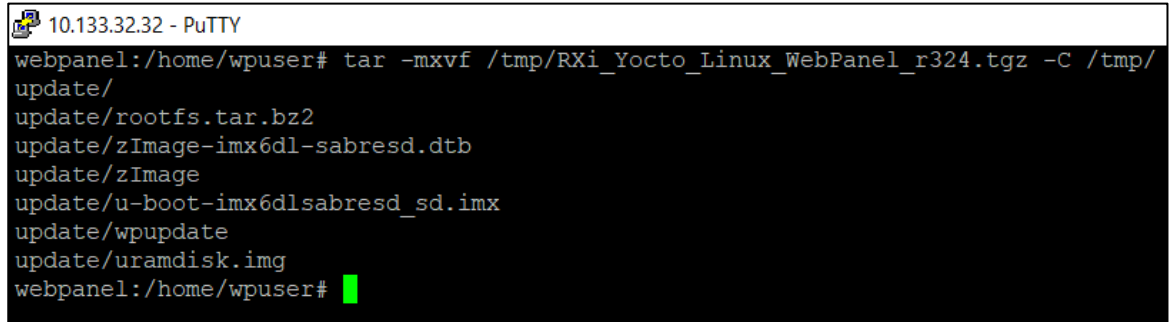


```
10.133.32.32 - PuTTY
webpanel:/home/wpuser# tar -mxvf /tmp/RXi_Yocto_Linux_WebPanel_r324.tgz -C /tmp/
update/
update/rootfs.tar.bz2
update/zImage-imx6dl-sabresd.dtb
update/zImage
update/u-boot-imx6dlsabresd_sd.imx
update/wpupdate
update/uramdisk.img
webpanel:/home/wpuser#
```

Note: If upgrading a Non-Emerson-branded Web Panel (a web panel without an Emerson log), then run the command:

```
tar -mxvf /tmp/RXi_Yocto_Linux_WebPanel_No_EMLogo_r32X.tgz -C /tmp/
```

11. Change the directory to `/tmp/update`: `cd /tmp/update`

Figure 158: Change Directory

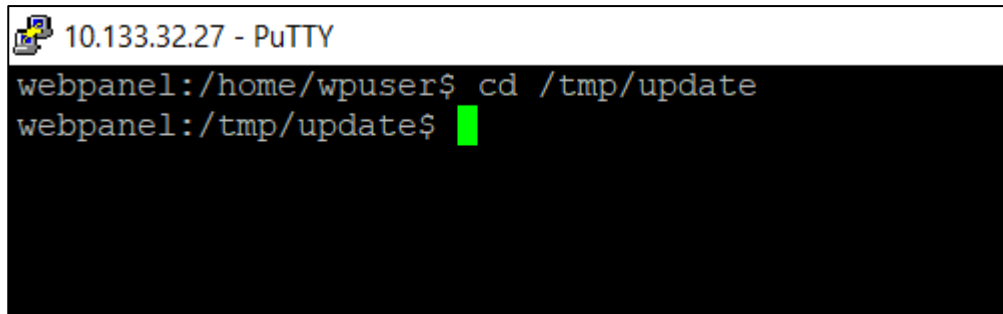

```
10.133.32.27 - PuTTY
webpanel:/home/wpuser$ cd /tmp/update
webpanel:/tmp/update$
```

12. Run: `./wpupdate`

Note: The complete firmware update process takes around 7 minutes. The wpuser/wpadmin Credentials, Network Configuration, and Enabling SSH will be retained after the firmware update.

Appendix A: Open-Source Declaration

RXi Web Panel contains certain 3rd party (including “open source”) content, and Emerson makes the product available to you under the terms and conditions of the 3rd party license agreements governing such content. The copyright statements and licenses apply to various 3rd party content distributed with the Emerson product. The Open-Source Declaration can be downloaded from the below link.

Link: https://emerson-mas.force.com/communities/en_US/Article/RXi-Web-Panel-Open-Source-declaration

General Contact Information

Home link: <http://www.emerson.com/industrial-automation-controls>

Knowledge Base: <https://www.emerson.com/iac-support>

Technical Support

Americas

Phone: 1-888-565-4155

1-434-214-8532 (If toll-free option is unavailable)

Customer Care (Quotes/Orders>Returns): customercare.mas@emerson.com

Technical Support: support.mas@emerson.com

Europe

Phone: +800-4444-8001

+420-225-379-328 (If toll-free option is unavailable)

+39-0362-228-5555 (from Italy - if the toll-free 800 option is unavailable or dialing from a mobile telephone)

Customer Care (Quotes/Orders>Returns): customercare.emea.mas@emerson.com

Technical Support: support.mas.emea@emerson.com

Asia

Phone: +86-400-842-8599

+65-6955-9591 (All other Countries)

Customer Care (Quotes/Orders>Returns): customercare.cn.mas@emerson.com

Technical Support: support.mas.apac@emerson.com

Any escalation request should be sent to mas.sfdcescalation@emerson.com

Note: If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use, or maintenance of any product. Responsibility for proper selection, use, and maintenance of any Emerson product remains solely with the purchaser.

© 2023 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.

