


PACSystem™ RX3i Central Processing Unit IC695CPE305

Quick Start Guide

GFK-2934B

Sept 2019

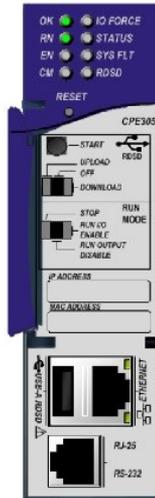

Contents

| | |
|---|-----------|
| User Features | 2 |
| Switches | 4 |
| Switch Operation | 4 |
| Real-Time Clock Battery | 5 |
| Ethernet Port | 5 |
| Serial Port | 6 |
| Removable Data Storage Devices (RDSDs) | 6 |
| Energy Pack | 7 |
| Light-Emitting Diode Indicators (LEDs) | 7 |
| Hardware Installation | 10 |
| Initial Checks | 10 |
| Installation Location | 10 |
| Installation in Hazardous Areas | 11 |
| Class 1 Divison 2 Groups ABCD | 11 |
| ATEX Zone 2 | 12 |
| Module Installation | 12 |
| Module Initial Startup | 13 |
| Initial Configuration | 14 |

User Features

The PACSystems™ RX3i CPE305 can be used to perform real time control of machines, processes, and material handling systems. The CPU communicates with the programmer via the internal Ethernet port or a serial port. It communicates with I/O and Intelligent Option modules over a dual PCI/Serial backplane.

- Supports an updated OPC stack and encrypting connections
- Supports PME's new GUI management interface for OPC UA configuration integration (start, stop, restart, clear, and provisioning mode)
- Supports the new PAC Security tool available for certificate trust management of clients and servers
- Contains 5 Mbytes of user memory and 5 Mbytes of non-volatile flash user memory
- Supports Battery-less retention of user memory
- Configured with an Energy Pack IC695ACC400 to power the CPU long enough to write user memory to non-volatile storage (NVS) on system power loss
- Equipped with configurable data and program memory
- Supports programming in Ladder Diagram, Structured Text, Function Block Diagram, and C
- Supports auto-located Symbolic Variables that can use any amount of user memory
- Equipped with reference table sizes to include 32 Kbits for discrete %I and %Q and up to 32Kwords each for analog %AI and %AQ

- Supports most Series 90-30 modules and expansion racks. For supported I/O, Communications, Motion, and Intelligent modules, refer to the *PACSystems RX3i Hardware and Installation Manual*, GFK-2314
- Supports up to 512 program blocks (Maximum size for a block is 128KB)
- Configured with an RS-232 serial port
- Enabled with an embedded Ethernet interface to support up to 32 simultaneous SRTP Server connections, up to 16 simultaneous Modbus/TCP Server connections, and up to 16 simultaneous communications channels of either SRTP Channels or Modbus/TCP Client channels. For details, refer to the *PACSystems RX3i TCP/IP Ethernet Communications User Manual*, GFK-2224
- Supports OPC UA
- Supports Ethernet Global Data, Class 1
- Supports HART® Pass Through
- Time synchronization to SNTP Time Server on Ethernet network when used with a rack-based Ethernet module (IC695ETM001) version 5.0 or later
- Enhanced ability to display serial number and date code in PME's **Device Information Details**.
- Ability to transfer applications to and from USB 2.0 A type removable data storage devices, or **RDSs**.
- Compliant with EU RoHS Directive 2002/95/EC using the following exemptions identified in the Annex: 7(a), 7(c)-I and III, and 15.

HART® is a registered trademark of the HART Communication Foundation of Austin, Texas USA. Any use of the term HART hereafter in this document, or any document referenced by this document, implies the registered trademark.

Switches

The RDS and Run Mode switches are located behind the front protective door. The Reset switch is not used. Switch operation is given in the following table.

Switch Operation

| RDS Switches | Function | |
|-----------------------|--|-------------------------------------|
| Start pushbutton | Pressing this switch initiates RDS data transfer. (The three-position switch must be set to Upload or Download.) | |
| Three-position switch | Enables/disables RDS data transfer and selects the direction of data transfer. | |
| Upload | Loads application from CPU to RDS. | |
| Off | Disables RDS data transfer. | |
| Download | Stores application from RDS to CPU. | |
| Run Mode Switch | A three-position switch which operates as follows: | |
| Switch Position | CPU and Sweep Mode | Memory Protection |
| Run I/O Enable | The CPU runs with I/O sweep enabled. | User program memory is read only. |
| Run Output Disable | The CPU runs with outputs disabled. | User program memory is read only. |
| Stop | The CPU is not allowed to go into Run mode. | User program memory can be written. |


The **Run Mode** switch can be disabled in the programming software in Hardware Configuration (HWC). The switch's memory protection function can be disabled separately in HWC. The **Run Mode** switch is enabled by default. The memory protection functionality is disabled by default.

Real-Time Clock Battery

The CPE305 is shipped with a real time clock (RTC) battery (IC690ACC001) installed, with a pull-tab on the battery. The pull tab should be removed before installing the CPE305.

There are no diagnostics or indicators to monitor RTC battery status. The RTC battery has an estimated life of 5 years and must be replaced every 5 years on a regular maintenance schedule. If the RTC battery fails, the CPU date and time is reset to 12:00 AM, 01-10-2000 at startup. The CPU operates normally with a failed or missing RTC battery; only the initial CPU Time-of-day (TOD) clock information will be incorrect.

Figure 1: Real-Time Clock Battery

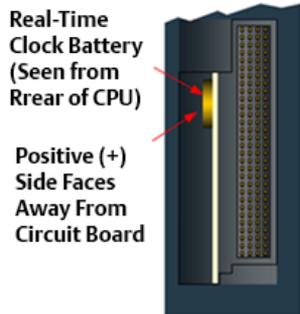

Ethernet Port

The embedded Ethernet interface supports communications with the Machine Edition programming software using the proprietary SRTP protocol. The CPE305 CPU provides two SRTP server connections.

The embedded Ethernet interface has one RJ-45 Ethernet port that automatically senses the data rate (10 Mbps or 100 Mbps), duplex status (half or full duplex), and cabling arrangement (straight through or crossover) of the attached link.

Serial Port

The CPE305 provides one RS-232 serial interface to external devices. This port can be used for firmware upgrades. The port is electrically isolated. For serial port pin assignments and details on serial communications, refer to the *PACSystems RX3i CPU Reference Manual*, GFK-2222.

The RS-232 port does not supply the 5 VDC power offered by other RX3i and Series 90-30 CPUs. Cable IC693CBL316 must be used for RS-232 serial connections to the CPE305.

Removable Data Storage Devices (RDSDs)

The CPE305 provides the ability to transfer applications to and from an RDSD (USB compatible device, such as a memory stick, smart phone, digital camera or MP3 device). Once the data is copied to the RDSD, it can be written to other RX3i CPE305 CPUs with no programmer software needed. The RDSD interface requires a user-supplied flash memory device that complies with the USB 2.0 Specification.

The USB port must be enabled in the RX3i configuration in order to transfer data between the CPU and the RDSD. The CPE305 is shipped with the RDSD (USB) port enabled. Complete details of the use of RDSDs are found in the *PACSystems RX3i CPU Reference Manual*, GFK-2222.

Energy Pack

The CPE305 preserves user memory using an Energy Pack without the need to periodically replace batteries. The IC695ACC400 Energy Pack powers the CPU long enough for the CPU to write its user memory contents to the CPU's non-volatile storage during a system power loss. Installation of the Energy Pack is found below.

Light-Emitting Diode Indicators (LEDs)

OK— indicates module readiness to perform normal operations.

| | | |
|---|------------------|---|
|  | Green, ON steady | CPU passed power-up diagnostics, functioning properly |
|  | OFF | Power is not applied, or CPU has a problem, which may be indicated by RN and EN blink pattern |
|  | Green, blinking | CPU in Stop-Halt state; possible watchdog timer fault. Refer to the fault tables. If the programmer cannot connect, cycle power with a charged Energy Pack attached and refer to fault tables |

RN— indicates the run state of the CPU.

| | | |
|--|------------------|----------------------|
|  | Green, ON steady | CPU is in Run mode. |
|  | OFF | CPU is in Stop mode. |

| | | |
|---|---|---|
|  | Green, blinking in unison with OK | CPU is in boot mode and is waiting for a firmware update through a serial port. |
|---|---|---|

EN— indicates outputs enabled.

| | | |
|---|---------------------|--------------------------|
|  | Green, ON steady | Output scan is enabled. |
|  | OFF | Output scan is disabled. |

CM— indicates activity on the serial communications port.

| | | |
|---|-----------------|-----------------------------------|
|  | Green, blinking | Signal activity on the COM1 port. |
|  | OFF | No activity on COM1 port. |

IO FORCE— indicates override on a bit reference.

| | | |
|---|---------------------|--|
|  | Amber, ON steady | Override active on at least one-bit reference. |
|  | OFF | No overrides applied. |

STATUS— indicates Energy Pack status.

| | | |
|--|-----------------|--|
|  | OFF | Energy Pack not connected. |
|  | Green, blinking | Energy Pack charging; not yet charged above the minimum operating voltage. |
|  | Red, ON | Energy Pack circuit fault. |

| | |
|--|---|
|  Red, blinking | Energy Pack near its end of life and should be replaced soon. |
|  Green, ON steady | Energy Pack is charged above its minimum operating voltage. |

SYSFLT – indicates presence of a fatal fault.

| | |
|---|---|
|  OFF | No fatal faults. |
|  Red, ON | CPU is in Stop/Faulted mode because a fatal fault has occurred. |

RDSD – indicates signal activity on the RDSD/COM2/USB port.

| | |
|---|-----------------------|
|  Green, blinking | COM2 port activity |
|  OFF | No COM2 port activity |

Hardware Installation

Initial Checks

Upon receiving your RX3i equipment, carefully inspect all shipping containers for damage. If any part of the system is damaged, notify the carrier immediately. The damaged shipping container should be saved as evidence for inspection by the carrier.

As the consignee, it is your responsibility to register a claim with the carrier for damage incurred during shipment. Emerson Automation Solutions will fully cooperate with you, however, should such action be necessary.

After unpacking the RX3i equipment, record all serial numbers. Serial numbers are required if you should need to contact Customer Care during the warranty period. All shipping containers and all packing material should be saved should it be necessary to transport or ship any part of the system.

Verify that all components of the system have been received and that they agree with your order. If the system received does not agree with your order, contact Customer Care.

Installation Location

This product is intended for use with the RX3i system. Its components are considered open equipment (having live electrical parts that may be accessible to users) and must be installed in an ultimate enclosure that is manufactured to provide safety. As a minimum, the enclosure shall provide a degree of protection against solid objects as small as 12 mm (e.g. fingers). This equates to a NEMA/UL Type 1 enclosure or an IEC60529 IP20 rating providing at least a pollution degree 2 environment. For details about

installing RX3i rack systems, refer to the *PACSystems RX3i System Manual*, GFK-2314.

If you need technical help, contact Technical Support. For phone numbers and email addresses, see the back cover of this Guide.

Installation in Hazardous Areas

The following information is for products bearing the UL marking for Hazardous Areas or ATEX marking for explosive atmospheres:

Class 1 Division 2 Groups ABCD

- This equipment is an open-type device and is meant to be installed in an enclosure suitable for the environment that is only accessible with the use of a tool.
- Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations, or nonhazardous locations only.



Warning – EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.



Warning – WHEN IN HAZARDOUS LOCATIONS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND



Warning – DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.



Warning – EXPLOSION HAZARD - USB PORT IS ONLY FOR USE IN NONHAZARDOUS LOCATIONS, DO NOT USE UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

ATEX Zone 2

This product must be mounted in an enclosure certified in accordance with EN60079-15 for use in Zone 2, Group IIC and rated IP54. The enclosure shall only be able to be opened with the use of a tool.

Module Installation

For initial startup and configuration of the CPE305, complete the following steps. For full details on CPE305 operation, refer to the *PACSystems RX3i and CPU Reference Manual*, GFK-2222.

1. Remove the pull-tab from the Real Time Clock (RTC) battery, located on the back of the CPE305.
2. Remove power from the RX3i rack and install the CPE305. The CPE305 may be installed in any slot in the RX3i Main rack, except the highest-numbered slot or slot 0.
3. Holding the module firmly, align the module with the correct slot and connector, then swing the module down until the module's connector engages the backplane's backplane connector. Visually inspect the module to be sure it is properly seated.
4. Insert the two provided M3x5 mm machine screws through the module's bottom bracket into

Figure 2: Module Installation



- threaded holes in the bottom of the backplate and screw them several turns using a #1 Phillips screwdriver. Tighten to 0.7 N-m (6 in-lbs.).
5. Mount the Energy Pack on the left side of the module in slot 0 of the rack (typically a power supply).
 - a. Engage the Energy Pack's mounting hooks (at the top) on the frame of the leftmost module.
 - b. Rotate the bottom of the Energy Pack into place, engaging the bottom hooks. The latch will snap into place.
 - c. Connect cable IC695CBL001 from the connector on the bottom of the Energy Pack to the corresponding connector on the bottom of CPE305.
 6. If required, connect the CPE305 to the Ethernet network.
 7. Apply power to the rack.

Note: When the Energy Pack is powered up for the first time, or is in a system that has been powered down long enough to completely discharge the Energy Pack, it may require a few seconds for it to charge to its operating level. The CPU's **STATUS** LED will blink green during this time.

Module Initial Startup

You Will Need:


- PACSystems RX3i CPU Firmware 8.00 or later.
- PAC Machine Edition™ configuration and programming software, version 8.0 or later.
- An IC693CBL316 serial or Ethernet cable for connecting the computer running the PAC Machine Edition programmer to the RX3i CPU.

Initial Configuration

1. Using PAC Machine Edition (PME) software, configure the CPE305 in an RX3i target.

Note: If you intend to use the module's embedded Ethernet interface, you will probably need to assign it a new IP address. To configure the embedded Ethernet interface in Machine Edition, expand the CPU slot to display the Ethernet daughterboard. The Settings tab for the embedded Ethernet module contains IP Address, Subnet Mask and Gateway IP Address (see the following diagram). Consult your network administrator for the proper values for these parameters.

Figure 3: Configuration of the Ethernet Port on CPE305

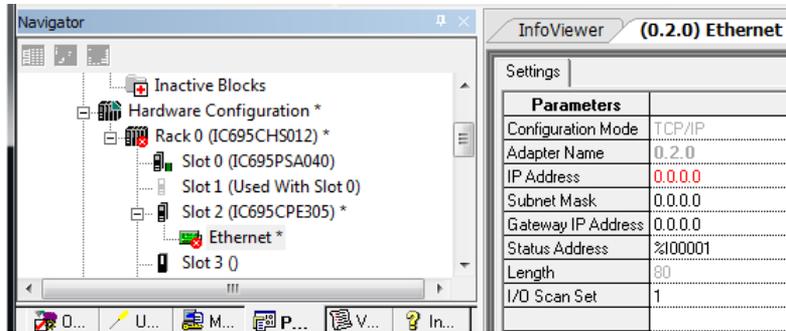

The screenshot displays the PAC Machine Edition software interface. On the left, the 'Navigator' pane shows a tree view of the hardware configuration. Under 'Hardware Configuration *', 'Rack 0 (IC695CHS012) *' is expanded to show 'Slot 0 (IC695PSA040)', 'Slot 1 (Used With Slot 0)', 'Slot 2 (IC695CPE305) *', and 'Slot 3 0'. The 'Ethernet *' module is highlighted under Slot 2. On the right, the 'InfoViewer' pane shows the '(0.2.0) Ethernet' settings. The 'Settings' tab is active, displaying a table of parameters.


| Parameters | |
|--------------------|---------|
| Configuration Mode | TCP/IP |
| Adapter Name | 0.2.0 |
| IP Address | 0.0.0.0 |
| Subnet Mask | 0.0.0.0 |
| Gateway IP Address | 0.0.0.0 |
| Status Address | %I00001 |
| Length | 80 |
| I/O Scan Set | 1 |

2. Go online with the target and download the configuration. You can use one of the following methods for the initial connection to the CPE305:
 - a. Using an IC693CBL316 cable, connect to the module's RJ-25 RS-232 serial port to the programmer computer. The computer must be equipped with an RS-232 serial port with a standard AT-style nine-pin male D-connector.
 - b. Connect to the module's Ethernet port, using the factory-loaded IP address, 192.168.0.100.

Note: This address is intended only for initial connection in order to complete the configuration. After the initial configuration download, must be changed before connecting to the Ethernet network. When you store a hardware configuration with a different IP address, the temporary IP address is lost; it is not restored by a Clear operation.

- c. Through the Ethernet connection of an ETM001 in the same rack with a known IP address configuration.

Figure 4: IP Address Visible in Inspector Pane

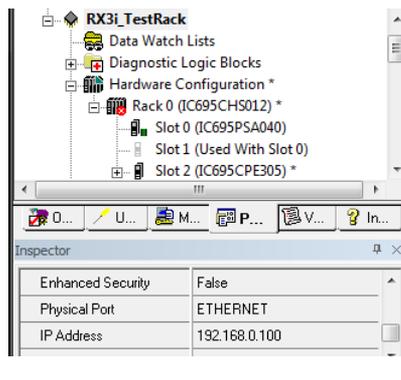

Additional Information

| | |
|--|----------|
| <i>PACSystems RX3i CPU Reference Manual</i> | GFK-2222 |
| <i>PACSystems RX3i CPU Programmer's Reference Manual</i> | GFK-2950 |
| <i>PACSystems RX3i System Manual</i> | GFK-2314 |
| <i>PACSystems RX3i IC695CPE305 CPU Important Product Information</i> | GFK-2714 |
| <i>PACSystems RX3i TCP/IP Ethernet Communications User Manual</i> | GFK-2224 |

User manuals, product updates and other information sources are available on the Support website.

General Contact Information

Please visit us for product support or updated product information:

Online Technical Support and GlobalCare:

<http://www.emerson.com/industrial-automation-controls/support>

Additional Information:

<http://www.emerson.com/industrial-automation-controls>

All Rights Reserved.

We reserve the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser.

©2019 Emerson Electric Co.

