


PACSystems™ RSTi-EP

ANALOG OUTPUT MODULES

(EP-4164 & EP-4264)

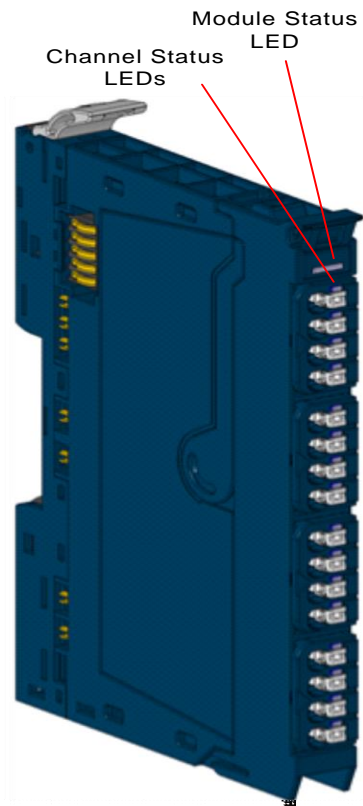

Warning Notes as Used in this Publication



Warning notices are used in this publication to emphasize that hazardous voltages, currents, temperatures, or other conditions that could cause personal injury exist in this equipment or may be associated with its use.

In situations where inattention could cause either personal injury or damage to equipment, a Warning notice is used.

Notes: Notes merely call attention to information that is especially significant to understanding and operating the equipment.

These instructions do not purport to cover all details or variations in equipment, nor to provide for every possible contingency to be met during installation, operation, and maintenance. The information is supplied for informational purposes only, and Emerson makes no warranty as to the accuracy of the information included herein. Changes, modifications, and/or improvements to equipment and specifications are made periodically and these changes may or may not be reflected herein. It is understood that Emerson may make changes, modifications, or improvements to the equipment referenced herein or to the document itself at any time. This document is intended for trained personnel familiar with the Emerson products referenced herein.

Emerson may have patents or pending patent applications covering subject matter in this document. The furnishing of this document does not provide any license whatsoever to any of these patents.

Emerson provides the following document and the information included therein as-is and without warranty of any kind, expressed or implied, including but not limited to any implied statutory warranty of merchantability or fitness for particular purpose.

Introduction

Emerson provides RSTi-EP analog output modules with up to 4 analog outputs at +/-10 V, +/-5 V, 0-10 V, 0-5 V, 2-10 V, 1-5 V, 0-20 mA or 4-20 mA. The resolution is 16 bit per channel. An output can be connected to each connector, the internal switching is carried out automatically. The output range is defined using parameterization. A status LED is assigned to each channel. The outputs are supplied with power from the output current path (IOUT).

The EP-4264 module provides individual channel diagnosis with channel related error messages.

Each module features a type plate, which includes identification information, the key technical specifications, and a block diagram. In addition, a QR code allows for direct online access to the associated documentation. The software for reading the QR code must support inverted QR codes.

Markers are available as accessories for labelling equipment. Each I/O module can be labelled using the markers to ensure clear identification when replacing individual modules or electronic units.

The RSTi-EP station is usually installed on a horizontally positioned DIN rail. Installation on vertically positioned DIN rails is also possible.

The outputs as well as the sense-lines of the AO modules must not be used as power outputs.

Modules should to be allowed to de-energize for a minimum 10 seconds after power down, prior to starting any maintenance activity.

Refer to the RSTi-EP Slice I/O User Manual (GFK-2958) for additional information.

Refer to the RSTi-EP Power Supply Reference Guide, a software utility available on PME V9.00, for detailed power-feed requirements.

Module Features

- Control up to four analog outputs
- Module diagnosis
- Spring style technology for ease of wiring
- DIN rail mounted
- Double-click installation for positive indication of correct installation
- Supports indirect firmware update through the network monitor
- Supports hot insertion and extraction

Ordering Information

Module	Description
EP-4164	Analog Output, 4 Channels Voltage/Current 16 Bits 2, 3, or 4-Wire
EP-4264	Analog Output, 4 Channels Voltage/Current 16 Bits with Diagnostics 2, 3, or 4-Wire

Specifications

Specification	EP-4164	EP-4264
System Data		
Data	Process, parameter, and diagnostic data depend on the network adapter used.	
Interface	RSTi-EP system bus	
System bus transfer rate	48 Mbps	
Potential isolation	Channel/system bus = yes Channel/channel = no	
Outputs		
Number	4	
Output levels	1. Voltage (0 – 5 V, ±5 V, 0 – 10 V, ±10 V, 1 – 5 V, 2 – 10 V) 2. Current (0 – 20 mA, 4 – 20 mA)	
Response time	1 ms for 4 channels	
Resolution	16 bits	
Accuracy	0.1 % FSR max., 0.05 % FSR typ.	
Temperature coefficient	20 ppm voltage / 31 ppm current measurement / K	
Max. error between Tmin and Tmax	±220 ppm FSR	
Monotony	Yes	
Crosstalk between the channels	±0.001 % FSR max.	
Repeat accuracy	< ±1 mV eff.	
Output ripple	max. 0.001 %	
Voltage load resistance	≥ 1 kΩ (at > 50°C (122 °F) max ambient temperature, total sensor current of 10 mA per channel but 25 mA per module)	
Current load resistance	≤ 600 Ω including field cable resistance	
Actuator connection	2-wire (current and voltage; automatic detection), 4-wire (voltage)	
Short-circuit-proof	Yes	
Module diagnosis	Yes	
Individual channel diagnosis	No	Yes
Substitute value	Yes	
Can be used with EP-19xx module	Yes	
Supply		
Supply voltage	20.4V – 28.8V	
Current consumption from system current path ISYS	8 mA	
Current consumption from output current path IOOUT	85 mA	
Operating temperature	-20°C to +60°C (-4 °F to +140 °F)	
Storage temperature	-40°C to +85°C (-40 °F to +185 °F)	
Air humidity (operation/transport)	5% to 95%, noncondensing as per IEC 61131-2	
Width	11.5 mm (0.45 in)	
Depth	76 mm (2.99 in)	
Height	120 mm (4.72 in)	
Weight	83 g (2.93 oz)	98 g (3.47 oz)

Current Demand for Analog Output Modules


Product	I _{sys}	I _{IN}	I _{OUT}	I _s	I _L
EP-4164	8 mA	--	85 mA	--	--
EP-4264	8 mA	--	85 mA	--	--
I _{sys}	Current consumption from the system current path				
I _{IN}	Power consumption from input current path				
I _{OUT}	Power consumption from output current path				
I _s	Current demand of the connected sensors				
I _L	Current demand of the connected actuators				
x	Must be included when calculating the power supply				

LED's

LED	EP-4164	EP-4264
Module Status	Green: Communication over the system bus Red: Module System Fault or Diagnostic Fault	Green: Communication over the system bus Red: Module System Fault or Diagnostic Fault
1.1	Red: Channel 0 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected	Red: Channel 0 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected
1.2	--	--
1.3	--	--
1.4	--	--
2.1	Red: Channel 1 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected	Red: Channel 1 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected
2.2	--	--
2.3	--	--
2.4	--	--
3.1	Red: Channel 2 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected	Red: Channel 2 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected
3.2	--	--
3.3	--	--
3.4	--	--
4.1	Red: Channel 3 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected	Red: Channel 3 at voltage output: overload short-circuit, at current output: shunt resistance too high or line break detected
4.2	--	--
4.3	--	--
4.4	--	--

Field Wiring

The connection frame can take up to four connectors, and four wires can be connected to each connector. Those four connectors are shown in the following figure. The *Spring style* technology allows either finely stranded or solid wire conductors with crimped wire-end ferrules or ultrasonically welded wires, each with a maximum cross-section of 1.5 mm² (16 guage), to be inserted easily through the opening in the clamping terminal without having to use tools. To insert fine stranded wires without wire-end ferrules, the pusher must be pressed in with a screwdriver and released to latch the wire.

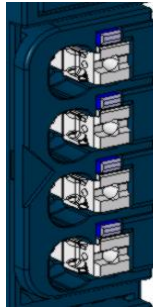

Connector Blocks

Connector Specifications:

- Conductor cross-section 0.14 to 1.5 mm² (26 – 16 guage)
- Maximum ampacity: 10 A
- 4-pole

The pushers are color-coded for the following connections:

- White Signal
- Blue GND
- Red 24 V DC
- Green Functional earth (FE)

The modules do not have a fused sensor/activator power supply. All cables to the connected sensors/actuators must be fused corresponding to their conductor cross-sections (as per Standard DIN EN 60204-1, section 12).

Refer to the *RSTi-EP Slice I/O User Manual* (GFK-2958) for additional information.



For technical assistance, go to <https://www.emerson.com/Industrial-Automation-Controls/support>.

Installation in Hazardous Areas


⚠ WARNING

- EQUIPMENT LABELED WITH REFERENCE TO CLASS I, GROUPS A, B, C & D, DIV. 2 HAZARDOUS AREAS IS SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C, D OR NON-HAZARDOUS AREAS ONLY
- WARNING-EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2;
- WARNING-EXPLOSION HAZARD - WHEN IN HAZARDOUS AREAS, TURN OFF POWER BEFORE REPLACING OR WIRING MODULES; AND
- WARNING-EXPLOSION HAZARD - DO NOT CONNECT OR DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NONHAZARDOUS.


ATEX Marking

-  II 3 G Ex nA IIC T4 Gc
-  Ta: -20°C to +60°C (-4° F to +140 °F)


Connection Diagrams

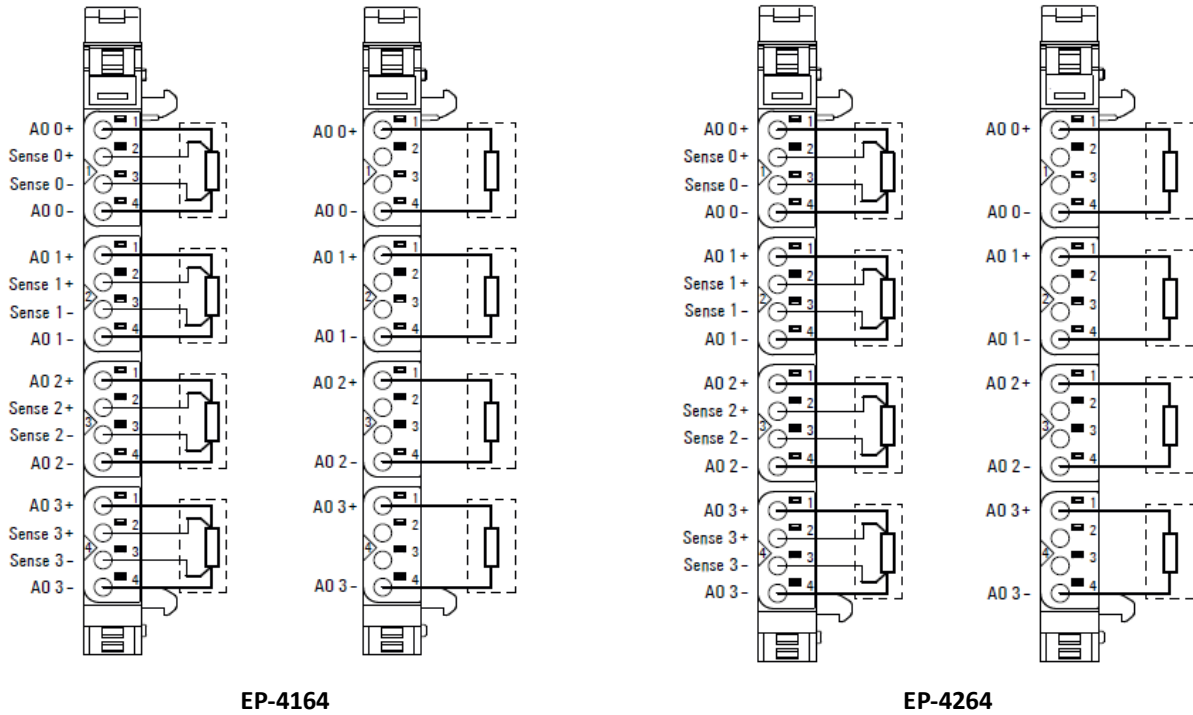

Connection Block Diagrams

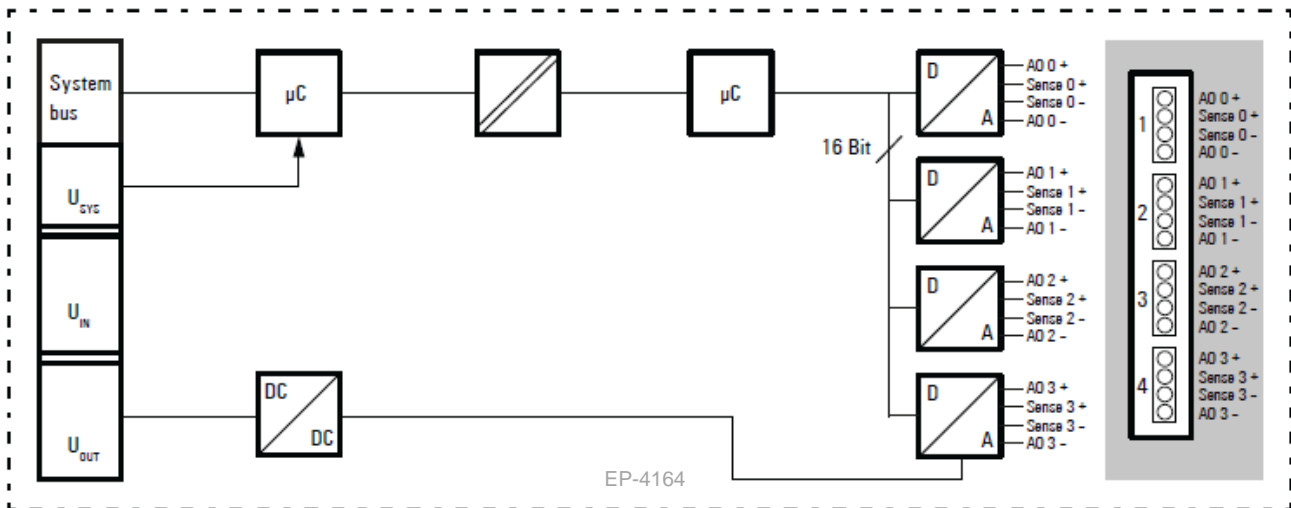

EP-4164

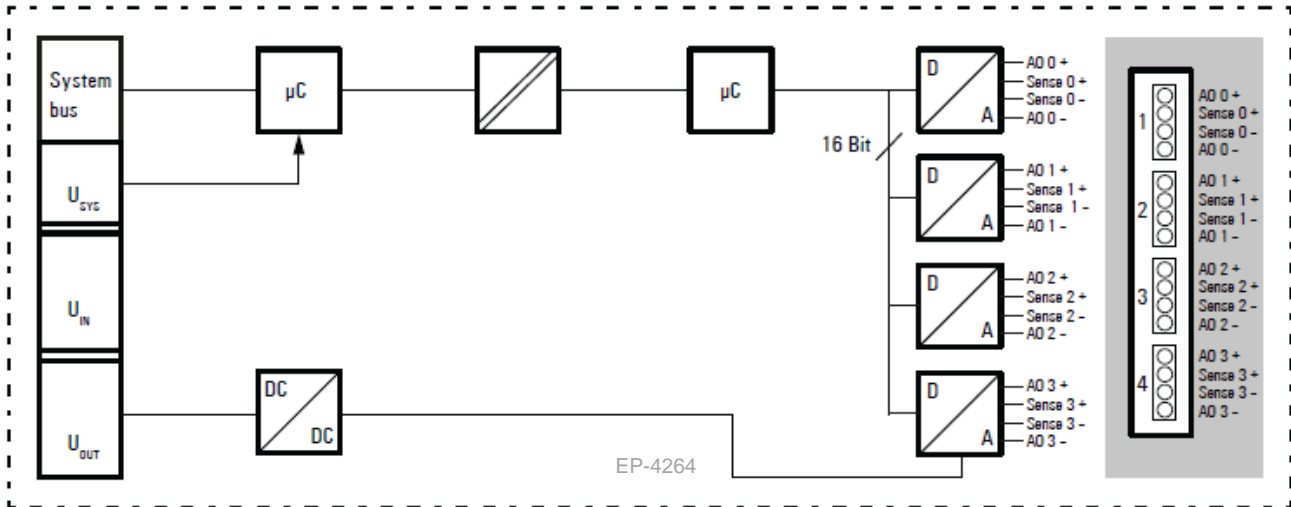

EP-4264

Release History

Catalog Number	Firmware Version	Date	Comments
EP-4164-DC, EP-4264-DC	01.02.01	Sep-2019	Following Emerson’s acquisition of this product, changes have been made to apply appropriate branding and registration of the product with required certification agencies. No changes to material, process, form, fit or functionality.
EP-4164-CC, EP-4264-CC	01.02.01	Sep-2018	Minor Firmware updates – No change to functionality
EP-4164-CB, EP-4264-CB	N/A	Apr-2018	These product revisions are updated to be usable in Marine application and pass marine certification tests. Refer GFK-2958 for certification details.
EP-4164, EP-4264	01.01	Dec-2015	Documentation update only
EP-4164, EP-4264	01.01	Nov-2015	Initial Release

Important Product Information for this Release

Updates

Not Applicable

Functional Compatibility

Not Applicable

Problems Resolved by this Release

None - Documentation update only

New Features and Enhancements

None - Documentation update only

Known Restrictions and Open Issues

None

Operational Notes

None

Product Documentation

RSTi-EP Slice I/O Module User Manual (GFK-2958)

RSTi-EP Slice I/O Functional Safety Module User Manual (GFK-2956)

Technical Support & Contact Information:

Home link: <http://www.Emerson.com/Industrial-Automation-Controls>

Knowledge Base: <https://www.emerson.com/Industrial-Automation-Controls/support>

Note: If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser.

© 2019 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.

